



Illustrated Parts List

Model Series

083100

TYPE NUMBERS
0003 through 2112.

TABLE OF CONTENTS

Air Cleaner	5
Armature	9
Blower Housing	8
Camshaft	2
Carburetor	6
Controls	9
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electrical System	9
Exhaust System	5
Flywheel	8
Fuel Supply	7
Gasket Sets	3
Gear Reduction	4
Governor Spring	9
Ignition	9
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	8
Spark Plug	9
Warning Label	2


Not for reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

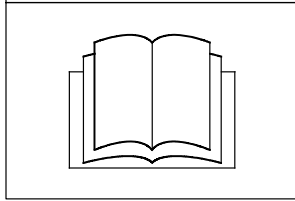

1036 EMISSIONS LABEL

1319 WARNING LABEL






WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.




1319A WARNING LABEL




REQUIRED when replacing parts with warning labels affixed.

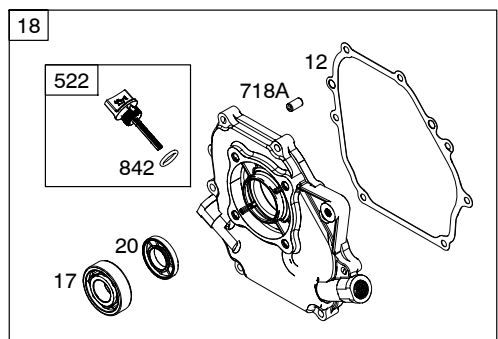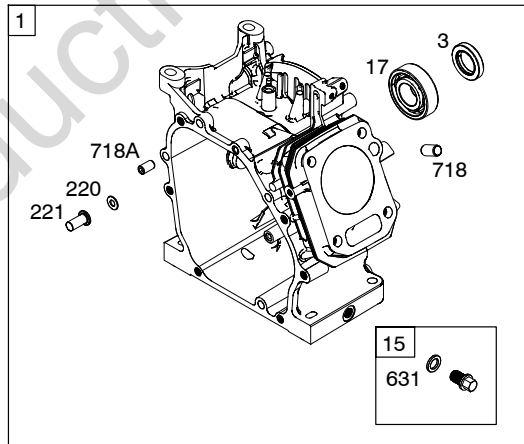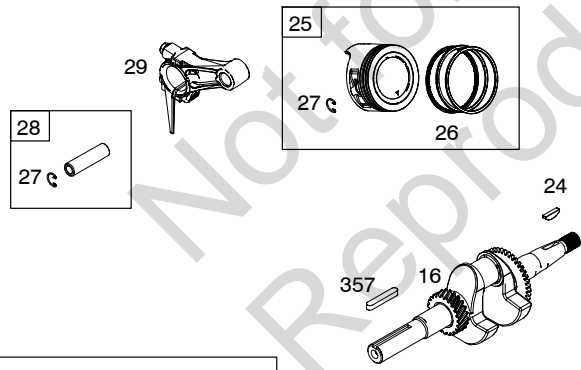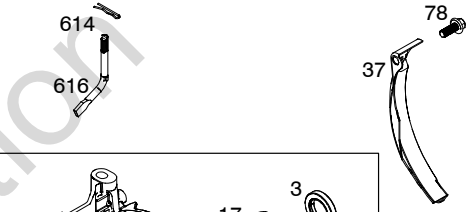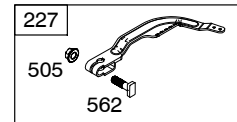












Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

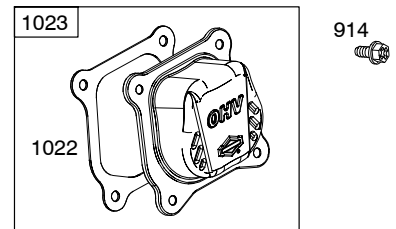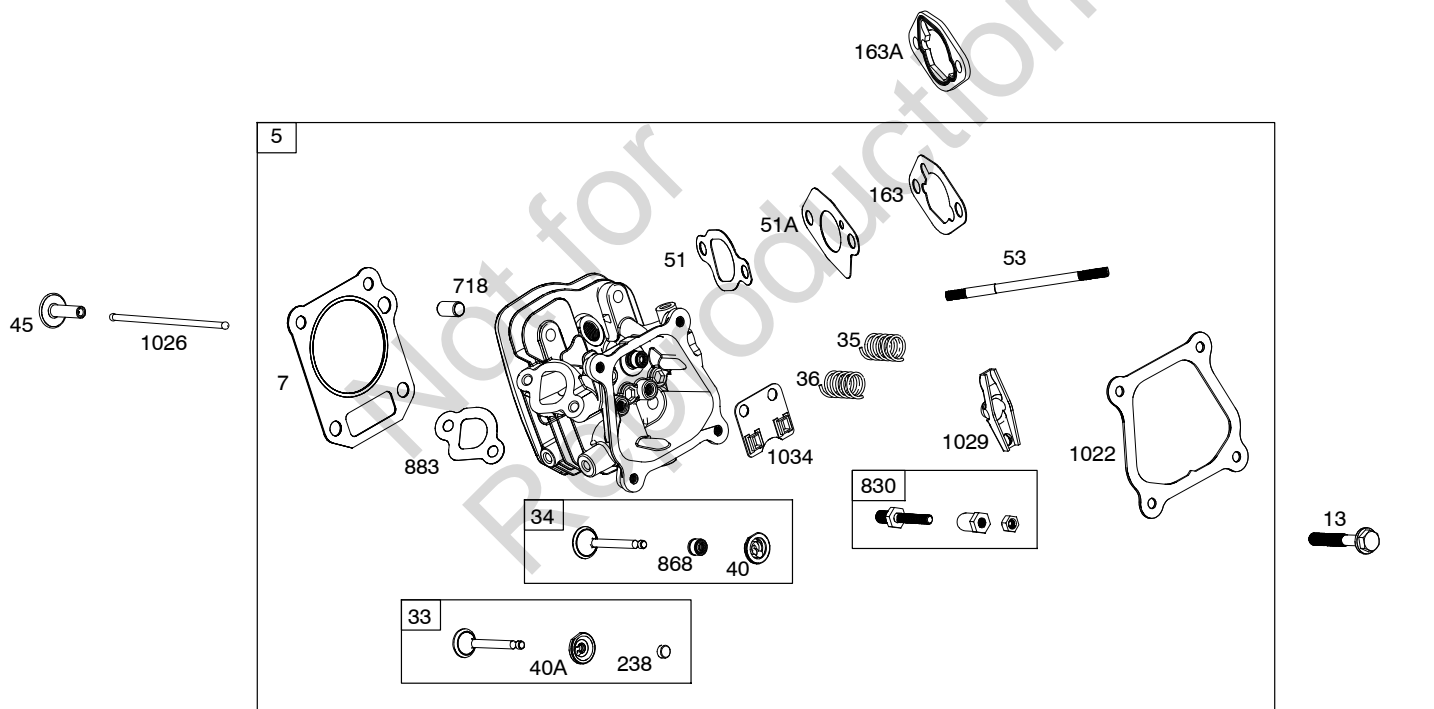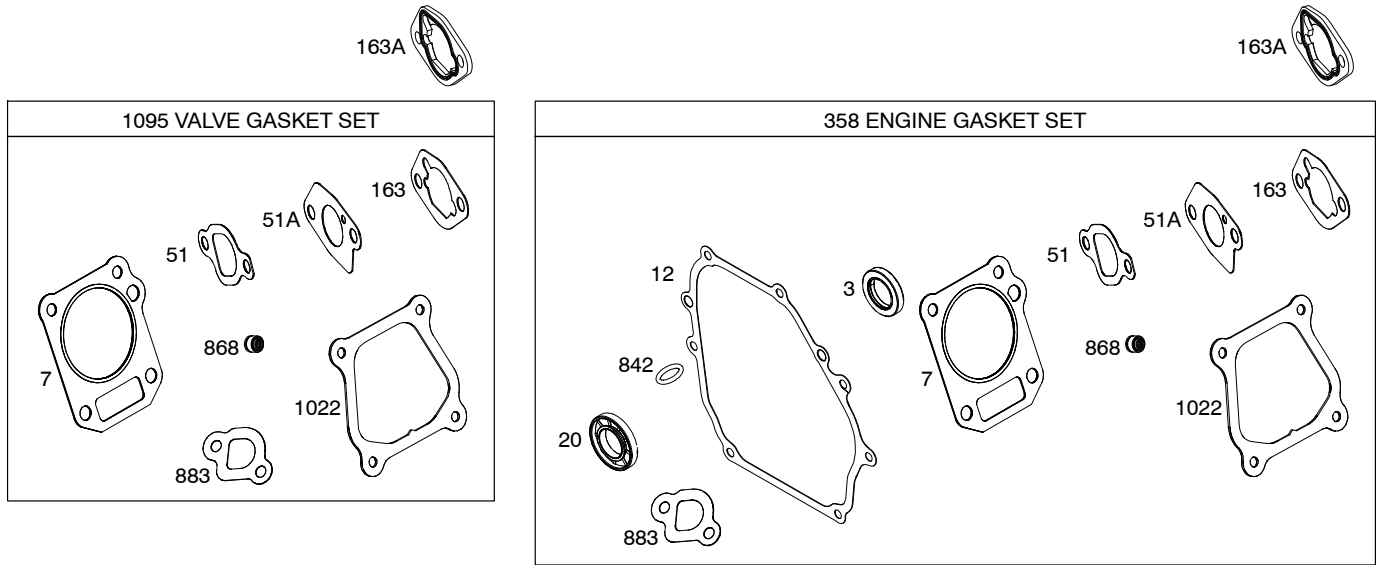


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

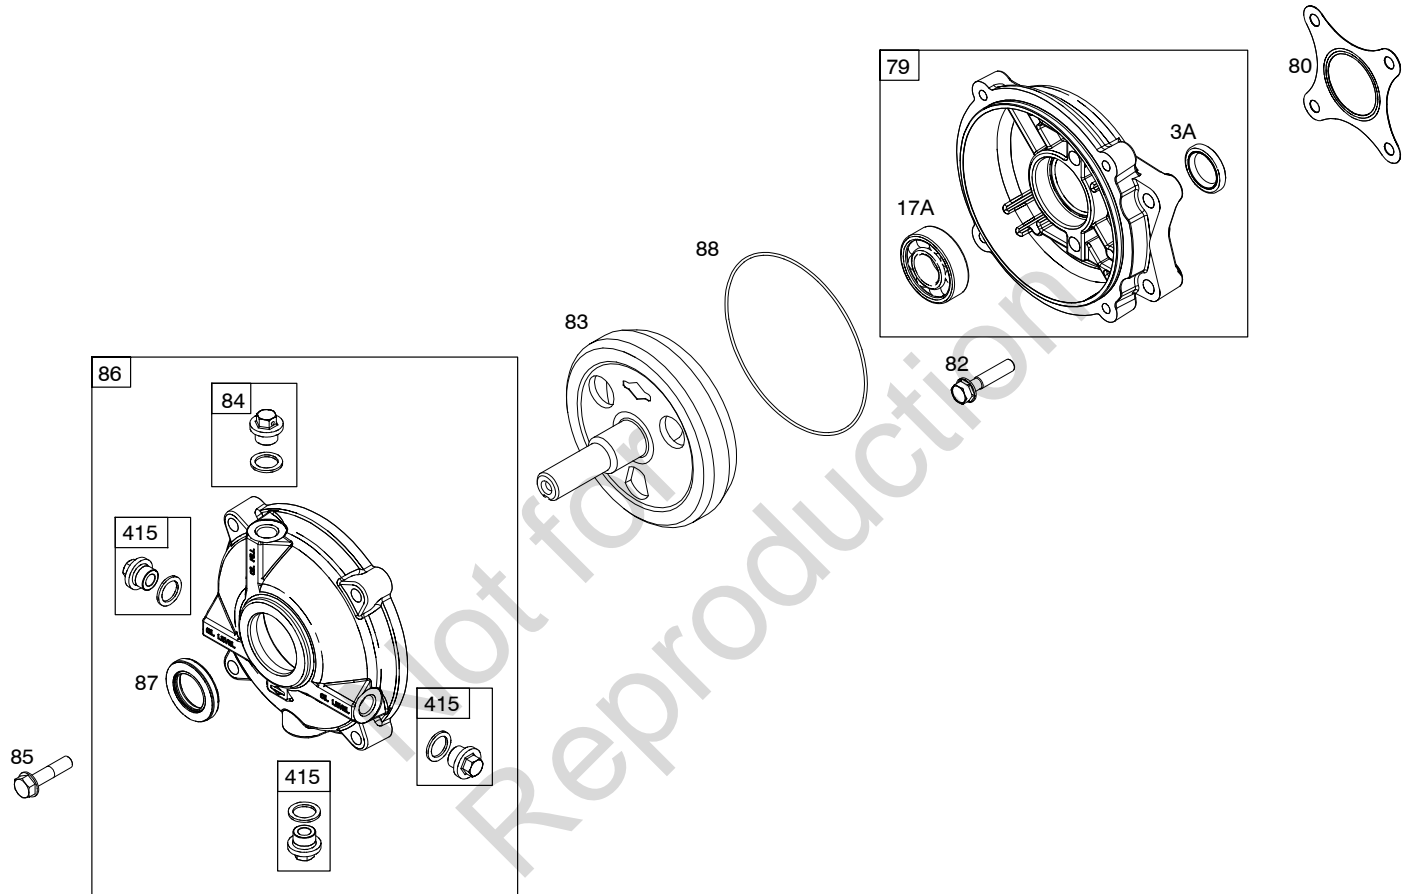


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

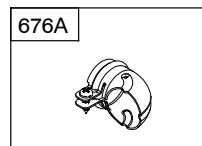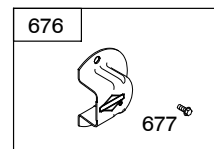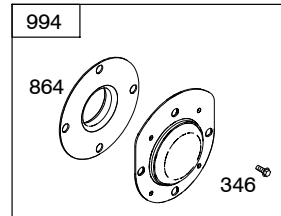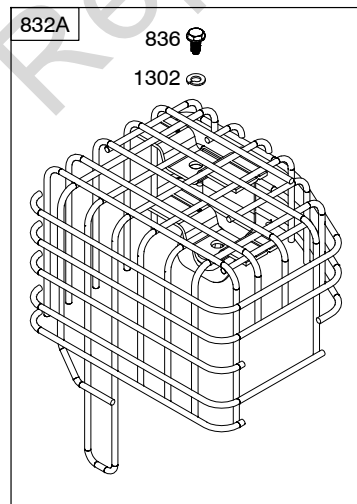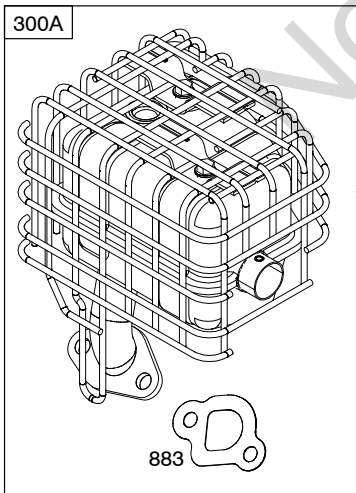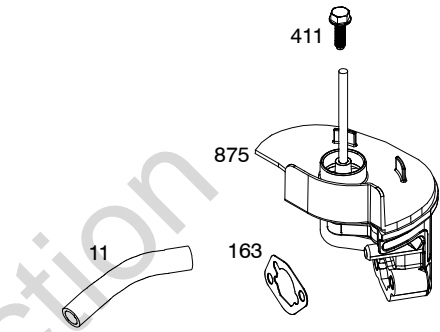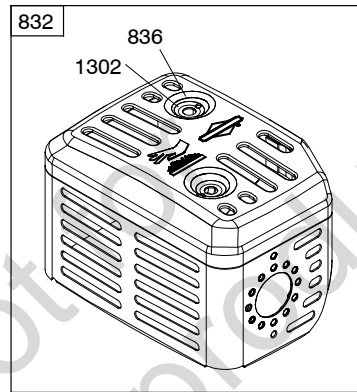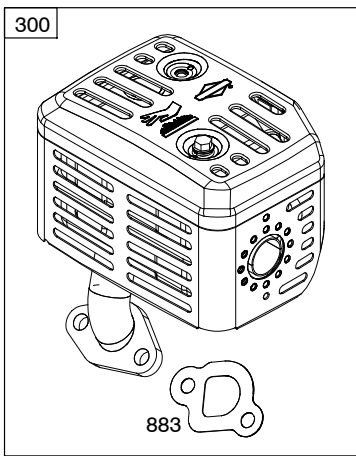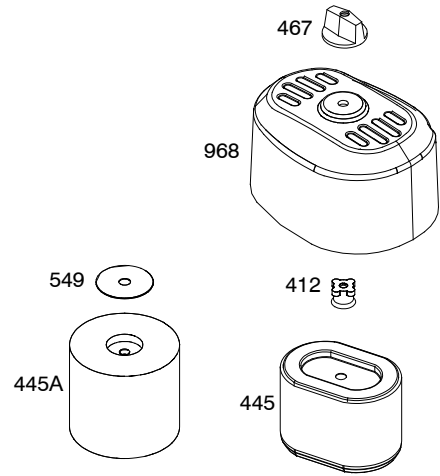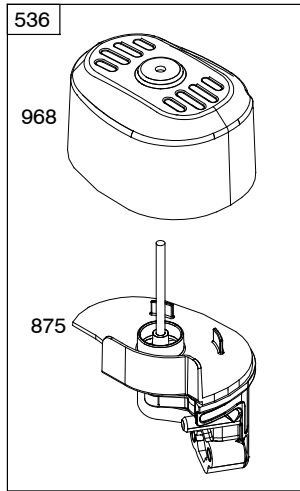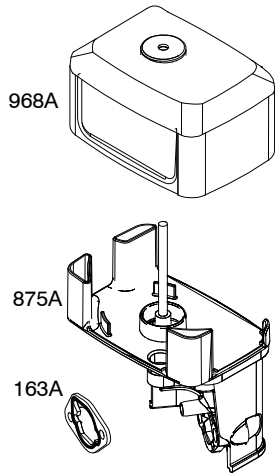



Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

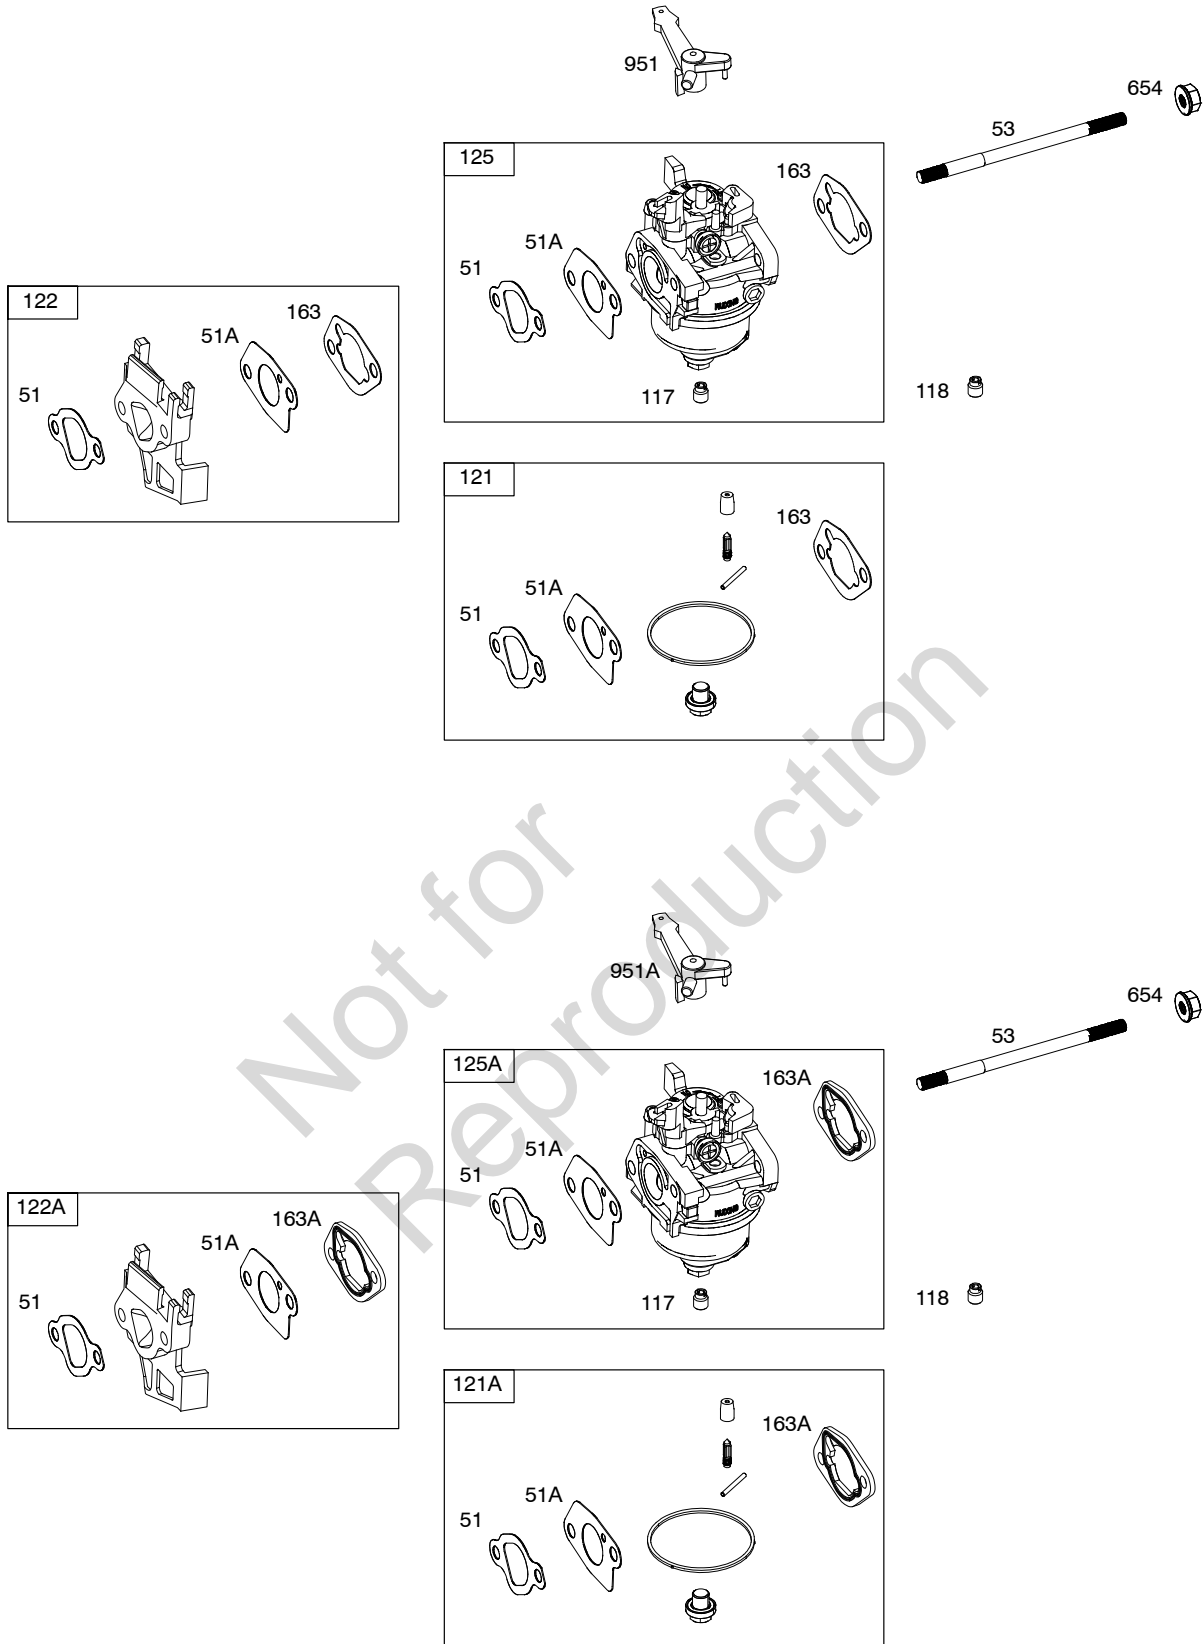


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

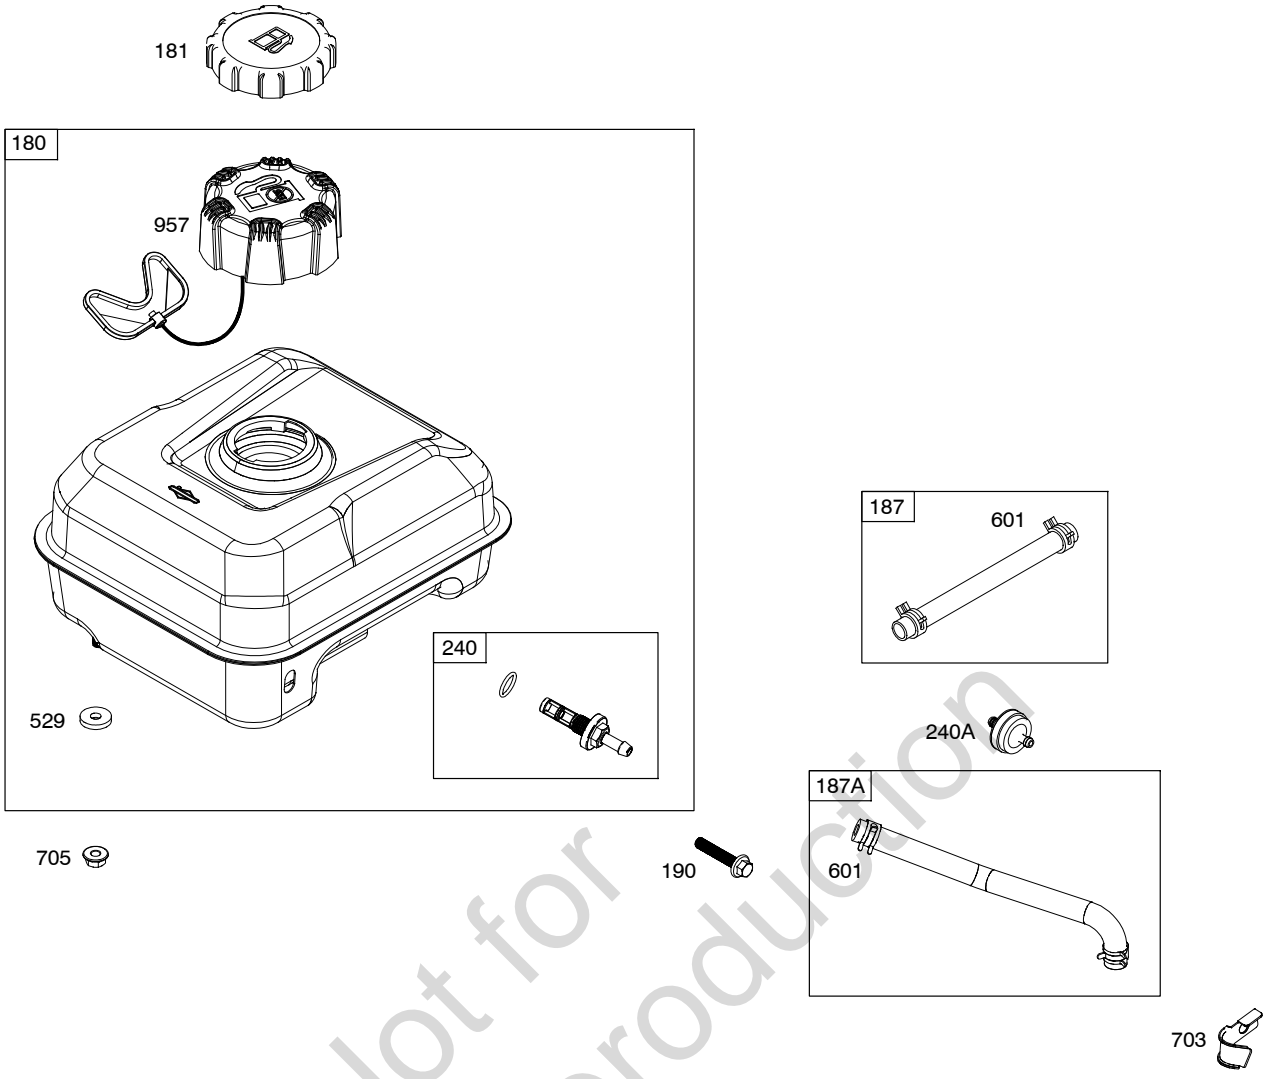

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

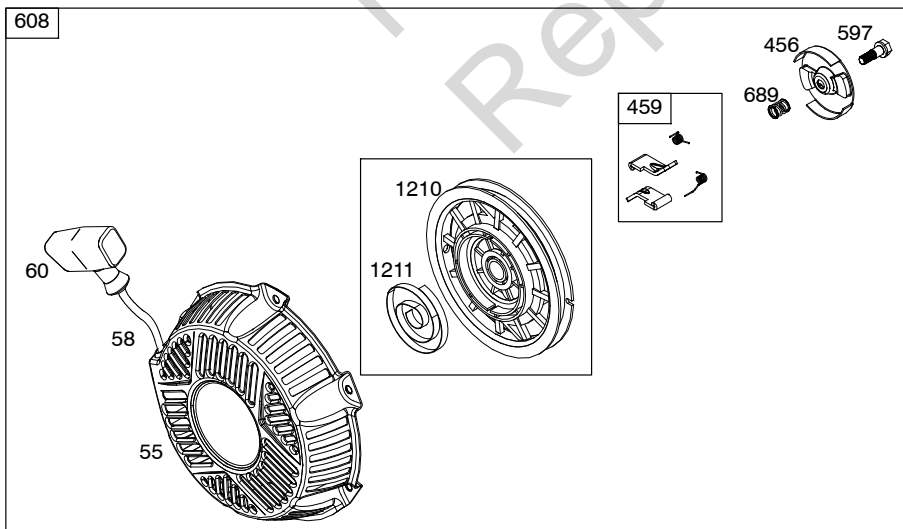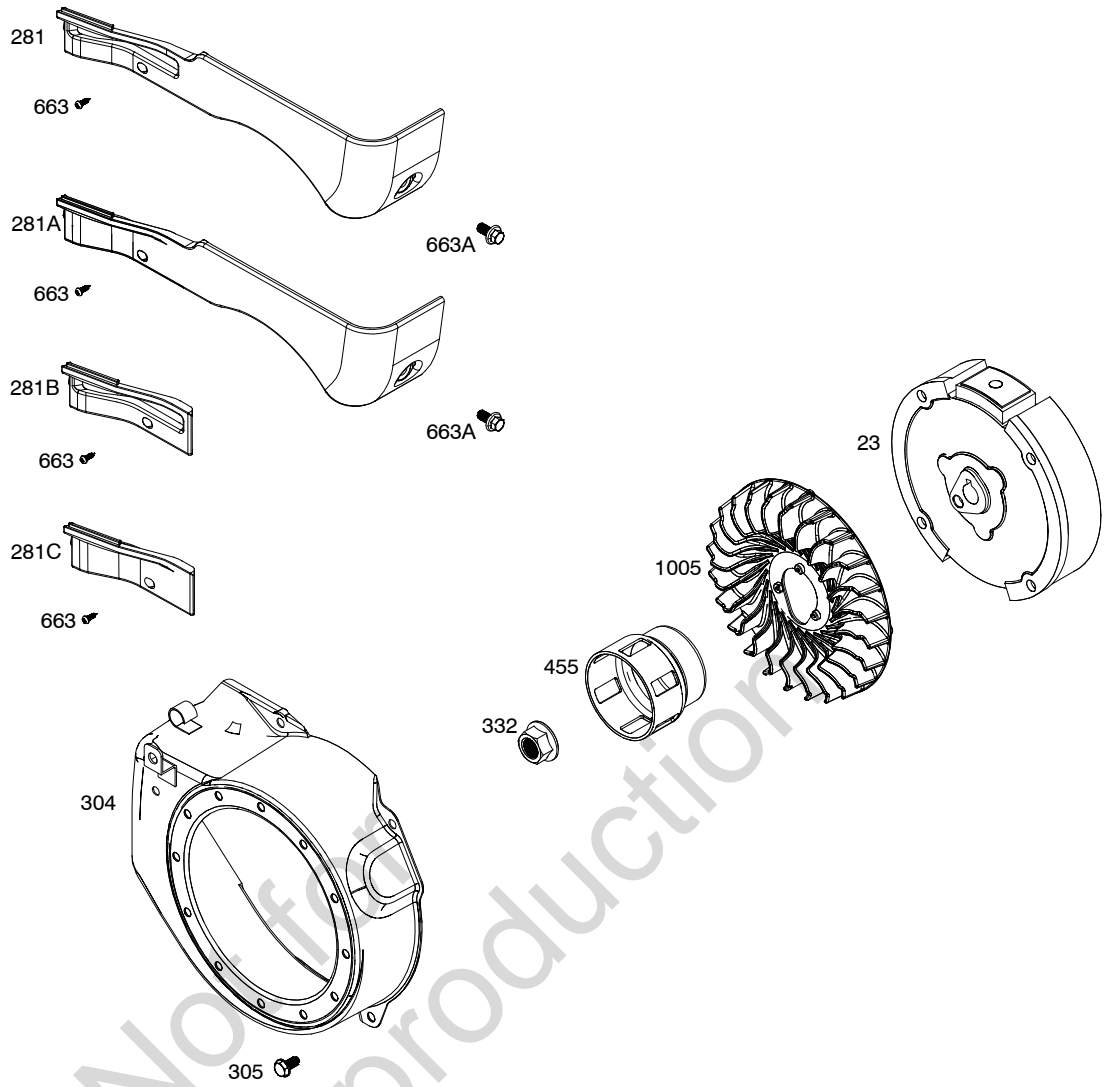

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

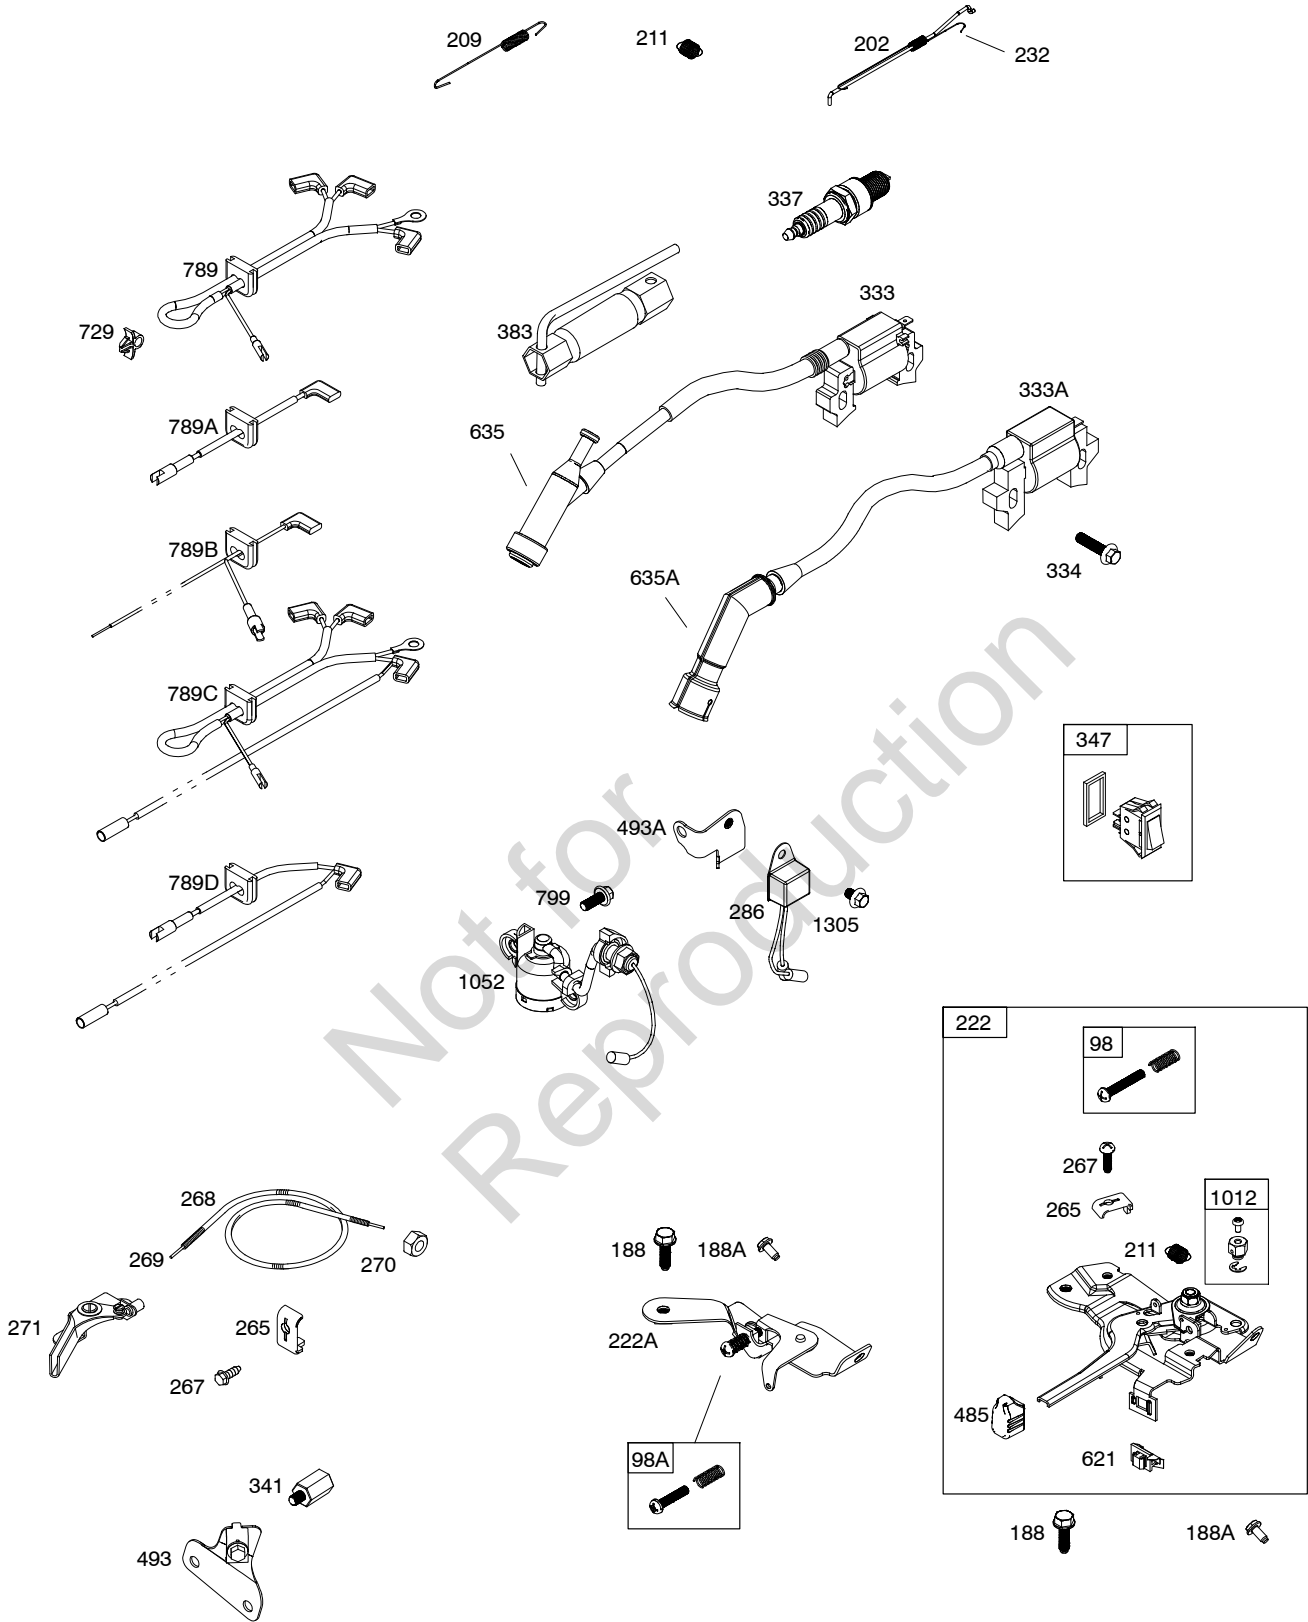

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

083100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	797217	Cylinder Assembly ----- Note ----- 798630 Cylinder Assembly Used on Type No(s). 0004, 0005, 0007, 0170, 0176, 0177, 0202, 0203, 0204, 0211, 0229, 0244, 0245, 1170, 1202, 1204, 1211, 2034.			797709 Crankshaft Used on Type No(s). 0040, 0140, 0164, 0172, 0179, 0181, 1040, 1140, 1164, 1172, 1179, 1181. 797905 Crankshaft Used on Type No(s). 0123, 0144, 0224, 1123, 1144. 797906 Crankshaft Used on Type No(s). 0160, 0209, 0210, 0212, 0236, 0237, 0246, 1160, 1209, 1212. 798311 Crankshaft Used on Type No(s). 0166, 0169, 0206, 0227, 0239, 0247, 1166, 1169, 1206. 799225 Crankshaft Used on Type No(s). 0176, 0177, 0202, 0203, 0229, 1202. 590458 Crankshaft Used on Type No(s). 0241, 0918, 1918.			20 797330 Seal-Oil (PTO Side) 22 797656 Screw (Crankcase Cover/Sump) 23 797287 Flywheel 24 797286 Key-Flywheel 25 797218 Piston Assembly (Standard) ----- Note ----- 797270 Piston Assembly (.010" Oversize) 797271 Piston Assembly (.020" Oversize) 26 797220 Ring Set (Standard) ----- Note ----- 797272 Ring Set (.010" Oversize) 797273 Ring Set (.020" Oversize) 27 797234 Lock-Piston Pin 28 797219 Pin-Piston 29 797221 Rod-Connecting 33 797199 Valve-Exhaust 34 797198 Valve-Intake 35 797203 Spring-Valve (Intake) 36 797203 Spring-Valve (Exhaust)
3	797329	Seal-Oil (Magneto Side)						
3A	299819s	Seal-Oil (Magneto Side) (Gear Reduction Case)						
5	591478	Head-Cylinder						
7	797212	Gasket-Cylinder Head						
11	797262	Tube-Breather						
12	797211	Gasket-Crankcase						
13	797213	Screw (Standard)						
15	797215	Plug-Oil Drain (Cylinder Head)						
16	797529	Crankshaft ----- Note ----- 797689 Crankshaft Used on Type No(s). 0049, 0127, 0141, 0142, 0151, 0157, 0174, 0204, 0213, 0225, 1049, 1127, 1141, 1142, 1157, 1174, 1204, 1213. 797690 Crankshaft Used on Type No(s). 0004, 0038, 0136, 0149, 0156, 0167, 0170, 1038, 1136, 1149, 1156, 1170. 797695 Crankshaft Used on Type No(s). 0007, 0036, 0128, 0132, 0155, 0165, 0178, 0205, 0211, 0226, 0243, 1036, 1128, 1132, 1155, 1165, 1205, 1211.	17 797328 17A 99158	Bearing-Ball Bearing-Ball (Gear Reduction Case)	18 797350	Cover-Crankcase ----- Note ----- 797324 Cover- Crankcase Used on Type No(s). 0118, 0160, 0166, 0169, 0176, 0177, 0206, 0209, 0210, 0212, 0227, 0236, 0237, 0239, 0246, 0247, 1118, 1160, 1166, 1169, 1199, 1206, 1209, 1212.		

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
37	591023	Guard-Flywheel ----- Note ----- 797323 Guard-Flywheel Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0918.	60	691915	Grip-Starter Rope	121	592424	Kit-Carburetor Overhaul (Used After Code Date 12050600)
			65	797654	Screw (Rewind Starter)			----- Note ----- 591017 Kit-Carburetor (Used Before Code Date 12050700)
			78	798975	Screw (Flywheel Guard)	121A	799661	Kit-Carburetor Overhaul Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0918.
			79	792746	Case-Gear Reduction			
			80	792755	Gasket-Gear Case			
			82	792753	Screw (Gear Reduction Case)			
			83	792756	Shaft-Auxiliary Drive			
			84	792759	Plug-Breather			
			85	690711	Screw (Gear Cover to Gear Reduction Case)			
			86	792748	Cover-Gear			
			87	792752	Seal-Gear Reduction			
			88	792760	Gasket-Gear Reduction Cover			
			98	797333	Kit-Idle Speed (High Speed Adjustment)			
			98A	797697	Kit-Idle Speed (High Speed Adjustment)			
			117	592234	Jet-Main (Standard) (Used After Code Date 12050600)			
					----- Note ----- 590449 Jet-Main (Standard) (Used Before Code Date 12050700)			
			118	593451	Jet-Main (High Altitude) (Used After Code Date 12050600)			
40	797204	Retainer-Valve (Intake)			----- Note ----- 799173 Jet-Main (High Altitude) (Used Before Code Date 12050700)	122	591014	Spacer-Carburetor
40A	797205	Retainer-Valve (Exhaust)						
45	797208	Tappet-Valve						
46	797197	Camshaft						
51	797192	Gasket-Intake						
51A	797280	Gasket-Intake						
53	797278	Stud (Carburetor)						
55	799667	Housing-Rewind Starter						
58	691921	Rope-Starter (Cut To Required Length) ----- Note ----- 791362 Rope-Starter (Cut To Required Length) Used on Type No(s). 0118, 0158, 0214, 0222, 1118, 1158, 1214.						

083100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
122A	797279	Spacer-Carburetor Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0214, 0918.	125A	797283	Carburetor Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0918.	163	591013	Gasket-Air Cleaner
						163A	797282	Gasket-Air Cleaner Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0214, 0918.
125	592236	Carburetor ----- Note ----- 591469 Carburetor Used on Type No(s). 1214.			----- Note ----- 591468 Carburetor Used on Type No(s). 0214.	180	591025	Tank-Fuel (Metal)
						181	794641	Cap-Fuel Tank (Metal)
						187	791766	Line-Fuel (Cut To Required Length)
						187A	797274	Line-Fuel (Formed Hose) ----- Note ----- 797694 Line-Fuel (Formed Hose) Used on Type No(s). 0118, 0136, 0170, 0241, 1118, 1136, 1170.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
188	797686	Screw (Control Bracket)		798629	Spring-Governor	222A	797692	Bracket-Control Used on Type No(s). 0004, 0038, 0136, 0149, 0168, 0169, 0170, 0176, 0177, 0199, 0202, 0203, 0229, 0241, 0245, 1038, 1136, 1149, 1168, 1169, 1170, 1199, 1202.			
188A	798618	Screw (Control Bracket)			Used on Type No(s). 0038, 0176, 0202, 0241, 1038, 1202.						
190	797657	Screw (Fuel Tank)		798977	Spring-Governor						
202	797233	Link-Mechanical Governor			Used on Type No(s). 0169, 0199, 1169, 1199.						
209	797236	Spring-Governor ----- Note ----- 797691 Spring-Governor Used on Type No(s). 0007, 0009, 0012, 0036, 0126, 0128, 0132, 0133, 0139, 0146, 0155, 0156, 0160, 0165, 0178, 0189, 0207, 0209, 0210, 0212, 0226, 0236, 0237, 0242, 0243, 0246, 1036, 1126, 1128, 1132, 1133, 1139, 1146, 1155, 1156, 1160, 1165, 1189, 1207, 1209, 1212. 798626 Spring-Governor Used on Type No(s). 0114, 0121, 0123, 0129, 0138, 0148, 0152, 0162, 0179, 0216, 0217, 0221, 1114, 1121, 1123, 1129, 1138, 1148, 1152, 1162, 1179, 1217. 798627 Spring-Governor Used on Type No(s). 0004, 0136, 0149, 0170, 0177, 0203, 0229, 1136, 1149, 1170. 798628 Spring-Governor Used on Type No(s). 0168, 0245, 1168.	211	797337	Spring-Governed Idle	227	797231	Lever-Governor Control			
			220	797223	Washer (Governor Gear)	232	797232	Spring-Governor Link			
			221	797224	Cup-Governor	238	797206	Cap-Valve			
			222	591024	Bracket-Control ----- Note ----- 797331 Bracket-Control Used on Type No(s). 0035, 0036, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0171, 0172, 0173, 0174, 0175, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0214, 0918.	240	797346	Bracket-Control	240A	394358s	Filter-Fuel
						265	691024	Clamp-Casing			
						267	699492	Screw (Casing Clamp)			
						268	691025	Casing-Control Wire (Cut To Required Length)			
						269	691026	Wire-Control (Cut To Required Length)			
						270	691027	Nut (Control Wire Casing)			
						271	691028	Lever-Control			
						281	591048	Panel-Control			
						281A	591474	Panel-Control Used on Type No(s). 0004, 0229, 0245, 1038, 1149, 1168, 1169, 1199, 1202.			
						281B	591456	Panel-Control Used on Type No(s). 1118, 1214.			
						281C	591475	Panel-Control Used on Type No(s). 0241, 1136, 1170.			

083100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
286	797772	Module-Oil Sensor	304	591030	Housing-Blower	305	798618	Screw (Blower Housing)
300	591028	Muffler			----- Note -----	306	797322	Shield-Cylinder
		----- Note -----			591031 Housing-Blower	307	798618	Screw (Cylinder Shield)
		797268 Muffler			Used on Type No(s).	332	797285	Nut (Flywheel)
		Used on Type No(s).			0003, 0034, 0214,	333	797343	Armature-Magneto
		0035, 0036, 0038,			0003, 0034, 0214,	333A	797684	Armature-Magneto
		0040, 0049, 0110,			0216, 0217, 0218,			Used on Type No(s).
		0117, 0120, 0123,			0221, 0222, 0224,			0003, 0004, 0009,
		0126, 0127, 0130,			0241, 0245, 1118,			0011, 0012, 0034,
		0132, 0133, 0134,			1119, 1121, 1129,			0035, 0036, 0038,
		0136, 0139, 0140,			1131, 1138, 1142,			0040, 0049, 0111,
		0142, 0144, 0146,			1143, 1148, 1152,			0112, 0114, 0115,
		0151, 0154, 0155,			1153, 1158, 1159,			0119, 0121, 0122,
		0156, 0157, 0160,			1161, 1162, 1168,			0128, 0129, 0131,
		0162, 0166, 0169,			1214, 1217, 1918.			0135, 0138, 0141,
		0170, 0171, 0172,			591032 Housing-Blower			0143, 0148, 0149,
		0174, 0175, 0178,			Used on Type No(s).			0152, 0153, 0158,
		0179, 0181, 0186,			0035, 0036, 0038,			0159, 0161, 0164,
		0187, 0189, 0199,			0040, 0049, 0110,			0165, 0167, 0168,
		0204, 0206, 0207,			0111, 0112, 0114,			0169, 0171, 0172,
		0209, 0210, 0212,			0115, 0117, 0120,			0173, 0174, 0176,
		0213, 0229, 0233,			0123, 0126, 0127,			0177, 0182, 0186,
		0918.			0128, 0130, 0132,			0187, 0199, 0202,
300A	797687	Muffler			0133, 0134, 0135,			0203, 0205, 0216,
					0136, 0139, 0140,			0217, 0218, 0221,
					0141, 0144, 0146,			0222, 0223, 0224,
					0149, 0151, 0154,			0229, 0231, 0233,
					0155, 0156, 0157,			0240, 0241, 0242,
					0160, 0164, 0165,			0243, 0244, 0245,
					0166, 0167, 0169,			1035, 1036, 1038,
					0170, 0171, 0172,			1040, 1049, 1111,
					0173, 0174, 0175,			1112, 1114, 1115,
					0178, 0179, 0181,			1119, 1121, 1128,
					0182, 0183, 0186,			1129, 1131, 1135,
					0187, 0189, 0199,			1138, 1141, 1143,
					0202, 0203, 0204,			1148, 1149, 1152,
					0205, 0206, 0207,			1153, 1158, 1159,
					0209, 0210, 0211,			1161, 1164, 1165,
					0212, 0213.			1168, 1169, 1171,
					797698 Housing-Blower			1172, 1173, 1174,
					Used on Type No(s).			1182, 1186, 1187,
					0118, 0119, 0121,			1199, 1202, 1205,
					0122, 0129, 0131,			1217, 2111, 2112.
					0138, 0142, 0143,	334	797655	Screw (Magneto Armature)
					0148, 0152, 0153,	337	798615	Plug-Spark
					0158, 0159, 0161,	341	797699	Stud (Mounting Bracket) (Remote Choke)
					0162, 0168, 0176,			
					0177, 0918.	346	699203	Screw (Spark Arrester)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
347	797340	Switch-Rocker	635	797658	Boot-Spark Plug	718A	797326	Pin-Locating (Crankcase Cover)
357	798305	Key-Drive Pulley	635A	797685	Boot-Spark Plug	729	797341	Clip-Wire
		----- Note -----			Used on Type No(s).	789	797344	Harness-Wiring
		590719 Key-Drive			0003, 0004, 0009,	789A	797701	Harness-Wiring
		Pulley			0011, 0012, 0034,			Used on Type No(s).
		Used on Type No(s).			0035, 0036, 0038,			0118, 0142, 0168,
		0166, 0247, 1166.			0040, 0049, 0111,			0214, 0241, 1118,
358	591460	Gasket Set-Engine			0112, 0114, 0115,			1142, 1168, 1214.
383	19576s	Wrench-Spark Plug			0119, 0121, 0122,			
411	797686	Screw			0128, 0129, 0131,	789B	797706	Harness-Wiring
		(Air Cleaner Base to			0135, 0138, 0141,			Used on Type No(s).
		Carburetor)			0143, 0148, 0149,			0003, 0034, 0119,
412	797261	Nut			0152, 0153, 0158,			0121, 0122, 0129,
		(Air Cleaner Cover)			0159, 0161, 0164,			0131, 0138, 0143,
415	792749	Plug			0165, 0167, 0168,			0148, 0152, 0153,
		(Gear Cover)			0169, 0171, 0172,			0158, 0159, 0161,
445	796970	Filter-Air Cleaner			0173, 0174, 0176,			0162, 0216, 0217,
		Cartridge			0177, 0182, 0186,			0218, 0221, 0222,
445A	797258	Filter-Air Cleaner			0187, 0199, 0202,			0224, 0918, 1119,
		Cartridge			0203, 0205, 0216,			1121, 1129, 1131,
455	797277	Cup-Flywheel			0217, 0218, 0221,			1138, 1143, 1148,
456	799666	Plate-Pawl Friction			0222, 0223, 0224,			1152, 1153, 1158,
459	799668	Pawl-Ratchet			0229, 0231, 0233,			1159, 1161, 1162,
467	691985	Knob-Air Cleaner			0240, 0241, 0242,			1217, 1918.
485	797339	Knob-Control			0243, 0244, 0245,	789C	798633	Harness-Wiring
493	797700	Bracket-Mounting			1035, 1036, 1038,			Used on Type No(s).
		(Remote Choke)			1040, 1049, 1111,			0004, 0005, 0007,
493A	798632	Bracket-Mounting			1112, 1114, 1115,			0170, 0204, 0211,
		(Oil Sensor Module)			1119, 1121, 1128,			0229, 0244, 1170,
505	690939	Nut			1129, 1131, 1135,			1202, 1204, 1211,
		(Governor Control			1138, 1141, 1143,			2034.
		Lever)			1148, 1149, 1152,	789D	799224	Harness-Wiring
522	797325	Plug-Dipstick/Fill			1153, 1158, 1159,			Used on Type No(s).
529	797345	Grommet			1161, 1164, 1165,			0176, 0177, 0245.
		(Fuel Tank)			1168, 1169, 1171,	799	797774	Screw
536	591034	Cleaner-Air			1172, 1173, 1174,			(Oil Sensor)
549	797264	Washer			1182, 1186, 1187,			
		(Air Cleaner)			1199, 1202, 1205,			
562	797230	Bolt			1217, 2111, 2112.			
		(Governor-Control						
		Lever)	654	690939	Nut			
597	799665	Screw			(Carburetor)			
		(Pawl Friction Plate)	663	799846	Screw			
601	791850	Clamp-Hose			(Control Panel)			
608	797276	Starter-Rewind	663A	591049	Screw			
		----- Note -----			(Control Panel)			
		797354 Starter-	676	797352	Deflector-Muffler			
		Rewind	676A	797702	Deflector-Muffler			
		Used on Type No(s).	677	699203	Screw			
		0118, 0158, 0214,			(Muffler Deflector)			
		0222, 1118, 1158,	689	799669	Spring-Friction			
		1214.	703	798614	Clip			
614	797229	Pin-Cotter			(Fuel Hose)			
616	797228	Crank-Governor	705	690939	Nut			
621	692310	Switch-Stop			(Fuel Tank)			
631	797216	Washer	718	797214	Pin-Locating			
		(Oil Drain Plug)			(Cylinder Head)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10116-15 Assemblies include all parts shown in frames. 12/18/2013

083100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
830	797200	Stud-Rocker Arm	951	591016	Lever-Choke	968	591026	Cover-Air Cleaner
832	591029	Guard-Muffler	951A	797281	Lever-Choke	968A	797263	Cover-Air Cleaner
		----- Note -----			Used on Type No(s).	994	799557	Arrester-Spark
		797269 Guard-Muffler			0035, 0036, 0038,	1005	797321	Fan-Flywheel
		Used on Type No(s).			0040, 0049, 0110,	1012	590378	Retainer-Link
		0035, 0036, 0038,			0111, 0112, 0114,	1022	797194	Gasket-Rocker Cover
		0040, 0049, 0110,			0115, 0117, 0118,	1023	797196	Cover-Rocker Arm
		0117, 0120, 0123,			0119, 0120, 0121,			----- Note -----
		0126, 0127, 0130,			0122, 0123, 0126,			591052 Cover-Rocker
		0132, 0133, 0134,			0127, 0128, 0129,			Arm
		0136, 0139, 0140,			0130, 0131, 0132,			Used on Type No(s).
		0142, 0144, 0146,			0133, 0134, 0135,			0246, 1118, 1174,
		0151, 0154, 0155,			0136, 0138, 0139,			1187, 1209, 1214.
		0156, 0157, 0160,			0140, 0141, 0142,	1026	797207	Rod-Push
		0162, 0166, 0169,			0143, 0144, 0146,	1029	797202	Arm-Rocker
		0170, 0171, 0172,			0148, 0149, 0151,	1034	797209	Guide-Push Rod
		0174, 0175, 0178,			0152, 0153, 0154,	1036		Label-Emissions
		0179, 0181, 0186,			0155, 0156, 0157,			(Available From A
		0187, 0189, 0199,			0158, 0159, 0160,			Briggs & Stratton
		0204, 0206, 0207,			0161, 0162, 0164,			Authorized Dealer)
		0209, 0210, 0212,			0165, 0166, 0167,	1052	798631	Sensor-Oil
		0213, 0918.			0168, 0169, 0170,	1058	278916	Manual-Operator's
832A	797688	Guard-Muffler			0171, 0172, 0173,	1095	591461	Gasket Set-Valve
836	798976	Screw			0174, 0175, 0176,	1177	590965	Nut
		(Muffler Guard)			0177, 0178, 0179,			(Muffler)
842	797327	Seal-O Ring			0181, 0182, 0183,	1210	799678	Pulley/Spring
		(Dipstick Tube)			0186, 0187, 0189,			Assembly
864	799555	Adapter-Muffler			0199, 0202, 0203,			(Pulley)
868	797572	Seal-Valve			0204, 0205, 0206,	1211	799678	Pulley/Spring
		(Intake)			0207, 0209, 0210,			Assembly
875	591027	Base-Air Cleaner			0211, 0212, 0213,			(Spring)
		(Plastic)			0214, 0918.	1302	590457	Washer
875A	797265	Base-Air Cleaner	957	799324	Cap-Fuel Tank			(Muffler Guard)
		(Plastic)			(Plastic)	1305	798618	Screw
883	797267	Gasket-Exhaust						(Oil Sensor Module)
914	798618	Screw				1319	794467	Label-Warning
		(Rocker Cover)				1319A	797669	Label-Warning
		----- Note -----						
		799846 Screw						
		(Rocker Cover)						
		Used on Type No(s).						
		0246, 1118, 1174,						
		1187, 1209, 1214.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10116-16 Assemblies include all parts shown in frames. 12/18/2013

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

