

# Illustrated Parts List

## Model Series

# 19N100

TYPE NUMBERS  
0001 through 0222.

### TABLE OF CONTENTS

Alternator .....	8
Air Cleaner .....	4
Armature .....	8
Blower Housing .....	7
Camshaft .....	2
Carburetor .....	5
Controls .....	9
Crankcase Cover .....	2
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Electrical System .....	8
Exhaust Bracket .....	2
Exhaust System .....	6
Flywheel .....	7
Fuel Supply .....	6
Gasket Sets .....	3
Governor Spring .....	9
Ignition .....	8
Operator's Manual .....	2
Piston/Rings/Connecting Rod .....	2
Rewind Starter .....	7
Spark Plug .....	8
Warning Label .....	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted,  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.

# 19N100

1319 WARNING LABEL



**REQUIRED** when replacing parts with warning labels affixed.

1319A WARNING LABEL

 
 
 


**REQUIRED** when replacing parts with warning labels affixed.







1058 OPERATOR'S MANUAL



1036 EMISSIONS LABEL

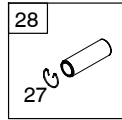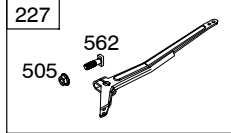

18A

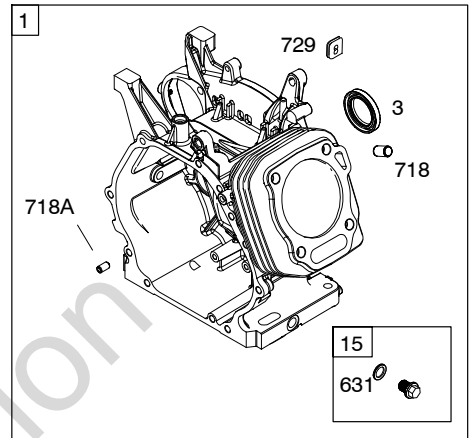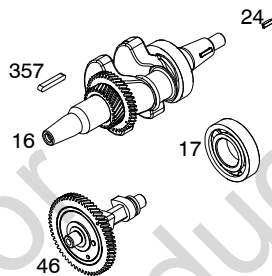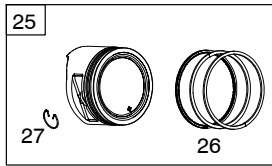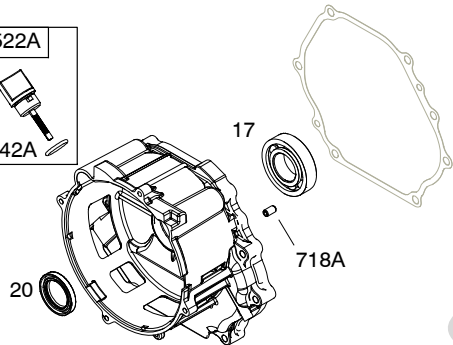      

509

492

22A

22

12A

12A

718A

522

842

18B

20

12A

718A

522

842

18C

20

12A

 
 
718A

522





842

22

22A




Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.


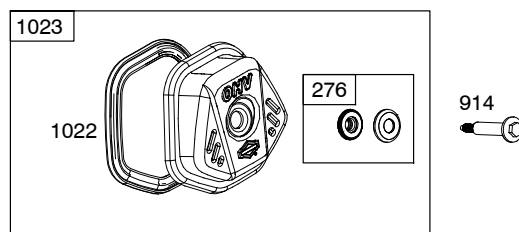 
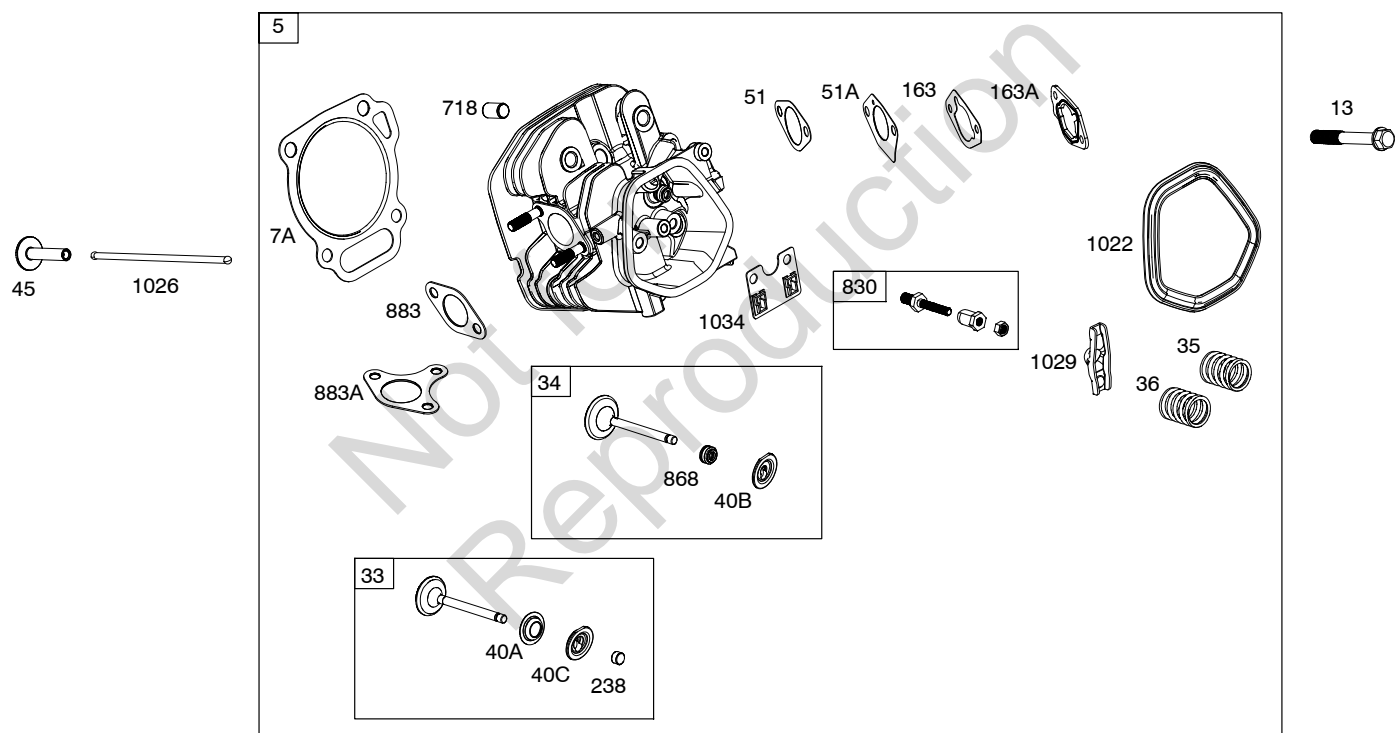 
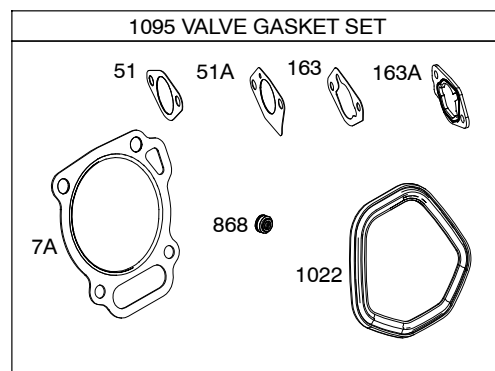 
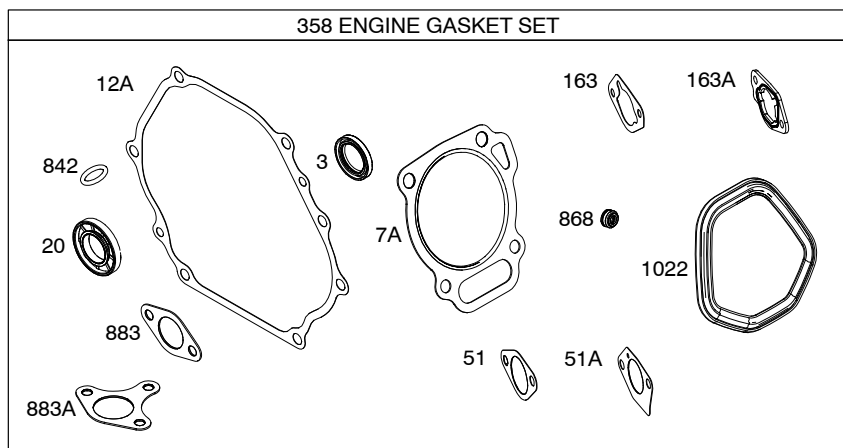 


**Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.**
 
# 19N100













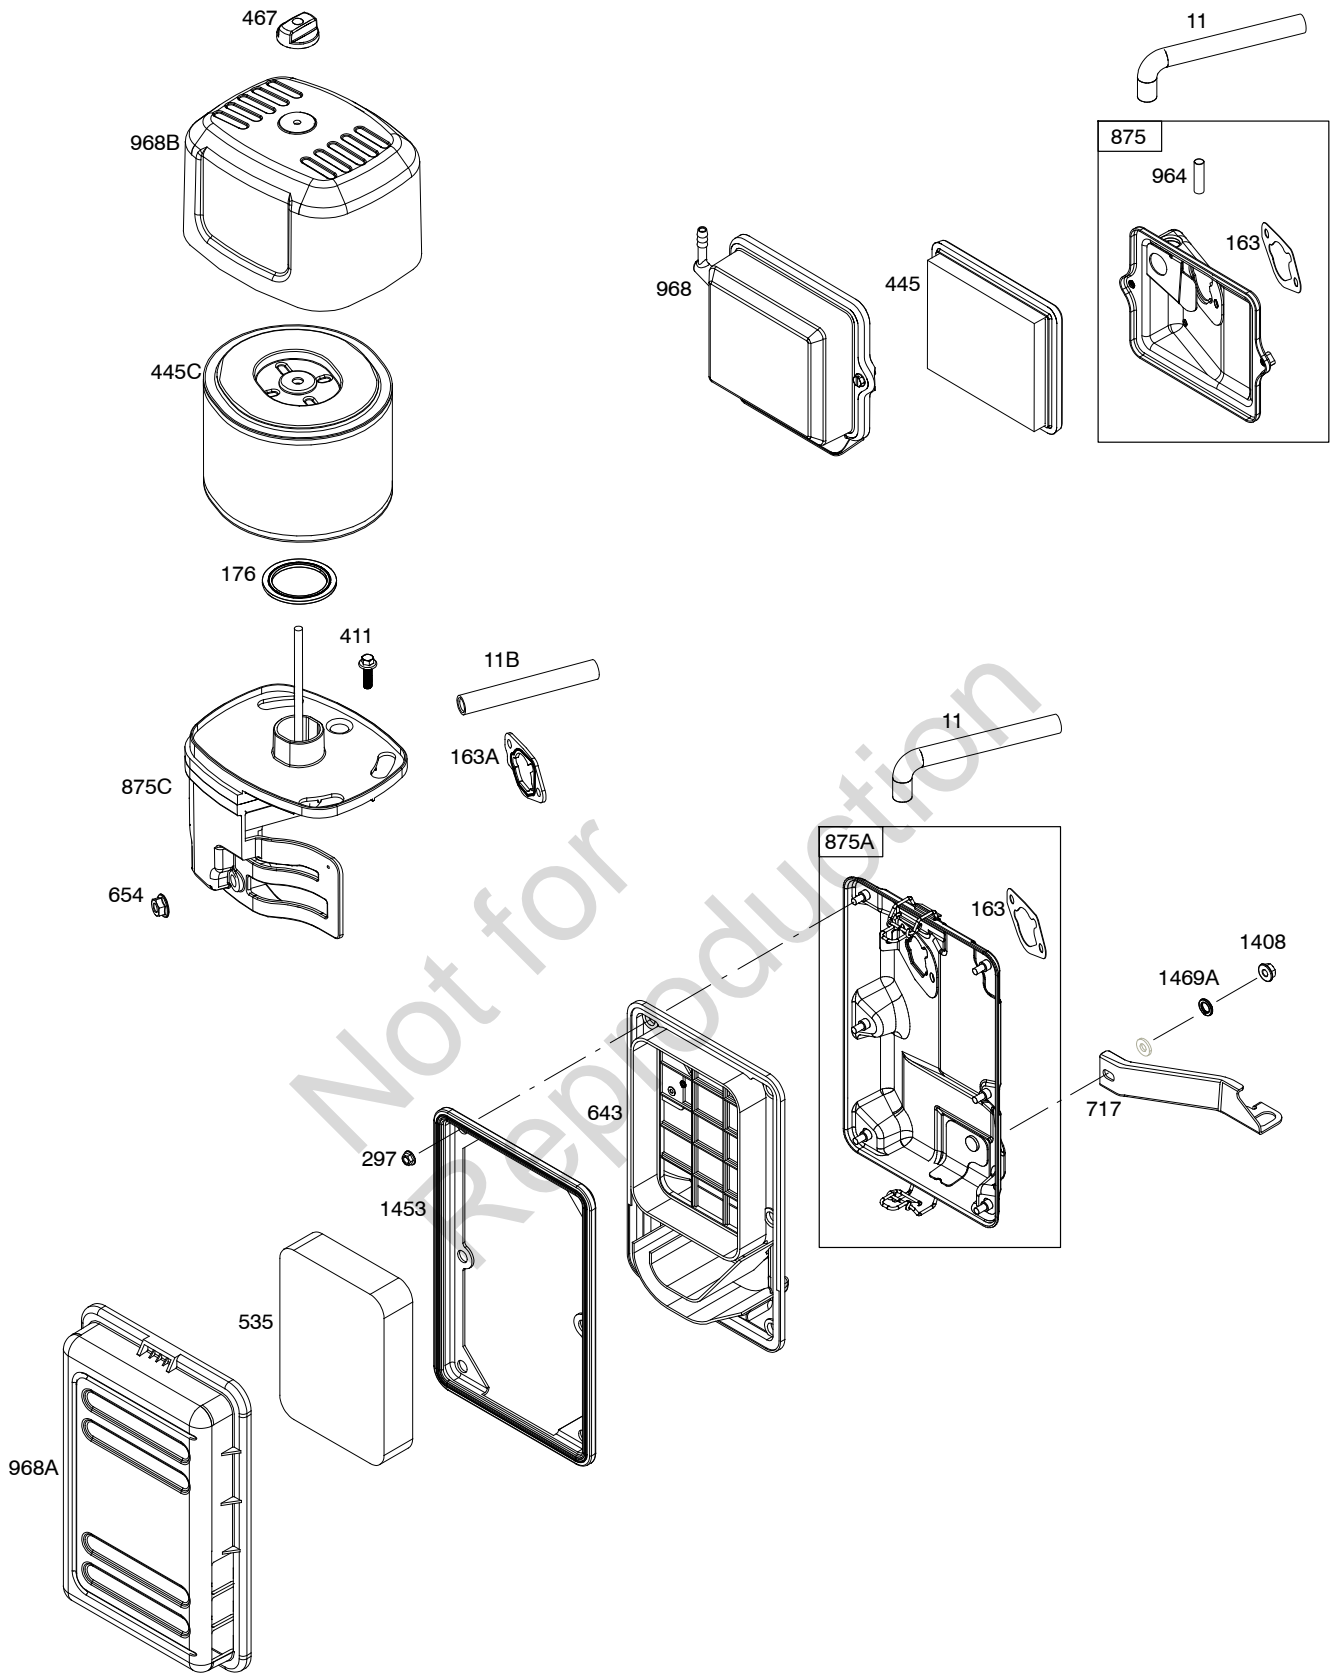


*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

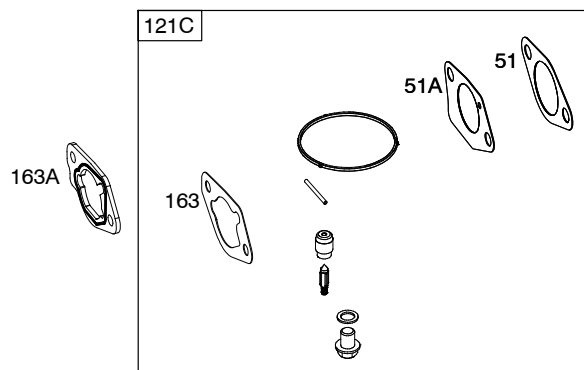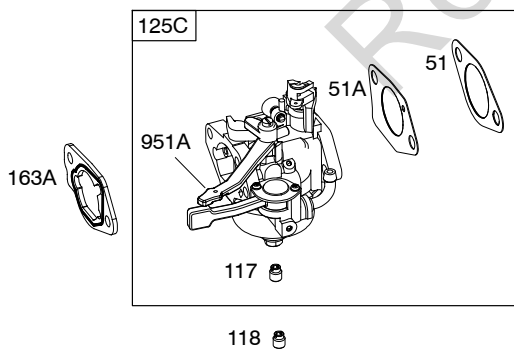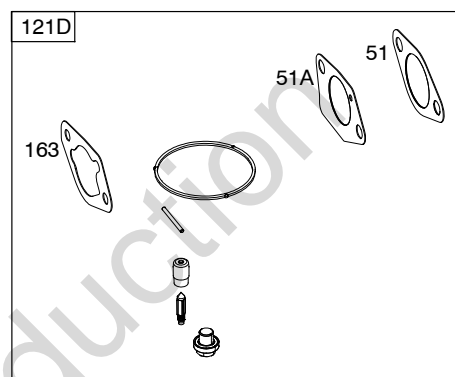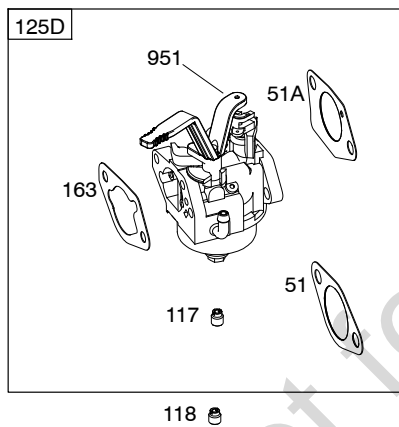    
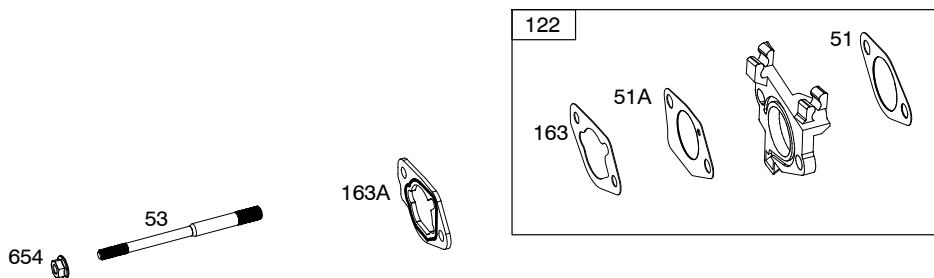 


*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

# 19N100

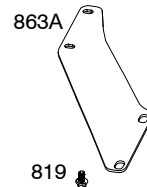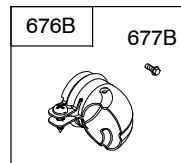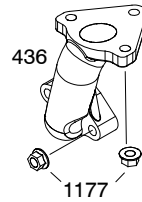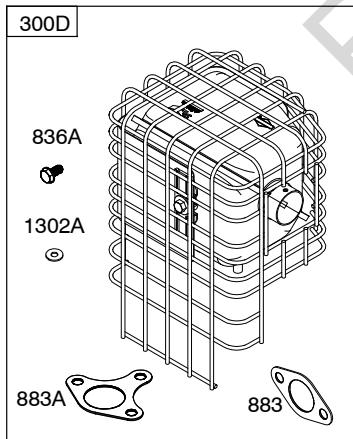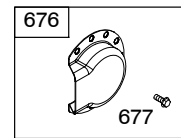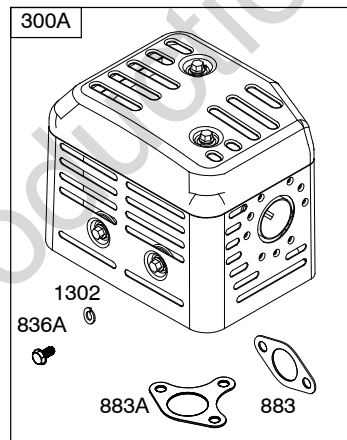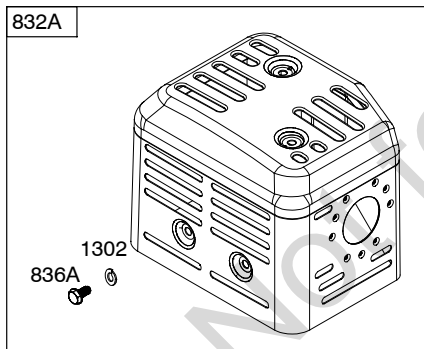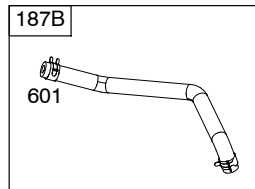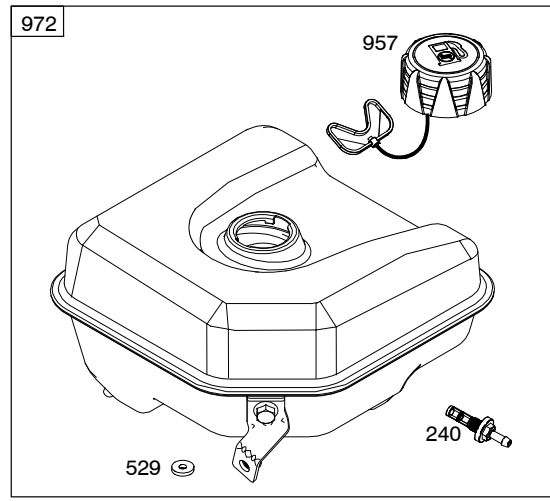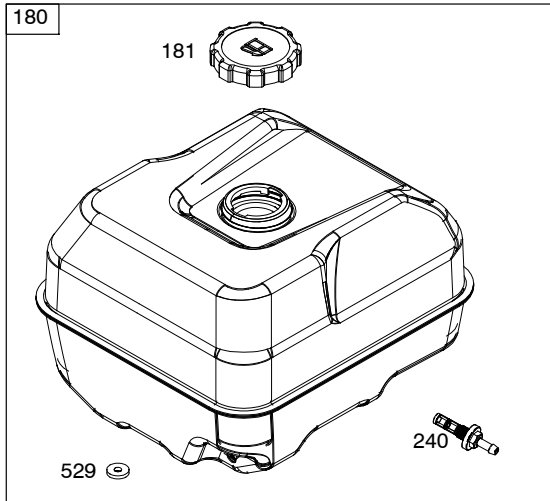             


*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

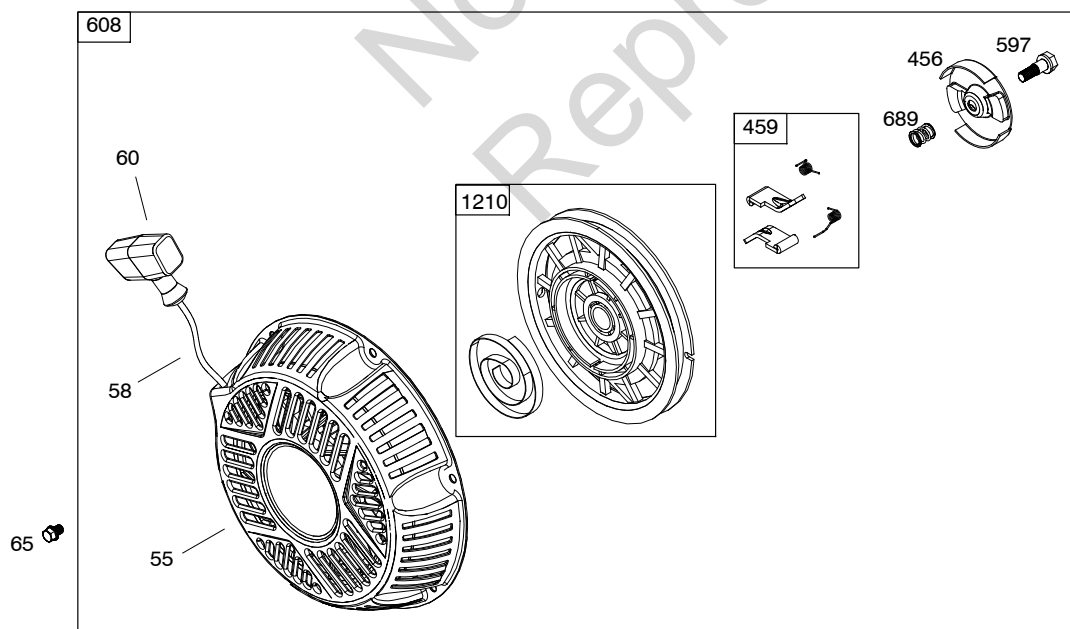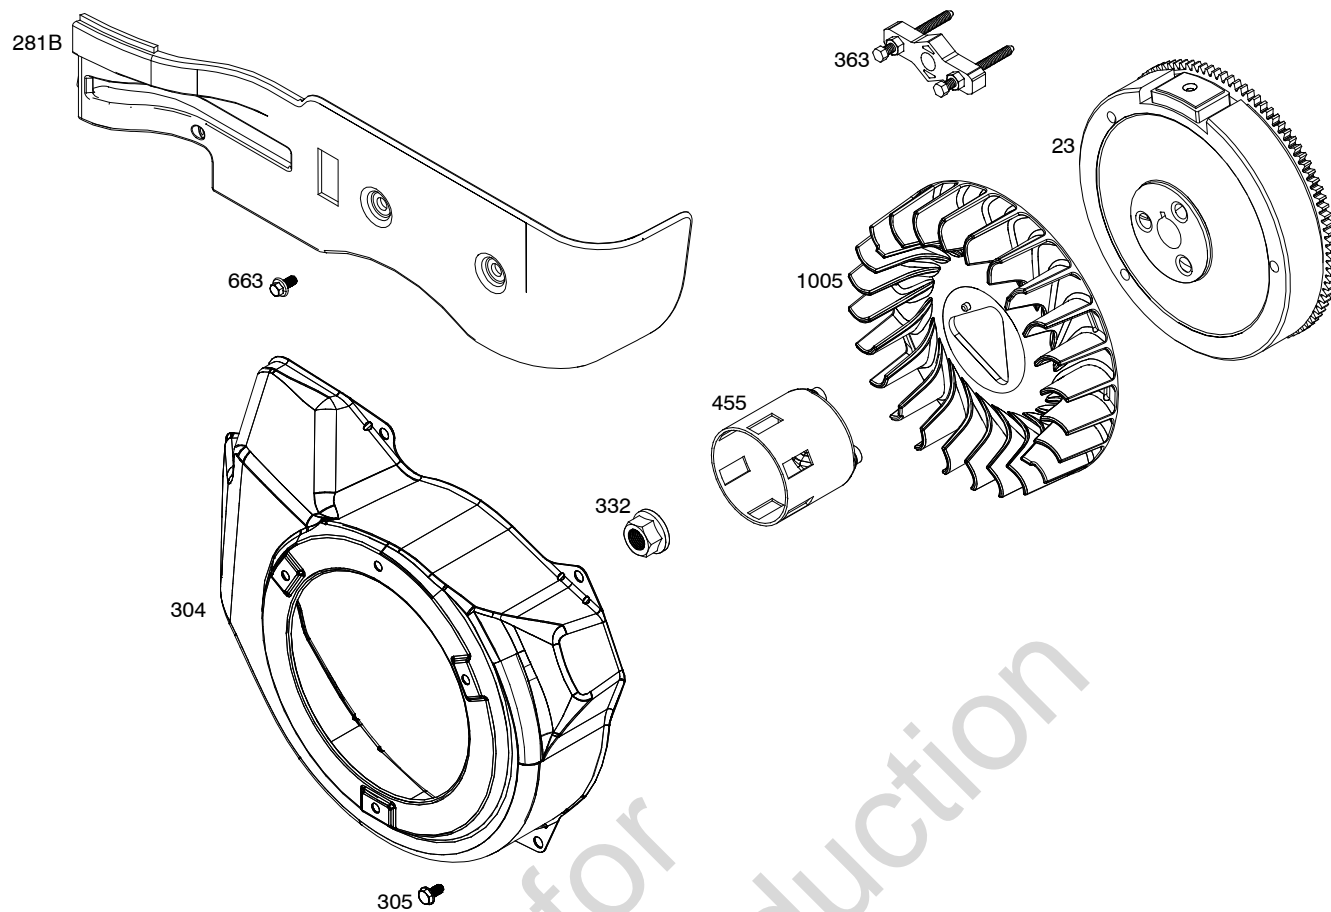  






*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

# 19N100

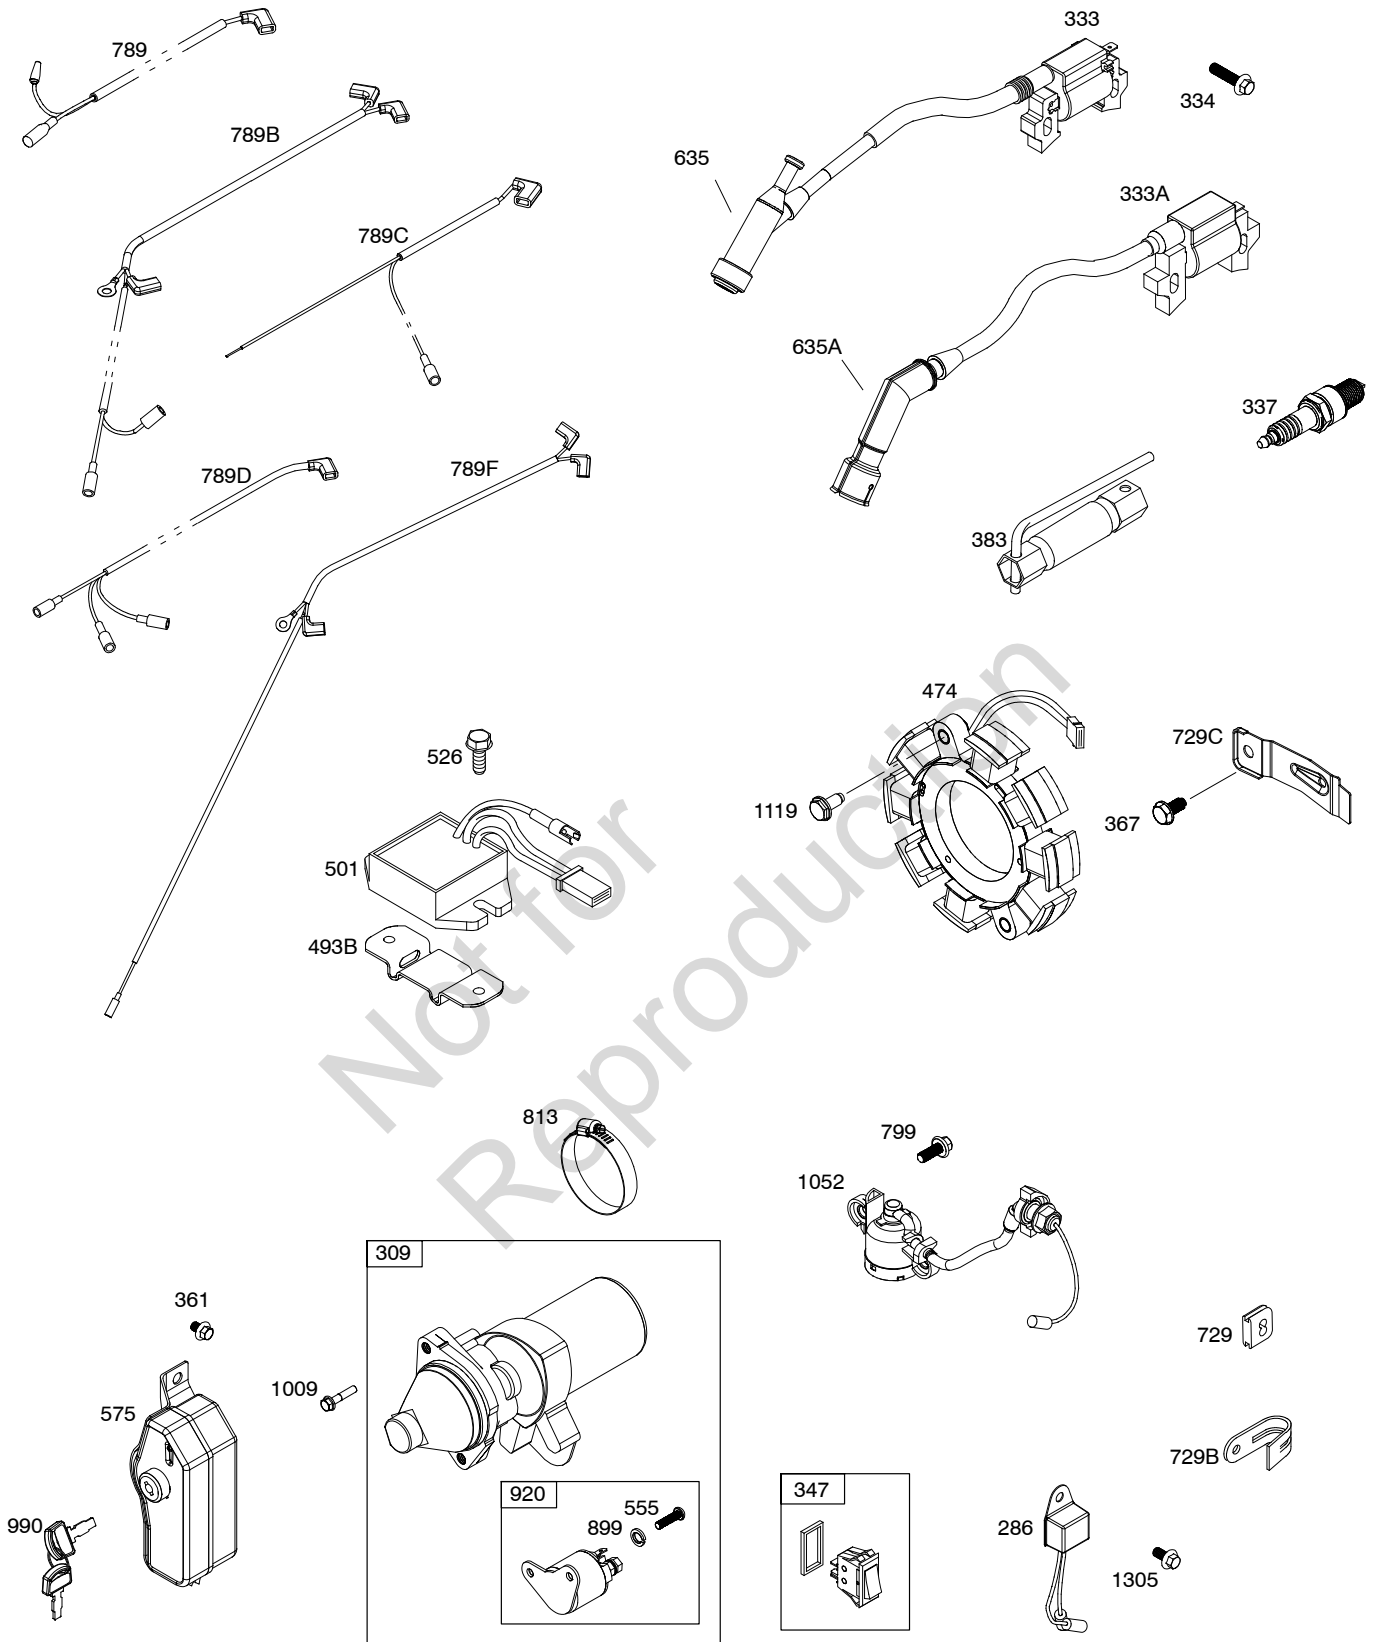 

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*



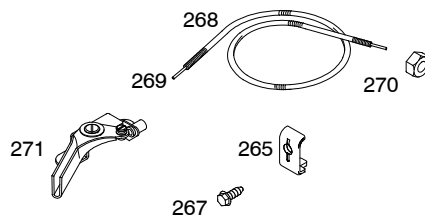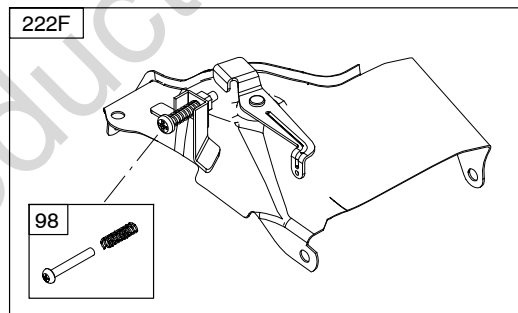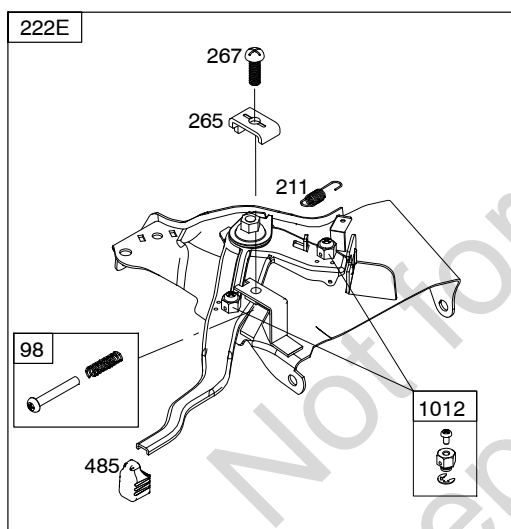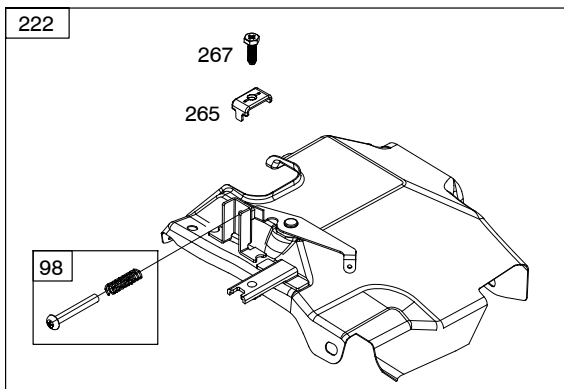     

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

# 19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	593106	Cylinder Assembly ----- <b>Note</b> ----- <b>593140</b> Cylinder Assembly Used on Type No(s). 0009, 0027, 0030, 0036, 0042, 0049, 0052, 0058. <b>593726</b> Cylinder Assembly Used on Type No(s). 0020, 0021, 0034, 0048, 0051, 0221. <b>593736</b> Cylinder Assembly Used on Type No(s). 0053.	16	593084	Crankshaft ----- <b>Note</b> ----- <b>591835</b> Crankshaft Used on Type No(s). 0006, 0009, 0027, 0028, 0036, 0045, 0049. <b>591836</b> Crankshaft Used on Type No(s). 0013, 0014, 0015. <b>593115</b> Crankshaft Used on Type No(s). 0003, 0021, 0022, 0033, 0034, 0058, 0064, 0221, 0222. <b>593135</b> Crankshaft Used on Type No(s). 0008. <b>593662</b> Crankshaft Used on Type No(s). 0051, 0053. <b>593691</b> Crankshaft Used on Type No(s). 0055.	23	593100	Flywheel ----- <b>Note</b> ----- <b>593139</b> Flywheel Used on Type No(s). 0009, 0027, 0030, 0036, 0052, 0053, 0058. <b>593735</b> Flywheel Used on Type No(s). 0042, 0049.
3	591794	Seal-Oil (Magneto Side)	17	591792	Bearing-Ball (Crankshaft)	24	797812	Key-Flywheel
5	593093	Head-Cylinder ----- <b>Note</b> ----- <b>593132</b> Head-Cylinder Used on Type No(s). 0006, 0013, 0014, 0015, 0045.	18A	592038	Cover-Crankcase Used on Type No(s). 0013, 0014, 0015.	25	592613	Piston Assembly (Standard) ----- <b>Note</b> ----- <b>593108</b> Piston Assembly (.010" Oversize) <b>593109</b> Piston Assembly (.020" Oversize)
7A	592834	Gasket-Cylinder Head	18B	593083	Cover-Crankcase ----- <b>Note</b> ----- <b>593114</b> Cover-Crankcase Used on Type No(s). 0003, 0021, 0022, 0034, 0058, 0064, 0221, 0222.	26	592614	Ring Set (Standard) ----- <b>Note</b> ----- <b>593110</b> Ring Set (.010" Oversize) <b>593111</b> Ring Set (.020" Oversize)
11	592353	Tube-Breather	18C	593661	Cover-Crankcase Used on Type No(s). 0019, 0035, 0039, 0051, 0052, 0053, 0055. ----- <b>Note</b> ----- <b>593747</b> Cover-Crankcase Used on Type No(s). 0033.	27	592044	Lock-Piston Pin
11B	799832	Tube-Breather (Cut To Required Length)	20	591793	Seal-Oil (PTO Side)	28	592045	Pin-Piston
12A	592597	Gasket-Crankcase	22	797776	Screw (Crankcase Cover/Sump)	29	592046	Rod-Connecting
13	797791	Screw (Cylinder Head)	22A	593107	Screw (Crankcase Cover/Sump)	33	592612	Valve-Exhaust
15	797793	Plug-Oil Drain				34	592611	Valve-Intake
						35	591814	Spring-Valve (Intake)
						36	591814	Spring-Valve (Exhaust)
						40A	797782	Retainer-Valve
						40B	591815	Retainer-Valve
						40C	591816	Retainer-Valve
						45	797786	Tappet-Valve
						46	592617	Camshaft
						51	591779	Gasket-Intake
						51A	591798	Gasket-Intake
						53	590390	Stud (Carburetor) ----- <b>Note</b> ----- <b>591801</b> Stud (Carburetor) Used on Type No(s). 0006, 0013, 0014, 0015, 0045.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
10450-10 Assemblies include all parts shown in frames. 03/13/2014



# 19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
357	590960	Key-Drive Pulley ----- <b>Note</b> ----- <b>591054</b> Key-Drive Pulley Used on Type No(s). 0003, 0021, 0022, 0033, 0058, 0064, 0221, 0222.	601	791850	Clamp-Hose	847	593174	Dipstick/Tube Assembly
358	593112	Gasket Set-Engine	608	591781	Starter-Rewind	863A	593733	Bracket-Muffler
361	798618	Screw (Starting Switch)	614	797229	Pin-Cotter	868	797854	Seal-Valve (Intake)
363	19203	Puller-Flywheel	616	592615	Crank-Governor	875	799776	Base-Air Cleaner (Plastic)
367	798618	Screw (Wire Clip)	621	692310	Switch-Stop	875A	591804	Base-Air Cleaner (Plastic)
383	19576S	Wrench-Spark Plug	631	797794	Washer (Oil Drain Plug)	875C	593088	Base-Air Cleaner (Plastic)
411	797686	Screw (Air Cleaner Base to Carburetor)	635	797658	Boot-Spark Plug	883	797770	Gasket-Exhaust
436	593089	Manifold-Exhaust	635A	797685	Boot-Spark Plug	883A	799797	Gasket-Exhaust
445	491588S	Filter-Air Cleaner Cartridge	643	591806	Retainer-Air Filter	899	799642	Washer (Starter Solenoid)
445C	592605	Filter-Air Cleaner Cartridge	654	690939	Nut (Carburetor)	914	797848	Screw (Rocker Cover)
455	591820	Cup-Flywheel	663	799846	Screw (Control Panel)	----- <b>Note</b> ----- <b>590988</b> Screw (Rocker Cover) Used on Type No(s). 0002, 0003, 0004, 0006, 0018, 0020, 0021, 0022, 0048, 0058, 0218, 0221, 0222.		
456	799973	Plate-Pawl Friction	676	590953	Deflector-Muffler	920	799481	Solenoid-Starter
459	799976	Pawl-Ratchet	676B	697816	Deflector-Muffler	951	592068	Lever-Choke Used on Type No(s). 0006.
467	691985	Knob-Air Cleaner	677	699203	Screw (Muffler Deflector)	----- <b>Note</b> ----- <b>797759</b> Lever-Choke Used on Type No(s). 0013, 0014, 0015, 0045.		
474	591100	Alternator	677B	699776	Screw (Muffler Deflector)	951A	593102	Lever-Choke
485	797339	Knob-Control	689	799669	Spring-Friction	957	799324	Cap-Fuel Tank
492	592037	Shield-Crankcase	703	590967	Clip (Fuel Hose)	964	799159	Cap-Connector
493B	691177	Bracket-Mounting	705	590965	Nut (Fuel Tank)	968	590958	Cover-Air Cleaner Used on Type No(s). 0013, 0014.
501	845907	Regulator	717	593134	Bracket-Air Cleaner	----- <b>Note</b> ----- <b>791082</b> Cover-Air Cleaner Used on Type No(s). 0013, 0014, 0015, 0045.		
505	690939	Nut (Governor Control Lever)	718	797792	Pin-Locating (Cylinder Head)			
509	798840	Screw (Crankcase Shield)	718A	797761	Pin-Locating (Crankcase Cover)			
522	799941	Plug-Dipstick/Fill	729	797750	Clip-Wire			
522A	797762	Plug-Dipstick/Fill	729B	592311	Clip-Wire			
526	690297	Screw (Regulator)	729C	593137	Clip-Wire			
529	799933	Grommet (Fuel Tank)	789	797856	Harness-Wiring			
535	591778	Filter-Air Cleaner Foam	789B	593082	Harness-Wiring			
555	799532	Screw (Starter Solenoid)	789C	590371	Harness-Wiring			
562	797230	Bolt (Governor-Control Lever)	789D	590372	Harness-Wiring			
575	593734	Switch-Starting	789F	593722	Harness-Wiring			
597	799972	Screw (Pawl Friction Plate)	799	798975	Screw (Oil Sensor)			
			813	590392	Clamp			
			819	798618	Screw (Muffler Bracket)			
			830	591088	Stud-Rocker Arm			
			832A	593091	Guard-Muffler			
			836A	798976	Screw (Muffler Guard)			
			842	797327	Seal-O Ring (Dipstick Tube)			
			842A	797763	Seal-O Ring (Dipstick Tube)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
10450-12 Assemblies include all parts shown in frames. 03/13/2014

# 19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
968A	591803	Cover-Air Cleaner	1026	591818	Rod-Push	1177	590965	Nut (Muffler)
968B	593087	Cover-Air Cleaner	1029	591087	Arm-Rocker	1210	591788	Pulley/Spring Assembly (Pulley)
972	593720	Tank-Fuel	1034	591819	Guide-Push Rod (Available From A Briggs & Stratton Authorized Dealer)	1302	590457	Washer (Muffler Guard)
990	590996	Key Set	1036			1302A	593727	Washer (Muffler Guard)
994	790153	Arrestor-Spark	1052	797771	Sensor-Oil	1305	798618	Screw (Oil Sensor Module)
1005	591789	Fan-Flywheel	1058	279127TRI	Manual-Operator's	1319	794467	Label-Warning
1009	593136	Screw (Starter Motor)			----- <b>Note</b> -----	1319A	797669	Label-Warning
1012	590378	Retainer-Link			279127WST	1345	792917	Filter-Filler Neck
1022	797846	Gasket-Rocker Cover			Manual-Operator's	1408	690939	Nut (Air Cleaner Bracket)
1023	799778	Cover-Rocker Arm			279127EST	1453	591807	SeaL-Air Cleaner Cover
		----- <b>Note</b> -----			Manual-Operator's	1469A	22097GS	Washer (Air Cleaner Bracket)
		590989 Cover-Rocker Arm			279127ZH			
		Used on Type No(s). 0002, 0003, 0004, 0006, 0018, 0020, 0021, 0022, 0048, 0058, 0218, 0221, 0222.	1095	593113	Gasket Set-Valve			
			1119	799845	Screw (Alternator)			

Not for  
Reproduction

Not for  
Reproduction

Not for  
Reproduction

Not for  
Reproduction

