

# Illustrated Parts List

## Model Series

# 19T100

TYPE NUMBERS  
0002 Through 0012.

### TABLE OF CONTENTS

Alternator .....	8
Air Cleaner .....	4
Armature .....	9
Blower Housing .....	7
Camshaft .....	2
Carburetor .....	5
Controls .....	9
Crankcase Cover .....	2
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Electrical System .....	8
Exhaust Bracket .....	2
Exhaust System .....	6
Flywheel .....	7
Fuel Supply .....	6
Gasket Sets .....	3
Governor Spring .....	9
Ignition .....	8
Operator's Manual .....	2
Piston/Rings/Connecting Rod .....	2
Rewind Starter .....	7
Spark Plug .....	9
Warning Label .....	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted,  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.

# 19T100

1319 WARNING LABEL



**REQUIRED** when replacing parts with warning labels affixed.

1319A WARNING LABEL

 


**REQUIRED** when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL







1036 EMISSIONS LABEL



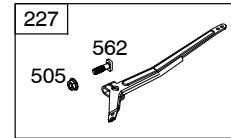


614

 
 
 
 
616

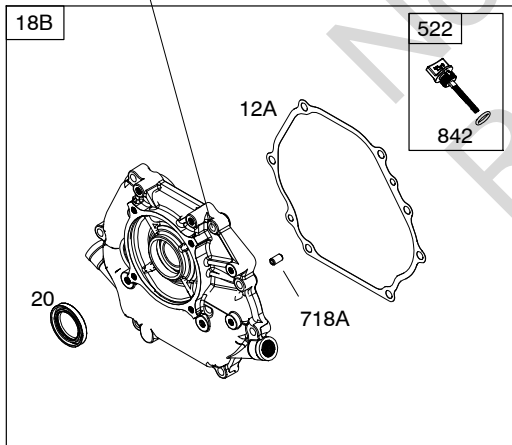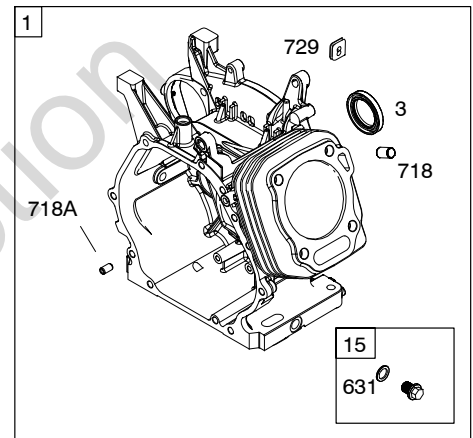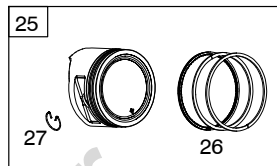


22

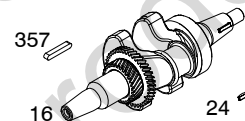   




*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

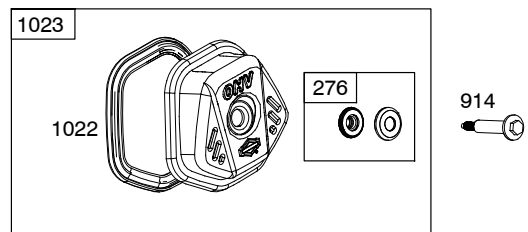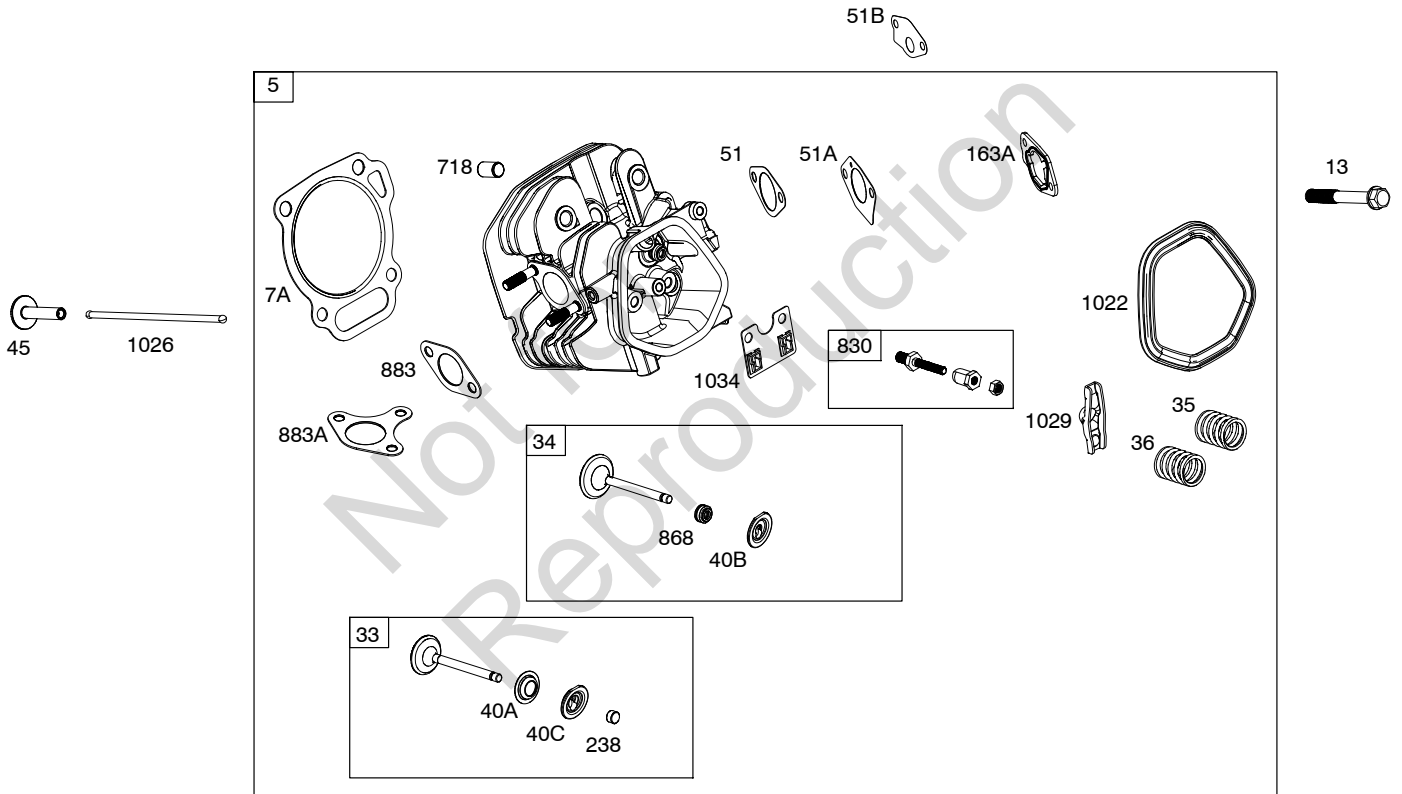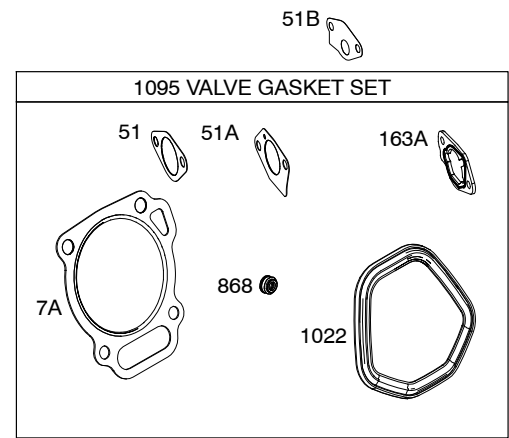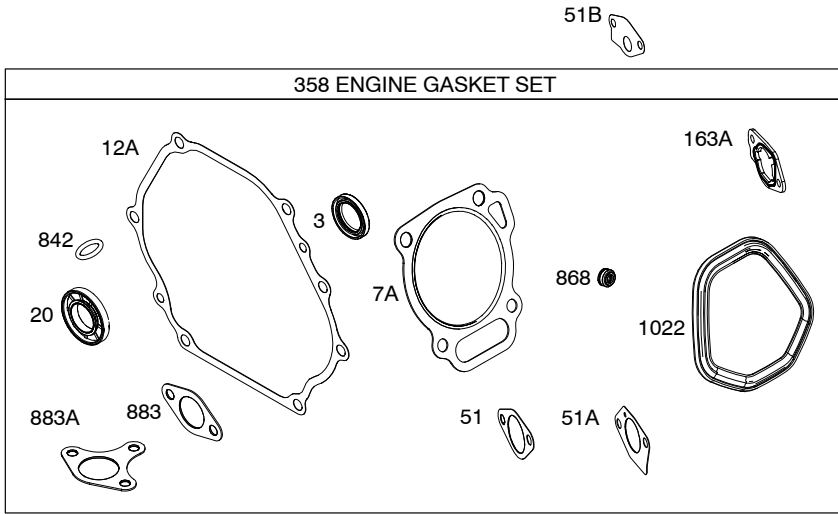    








*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

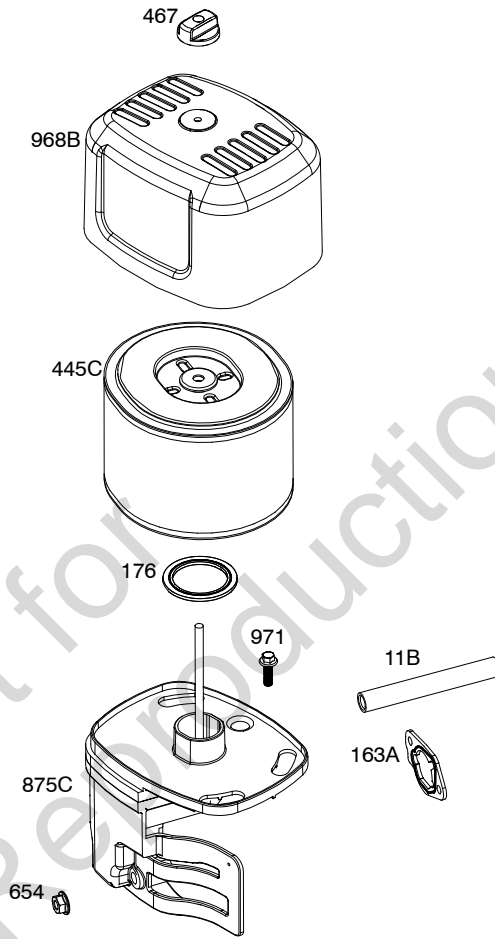 



*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

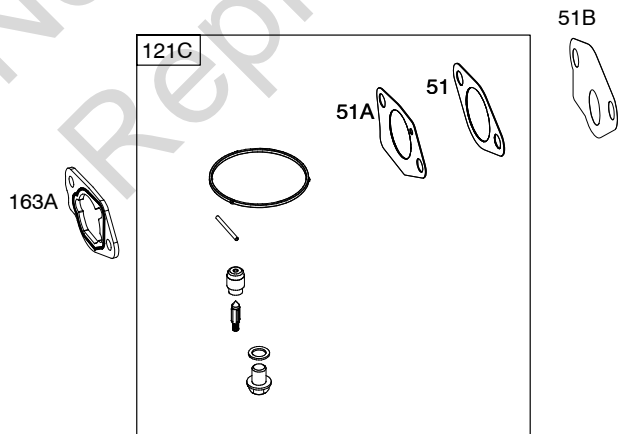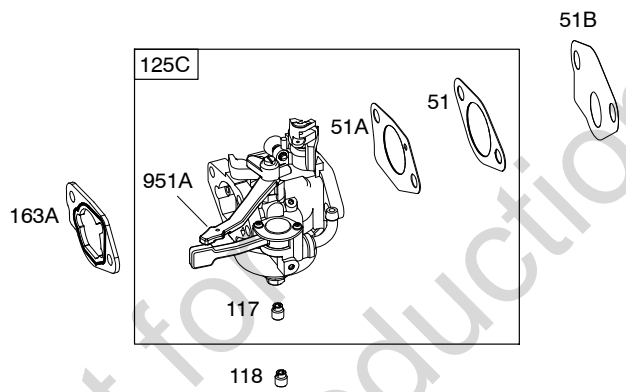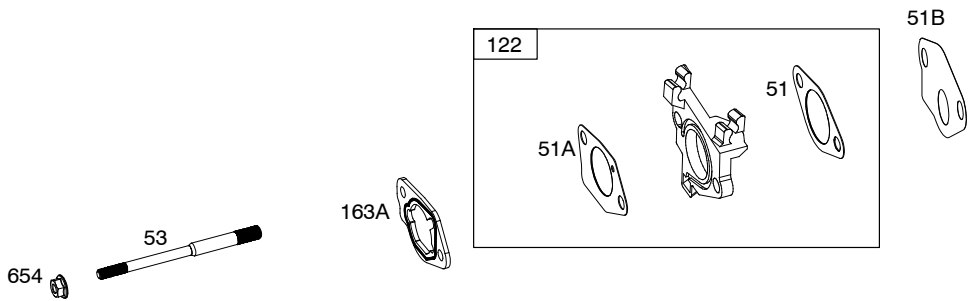   

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

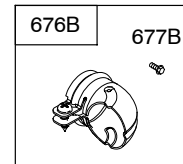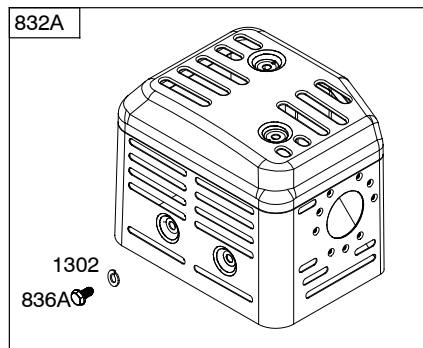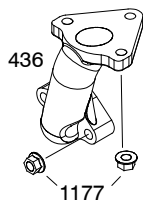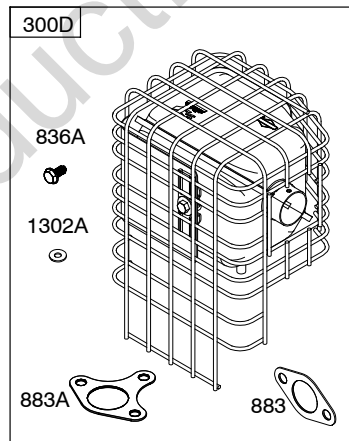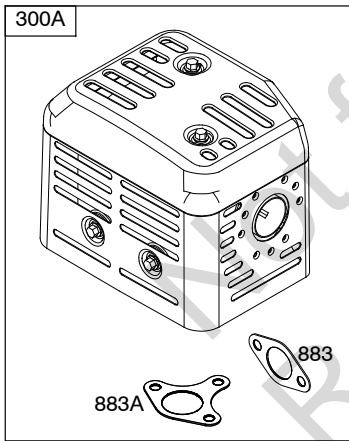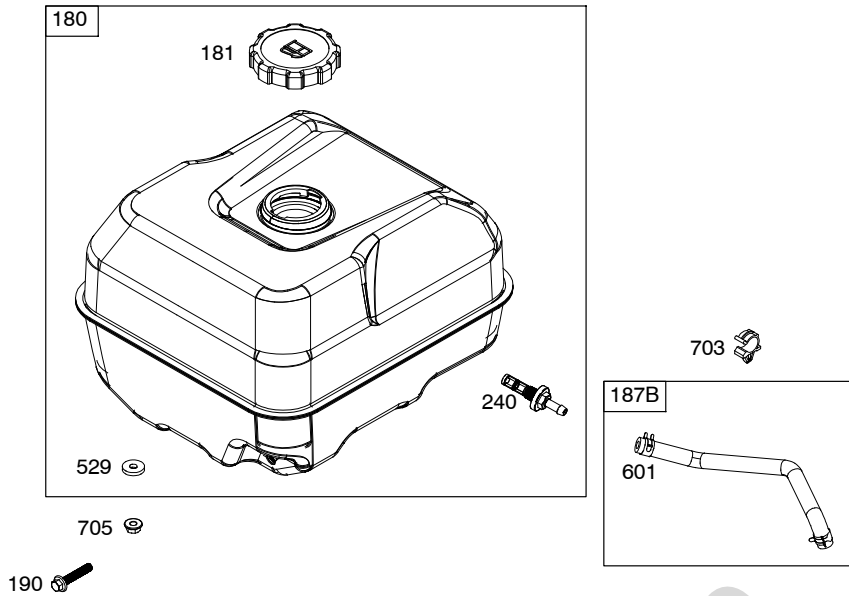       


*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

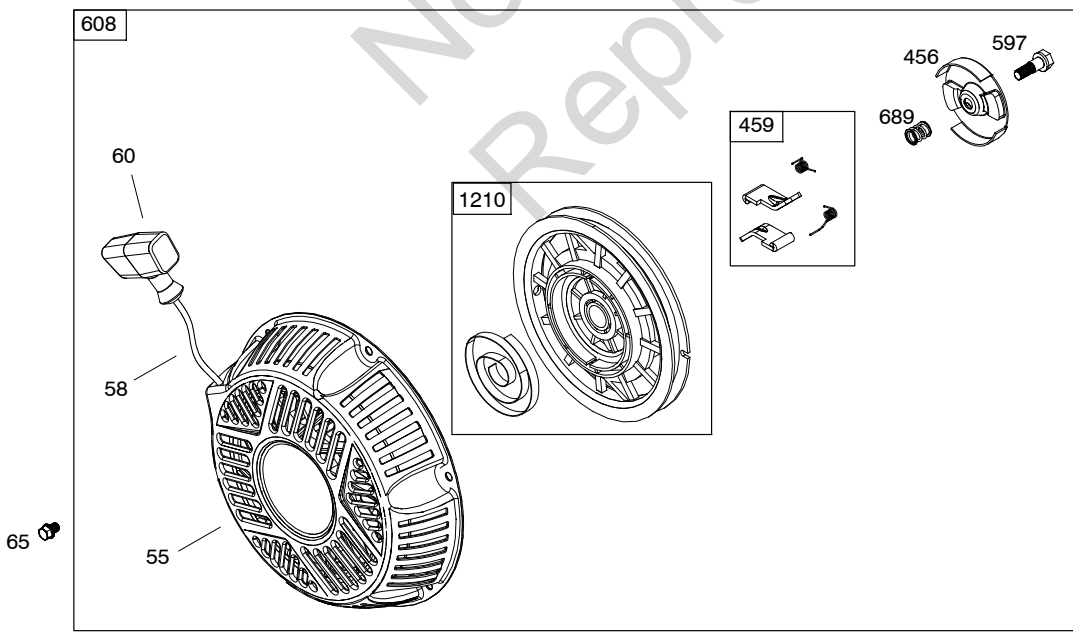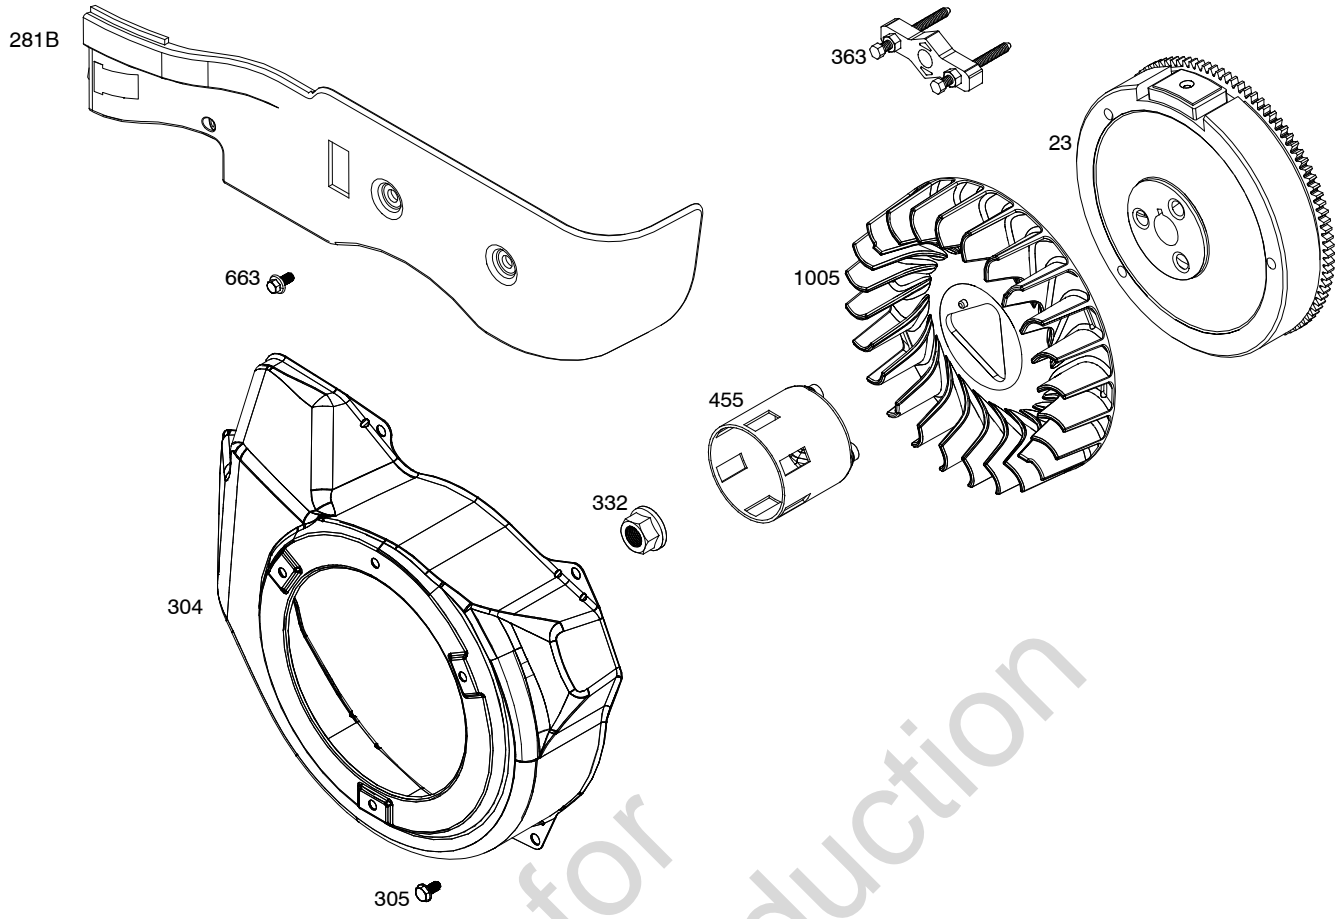  






*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

# 19T100

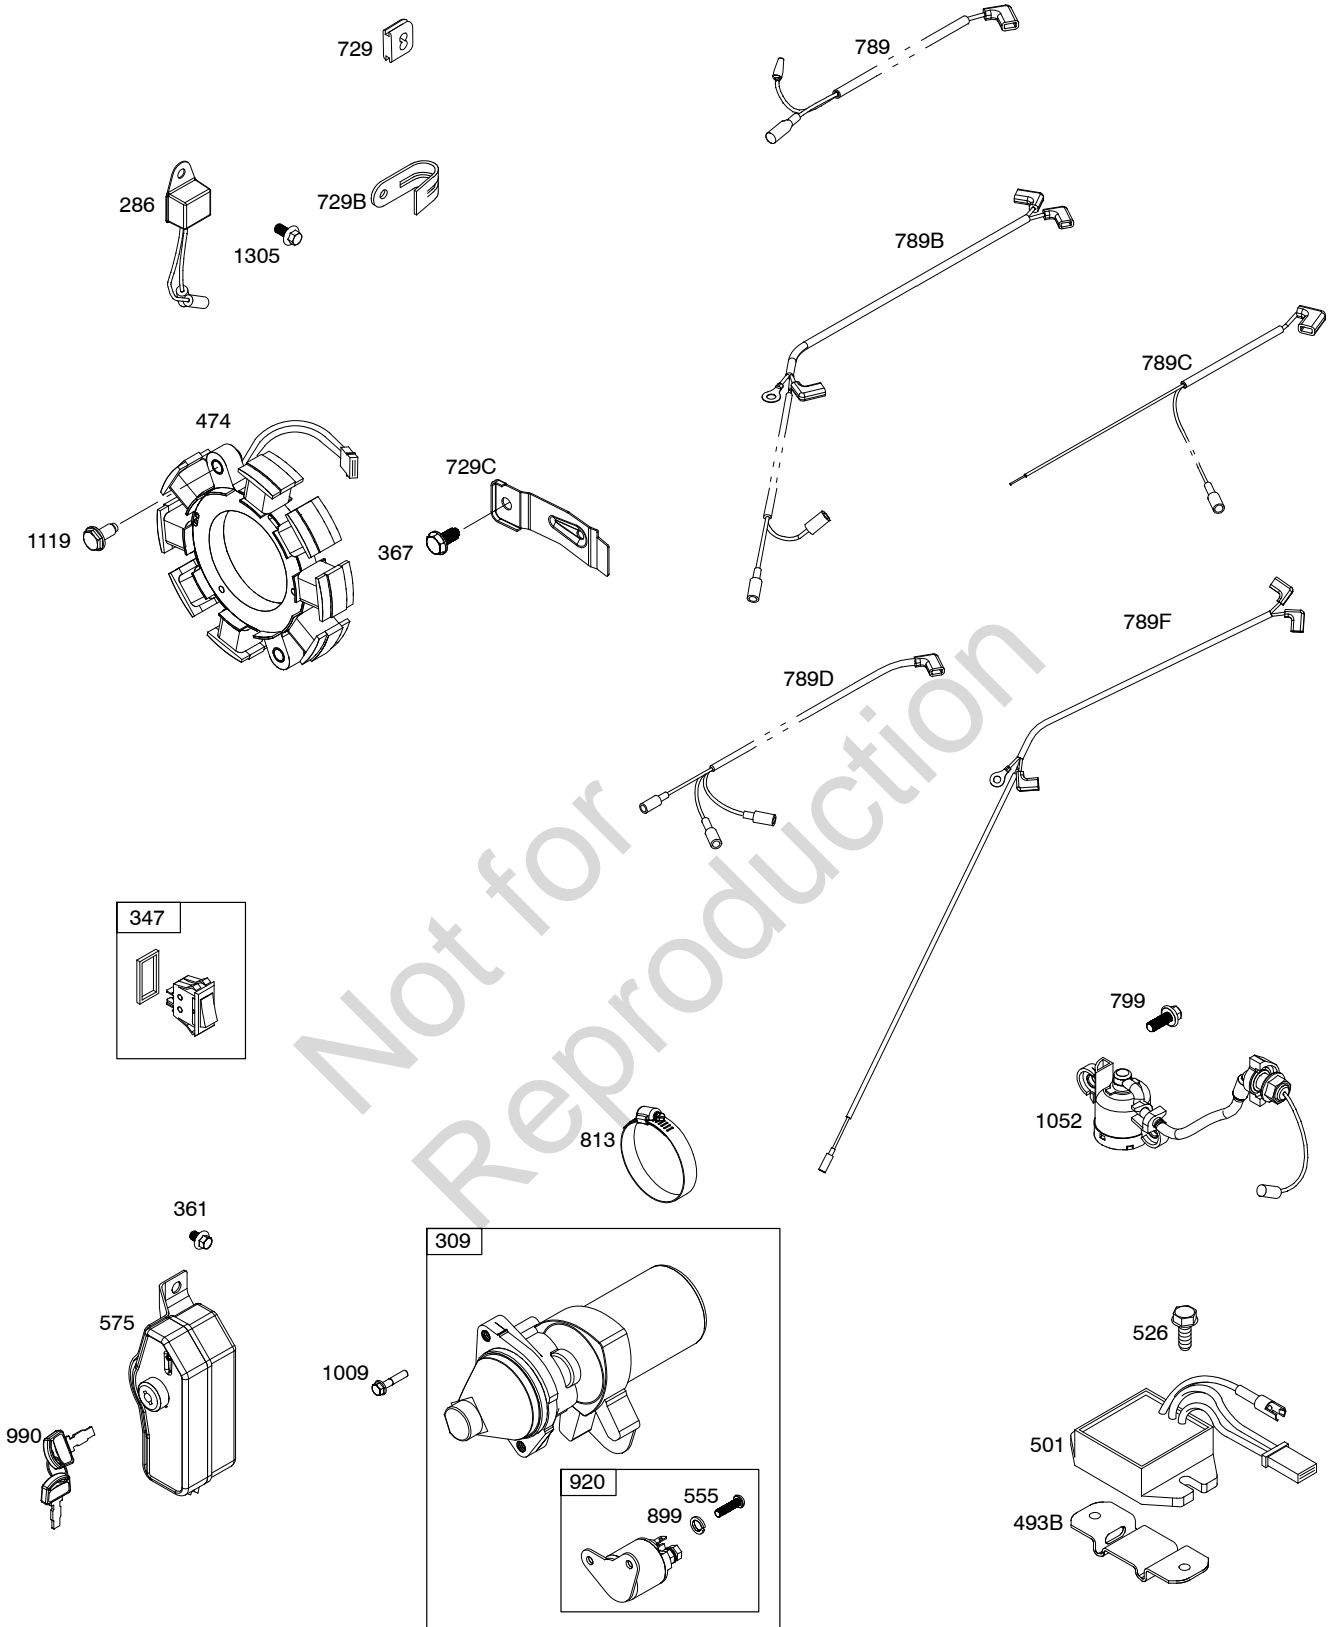 

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*



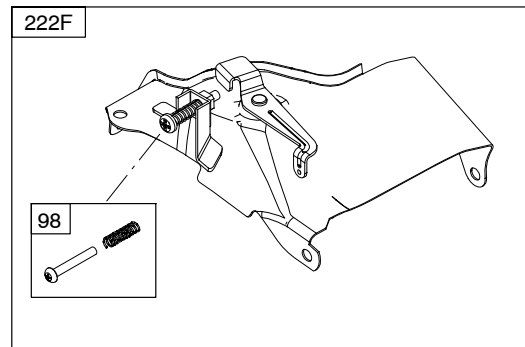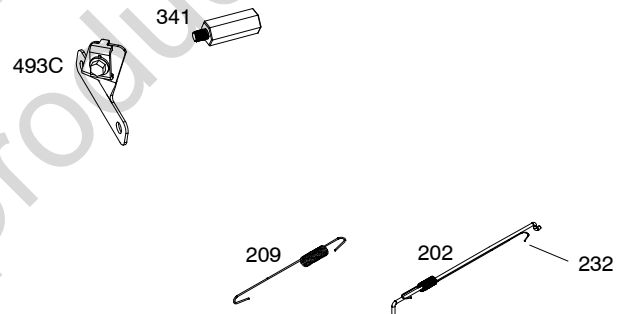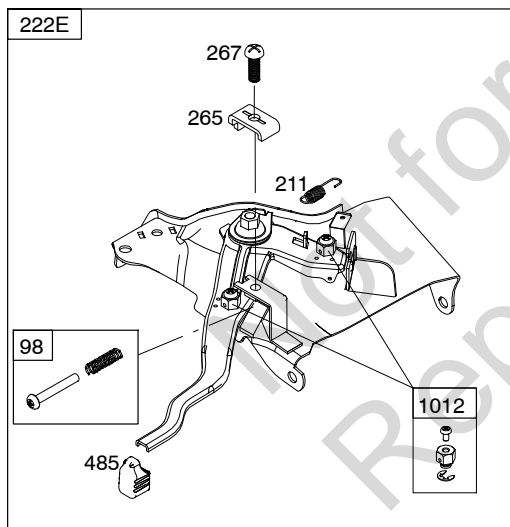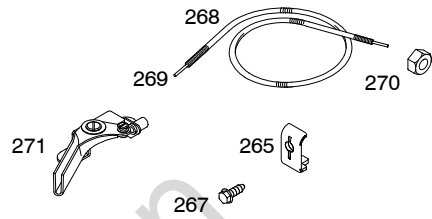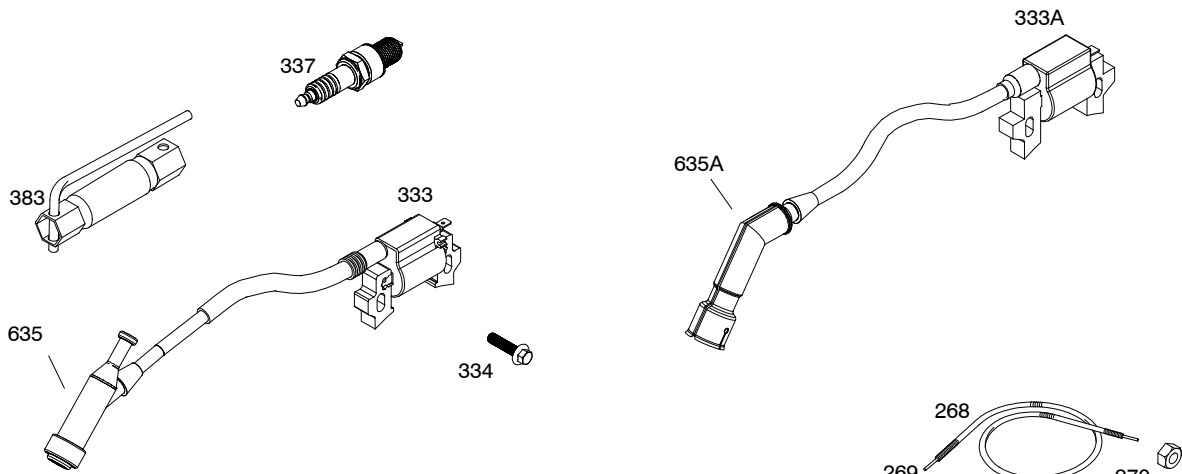     

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

# 19T100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	593140	Cylinder Assembly Used on Type No(s). 0005, 0007, 0011. ----- Note ----- 593726 Cylinder Assembly Used on Type No(s). 0002, 0006, 0009. 593736 Cylinder Assembly Used on Type No(s). 0012.	23	593139	Flywheel Used on Type No(s). 0005, 0007, 0011, 0012. ----- Note ----- 593100 Flywheel Used on Type No(s). 0002, 0006, 0009.	60	691915	Grip-Starter Rope
3	591794	Seal-Oil (Magneto Side)	24	797812	Key-Flywheel	65	797654	Screw (Rewind Starter)
5	593093	Head-Cylinder	25	592613	Piston Assembly (Standard) ----- Note ----- 593108 Piston Assembly (.010" Oversize)	98	593104	Kit-Idle Speed
7A	592834	Gasket-Cylinder Head	26	592614	Ring Set (Standard) ----- Note ----- 593109 Piston Assembly (.020" Oversize)	117	592598	Jet-Main (Standard)
11B	799832	Tube-Breather (Cut To Required Length)	27	592044	Lock-Piston Pin	118		Jet-Main (High Altitude) (Not Yet Available)
12A	592597	Gasket-Crankcase	28	592045	Pin-Piston	121C	592229	Kit-Carburetor Overhaul
13	797791	Screw (Cylinder Head)	29	592046	Rod-Connecting	122	591797	Spacer-Carburetor
15	797793	Plug-Oil Drain	33	592612	Valve-Exhaust	125C	592594	Carburetor
16	593115	Crankshaft Used on Type No(s). 0006, 0009, 0012. ----- Note ----- 591835 Crankshaft Used on Type No(s). 0005, 0007. 593084 Crankshaft Used on Type No(s). 0002, 0011.	34	592611	Valve-Intake	163A	799883	Gasket-Air Cleaner
17	591792	Bearing-Ball (Crankshaft)	35	591814	Spring-Valve (Intake)	176	799834	Seal-O Ring (Air Cleaner Base)
18B	593083	Cover-Crankcase Used on Type No(s). 0002, 0005, 0007, 0011. ----- Note ----- 593114 Cover- Crankcase Used on Type No(s). 0006, 0009, 0012.	36	591814	Spring-Valve (Exhaust)	180	593095	Tank-Fuel
20	591793	Seal-Oil (PTO Side)	40A	797782	Retainer-Valve	181	794641	Cap-Fuel Tank
22	797776	Screw (Crankcase Cover/Sump)	40B	591815	Retainer-Valve	187B	593092	Line-Fuel
22A	593107	Screw (Crankcase Cover/Sump)	40C	591816	Retainer-Valve	188	798618	Screw (Control Bracket)
			45	797786	Tappet-Valve	190	590964	Screw (Fuel Tank)
			46	592617	Camshaft	202	591834	Link-Mechanical Governor
			51	591779	Gasket-Intake	209	591786	Spring-Governor
			51A	591798	Gasket-Intake	211	799927	Spring-Governed Idle
			51B	593320	Gasket-Intake (Stainless Steel Center Outlet)	222E	593105	Bracket-Control
			53	590390	Stud (Carburetor)	222F	593315	Bracket-Control
			55	591787	Housing-Rewind Starter	227	592616	Lever-Governor Control
			58	691921	Rope-Starter (Cut to Required Length)	232	797809	Spring-Governor Link
						238	591817	Cap-Valve
						240	797346	Filter-Fuel
						265	691024	Clamp-Casing
						267	699492	Screw (Casing Clamp)
						268	691025	Casing-Control Wire (Cut To Required Length)
						269	691026	Wire-Control (Cut To Required Length)
						270	691027	Nut (Control Wire Casing)
						271	691028	Lever-Control
						276	797847	Washer-Sealing (Rocker Cover)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
10506-10 Assemblies include all parts shown in frames. 09/12/2014

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
281B	593732	Panel-Control Used on Type No(s). 0006, 0011, 0012. ----- Note ----- 593314 Panel-Control Used on Type No(s). 0005, 0007. 593099 Panel-Control Used on Type No(s). 0002, 0009.	456	799973	Plate-Pawl Friction	718A	797761	Pin-Locating (Crankcase Cover)
286	797772	Module-Oil Sensor	459	799976	Pawl-Ratchet	729	797750	Clip-Wire
300A	593090	Muffler	467	691985	Knob-Air Cleaner Cover	729B	592311	Clip-Wire
300D	593731	Muffler Used on Type No(s). 0006, 0012. ----- Note ----- 593128 Muffler Used on Type No(s). 0009.	474	591100	Alternator	729C	593137	Clip-Wire
304	591785	Housing-Blower	485	797339	Knob-Control	789	797856	Harness-Wiring Used on Type No(s). 0012.
305	798618	Screw (Blower Housing)	493B	691177	Bracket-Mounting	789B	593082	Harness-Wiring Used on Type No(s). 0005.
306	591790	Shield-Cylinder	493C	591342	Bracket-Mounting	789C	590371	Harness-Wiring Used on Type No(s). 0006.
307	798618	Screw (Cylinder Shield)	501	845907	Regulator	789D	590372	Harness-Wiring Used on Type No(s). 0007, 0011.
309	591780	Motor-Starter	505	690939	Nut (Governor Control Lever)	789F	593722	Harness-Wiring Used on Type No(s). 0002, 0009.
332	797811	Nut (Flywheel)	522	799941	Plug-Dipstick/Fill	799	798975	Screw (Oil Sensor)
333	797769	Armature-Magneto	526	690297	Screw (Regulator)	813	590392	Clamp
333A	798616	Armature-Magneto	529	799933	Grommet (Fuel Tank)	830	591088	Stud-Rocker Arm
334	797655	Screw (Magneto Armature)	555	799532	Screw (Starter Solenoid)	832A	593091	Guard-Muffler
337	797235	Plug-Spark	562	797230	Bolt (Governor-Control Lever)	836A	798976	Screw (Muffler Guard)
341	591341	Stud (Mounting Bracket)	575	593734	Switch-Starting	842	797327	Seal-O Ring (Dipstick Tube)
347	797340	Switch-Rocker	597	799972	Screw (Pawl Friction Plate)	868	797854	Seal-Valve (Intake)
357	591054	Key-Drive Pulley	601	791850	Clamp-Hose	875C	593088	Base-Air Cleaner
358	593112	Gasket Set-Engine	608	591781	Starter-Rewind	883	797770	Gasket-Exhaust
361	798618	Screw (Starting Switch)	614	797229	Pin-Cotter	883A	799797	Gasket-Exhaust
363	19203	Puller-Flywheel	616	592615	Crank-Governor	899	799642	Washer (Starter Solenoid)
367	798618	Screw (Wire Clip)	621	692310	Switch-Stop	914	797848	Screw (Rocker Cover)
383	19576S	Wrench-Spark Plug	631	797794	Washer (Oil Drain Plug)	920	799481	Solenoid-Starter
436	593089	Manifold-Exhaust	635	797658	Boot-Spark Plug	951A	593102	Lever-Choke
445C	592605	Filter-Air Cleaner Cartridge	635A	797685	Boot-Spark Plug	968B	593087	Cover-Air Cleaner
455	591820	Cup-Flywheel	654	690939	Nut (Carburetor)	990	590996	Key Set
			663	799846	Screw (Control Panel)	994	790153	Arrestor-Spark
			676B	697816	Deflector-Muffler	971	797686	Screw (Air Cleaner Base to Carburetor)
			677B	699776	Screw (Muffler Deflector)			
			689	799669	Spring-Friction			
			703	590967	Clip (Fuel Hose)			
			705	590965	Nut (Fuel Tank)			
			718	797792	Pin-Locating (Cylinder Head)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
10506-11 Assemblies include all parts shown in frames. 09/12/2014

# 19T100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1005	591789	Fan-Flywheel	1052	797771	Sensor-Oil	1210	591788	Pulley/Spring Assembly
1009	593136	Screw (Starter Motor)	1058	279127TRI	Manual-Operator's			(Pulley)
1012	590378	Retainer-Link			----- Note -----	1302	590457	Washer
1022	797846	Gasket-Rocker Cover			279127EST			(Muffler Guard)
1023	799778	Cover-Rocker Arm			Manual-Operator's	1302A	593727	Washer
1026	591818	Rod-Push			279127WST			(Muffler Guard)
1029	591087	Arm-Rocker			Manual-Operator's	1305	798618	Screw
1034	591819	Guide-Push Rod	1095	593113	Gasket Set-Valve			(Oil Sensor Module)
1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)	1119	799845	Screw (Alternator)	1319	794467	Label-Warning
			1177	590965	Nut (Muffler)	1319A	797669	Label-Warning

Not for  
Reproduction

Not for  
Reproduction

Not for  
Reproduction

Not for  
Reproduction

Not for  
Reproduction

