



Illustrated Parts List

Model Series

205300

TYPE NUMBERS
0036 through 1549.

TABLE OF CONTENTS

Air Cleaner	5
Alternator	10
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	8
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	9
Exhaust System	6
Flywheel	7
Fuel Supply	8
Gasket Set - Engine	3
Gasket Set - Valve	3
Gear Reduction	9
Governor Spring	8
Ignition	10
Kit-Carburetor Overhaul	4
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	7
Valves	3
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL


REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL











REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL





1330 REPAIR MANUAL






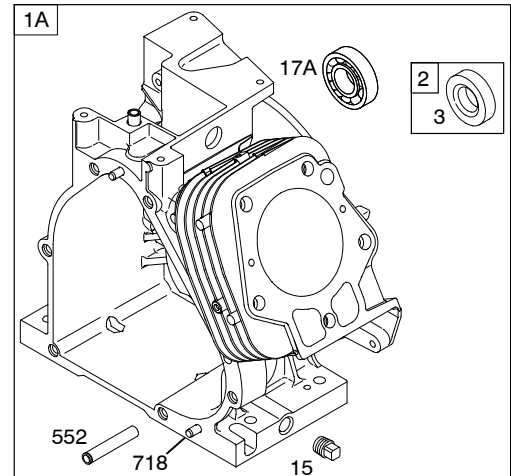



1036 EMISSIONS LABEL

 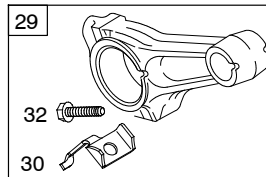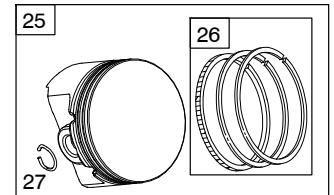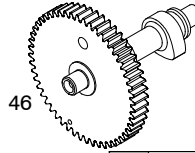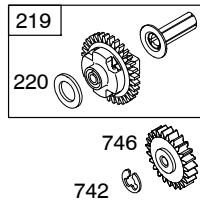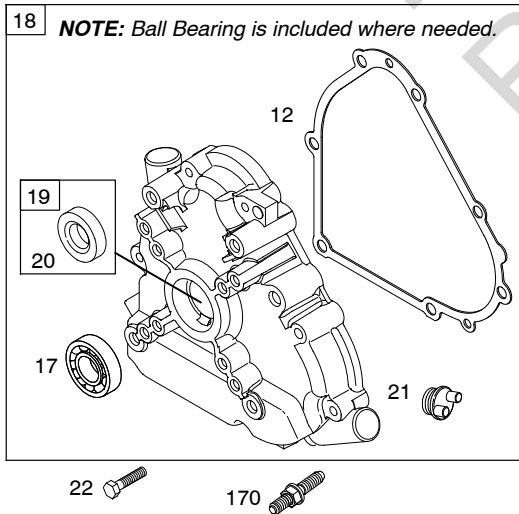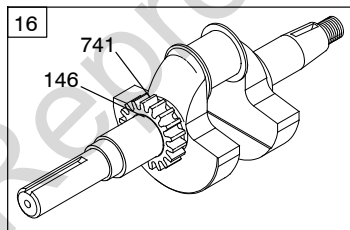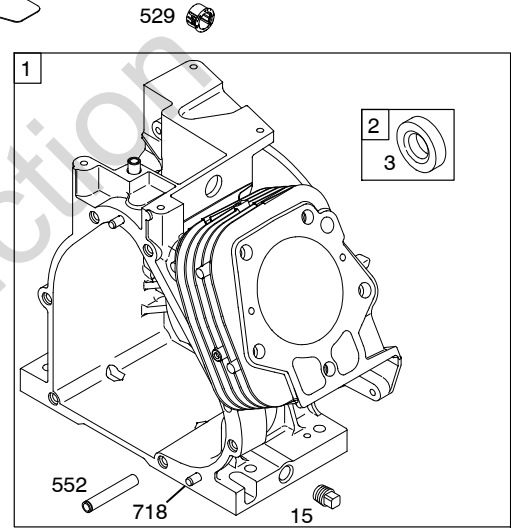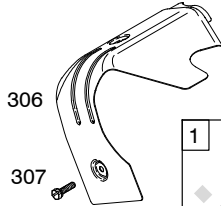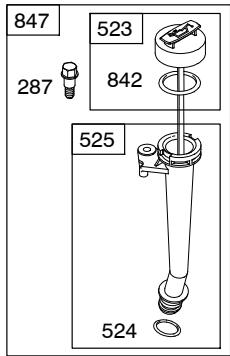













718A

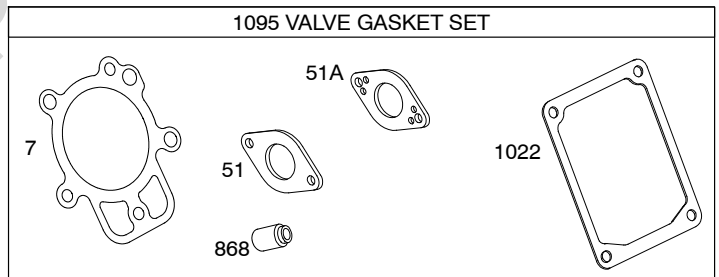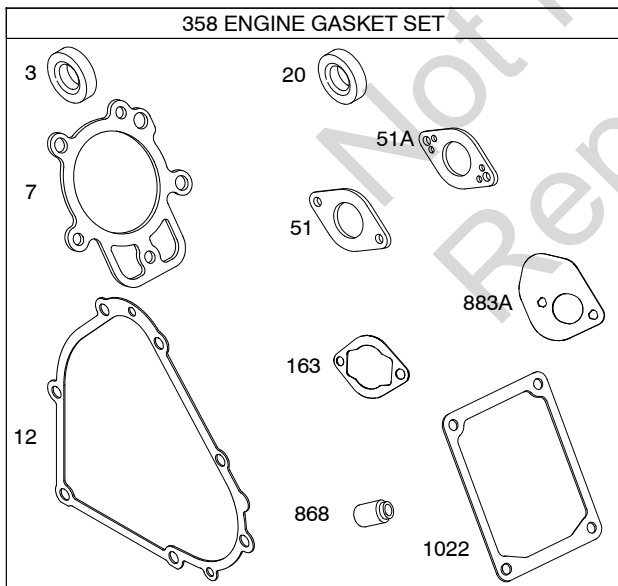 
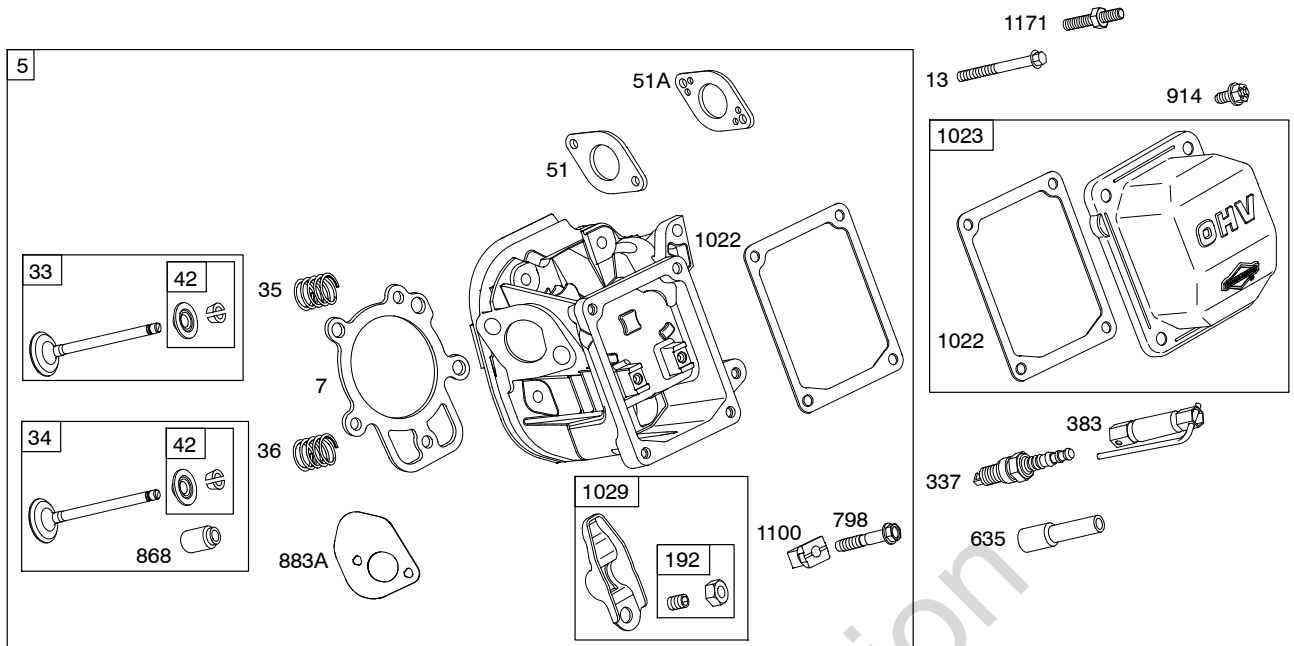


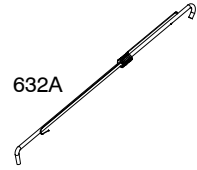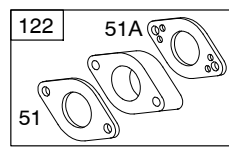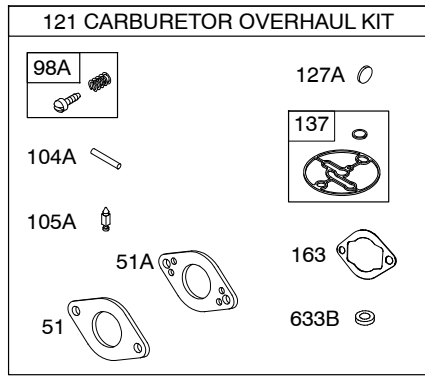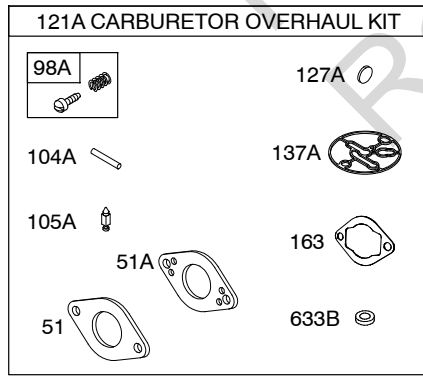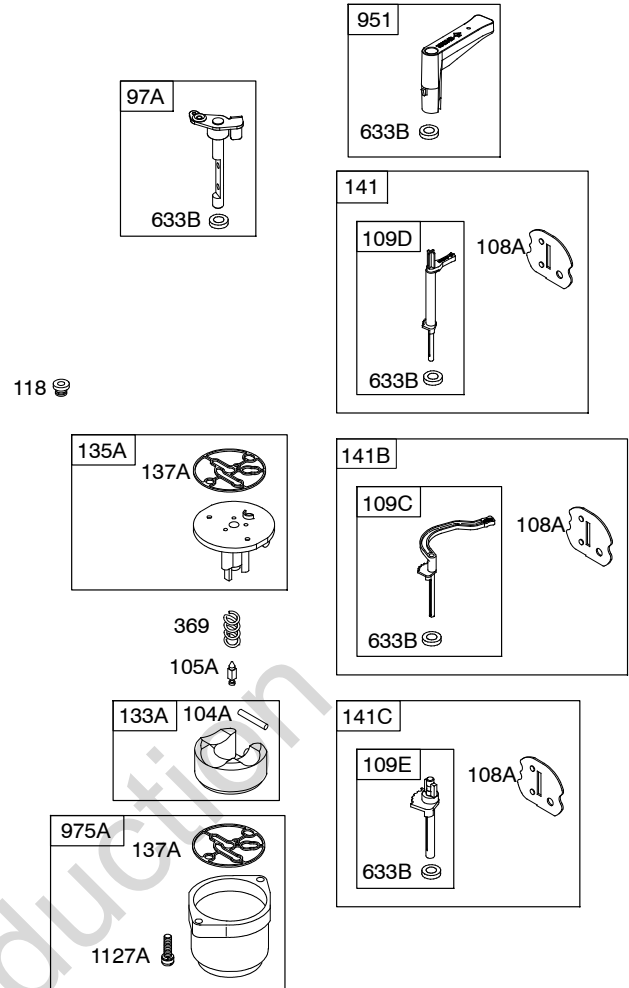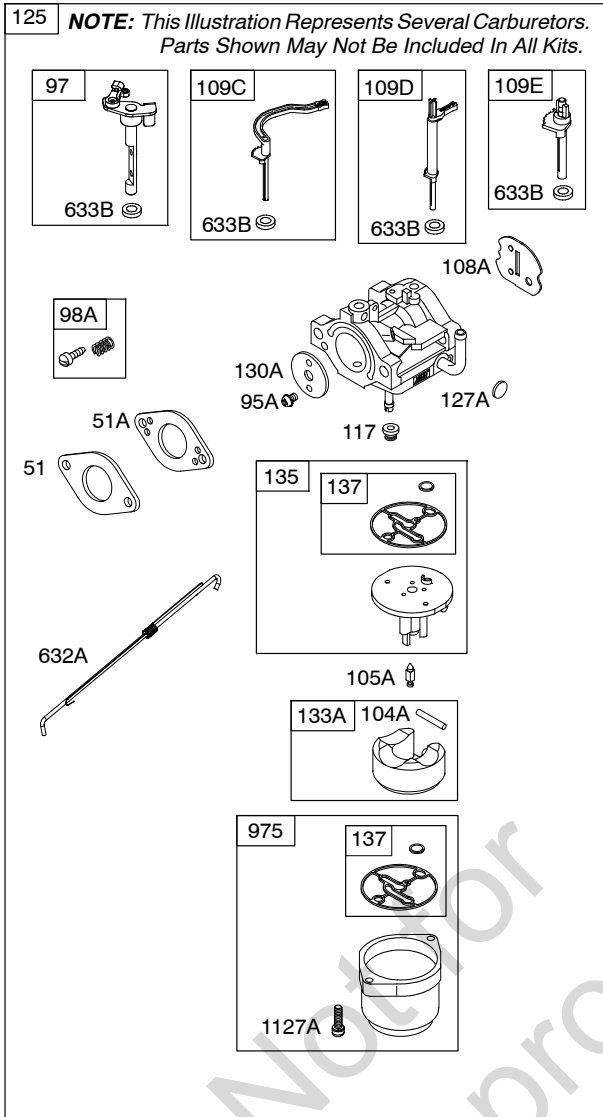

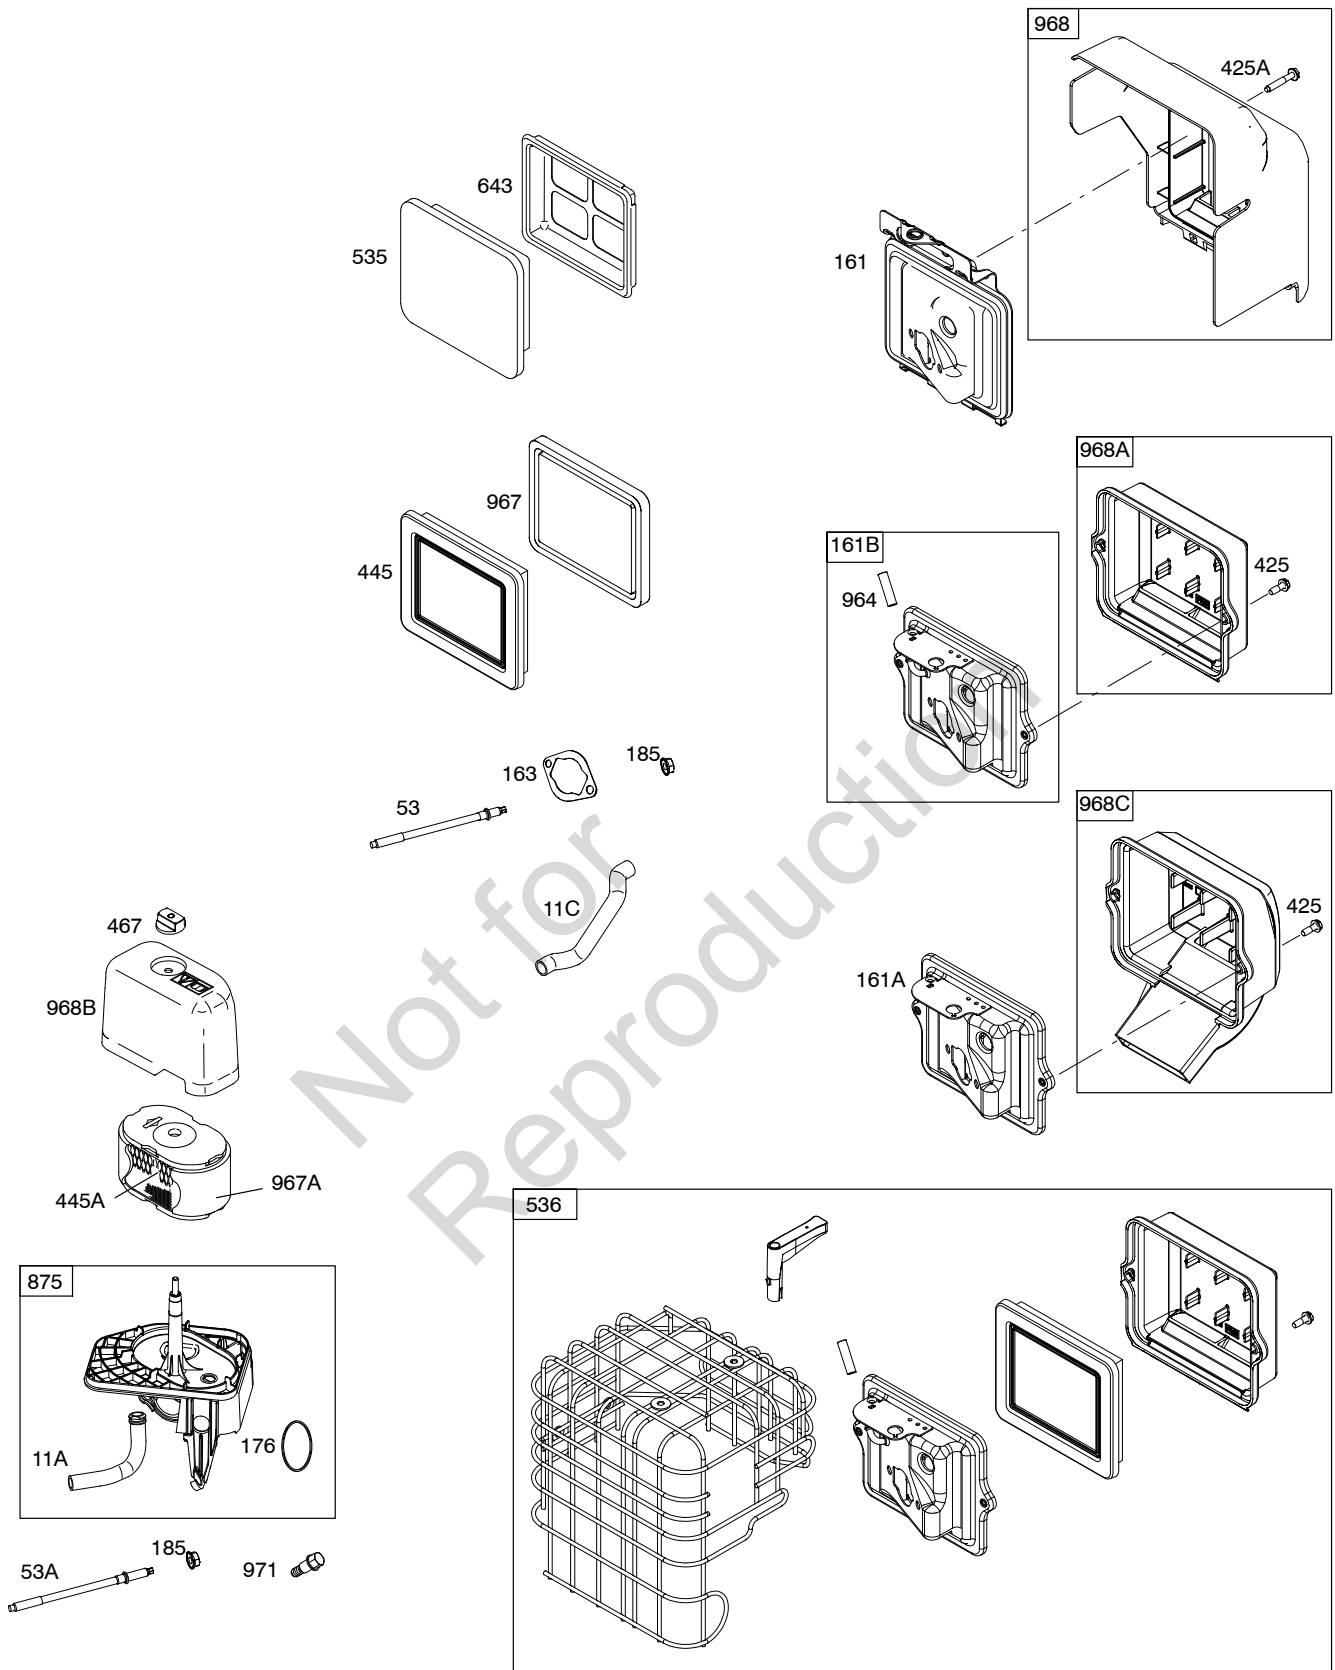


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3986-5 Assemblies include all parts shown in frames. 10/24/2012

  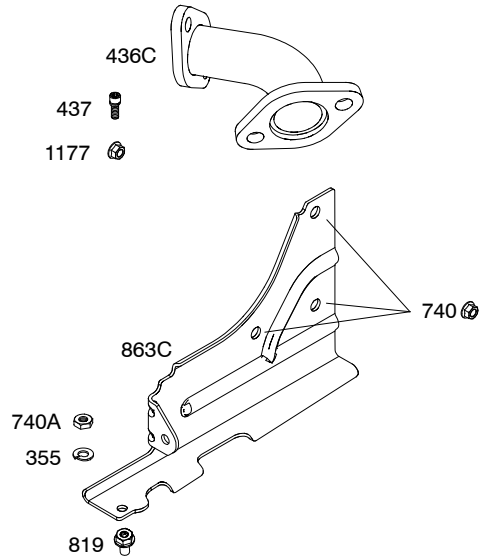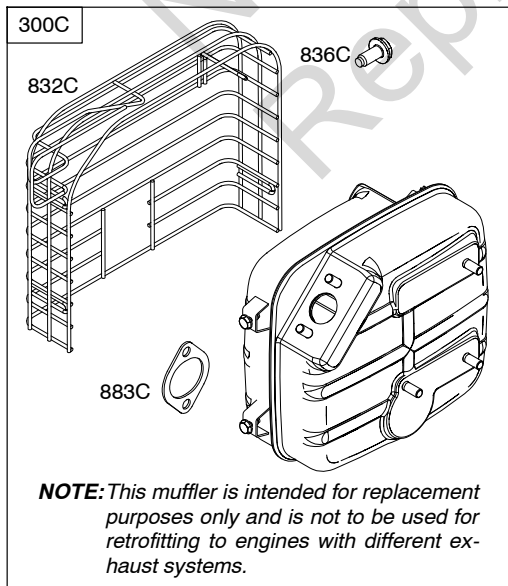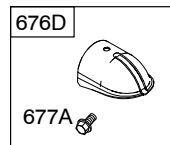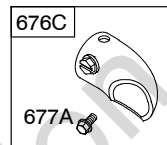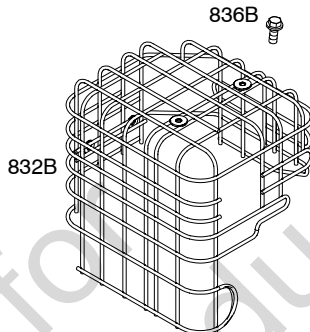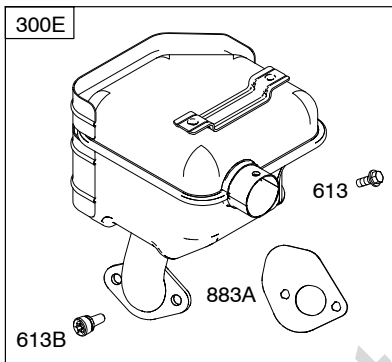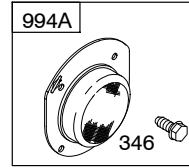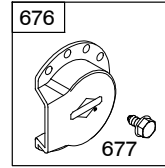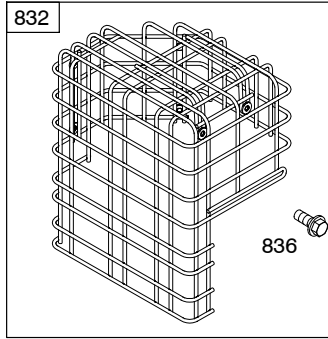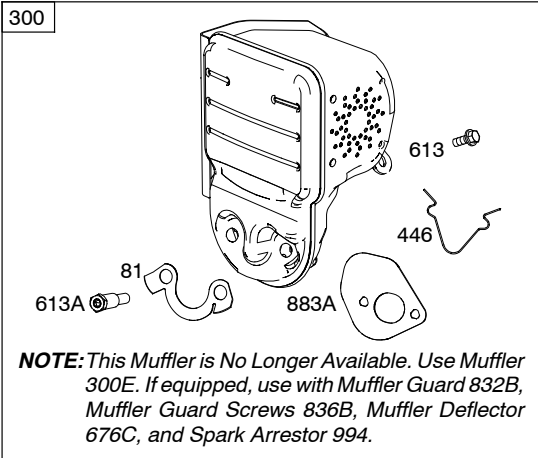

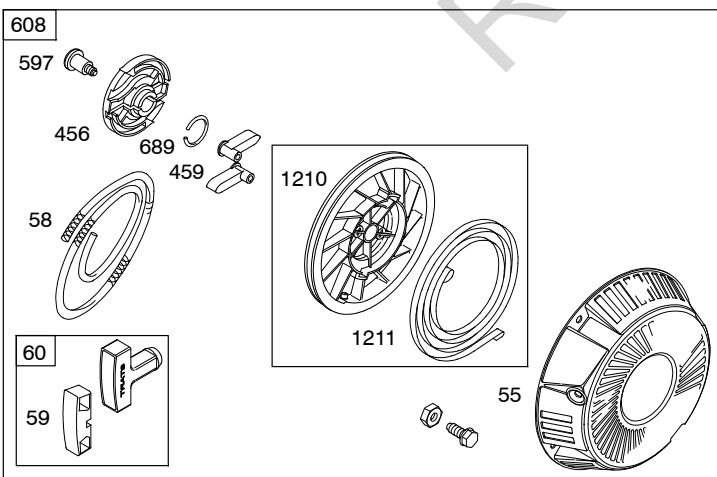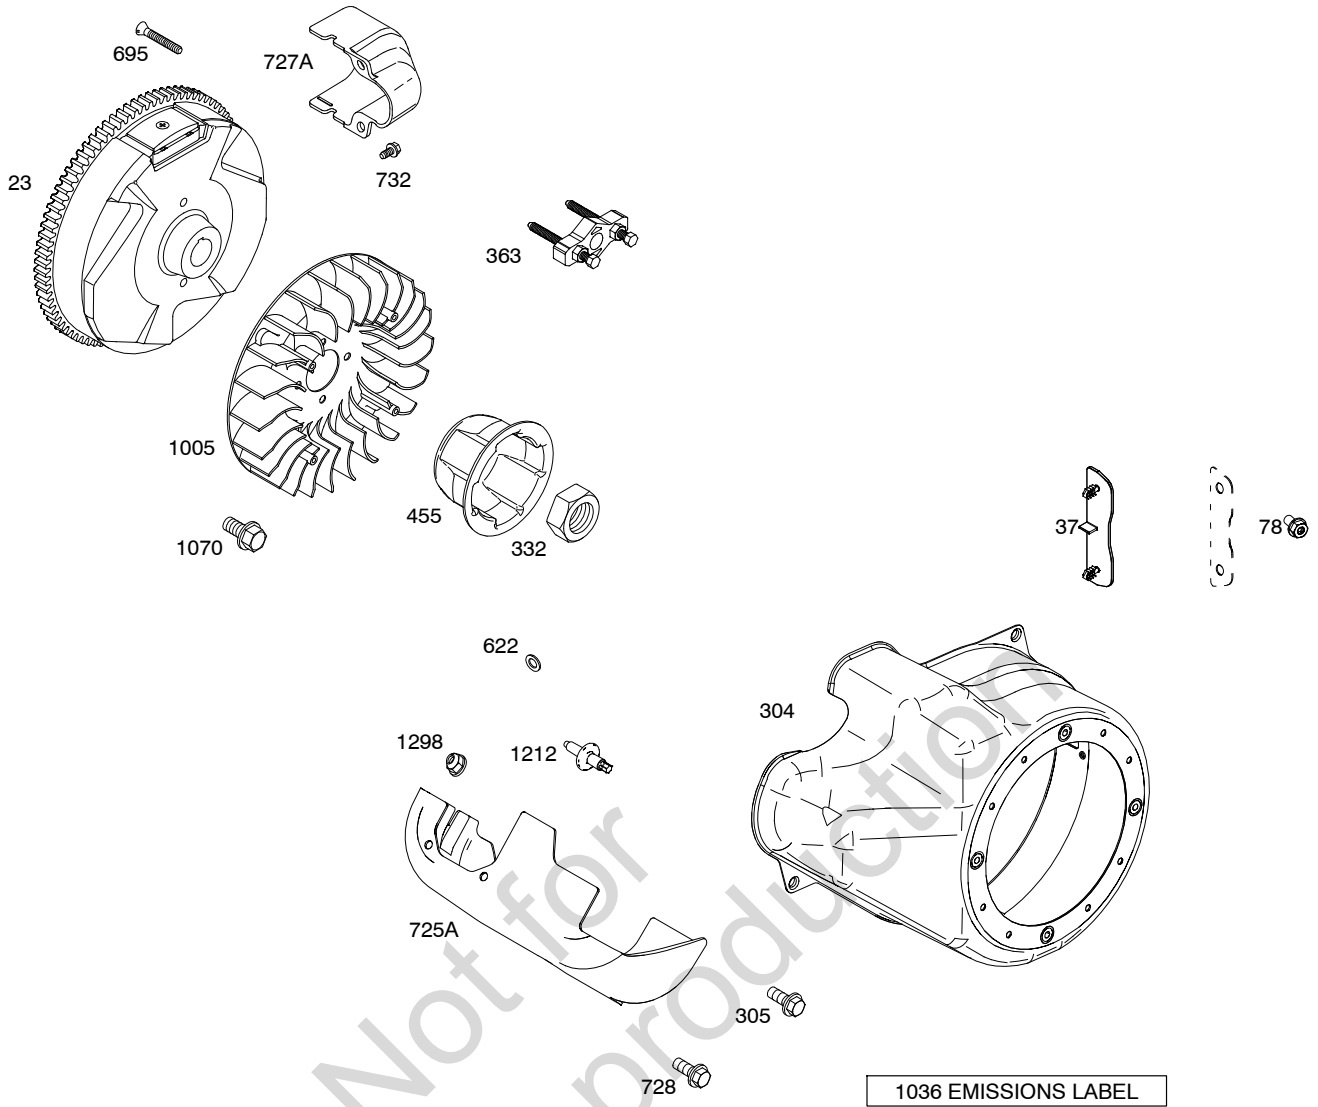


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3986-7 Assemblies include all parts shown in frames. 10/24/2012

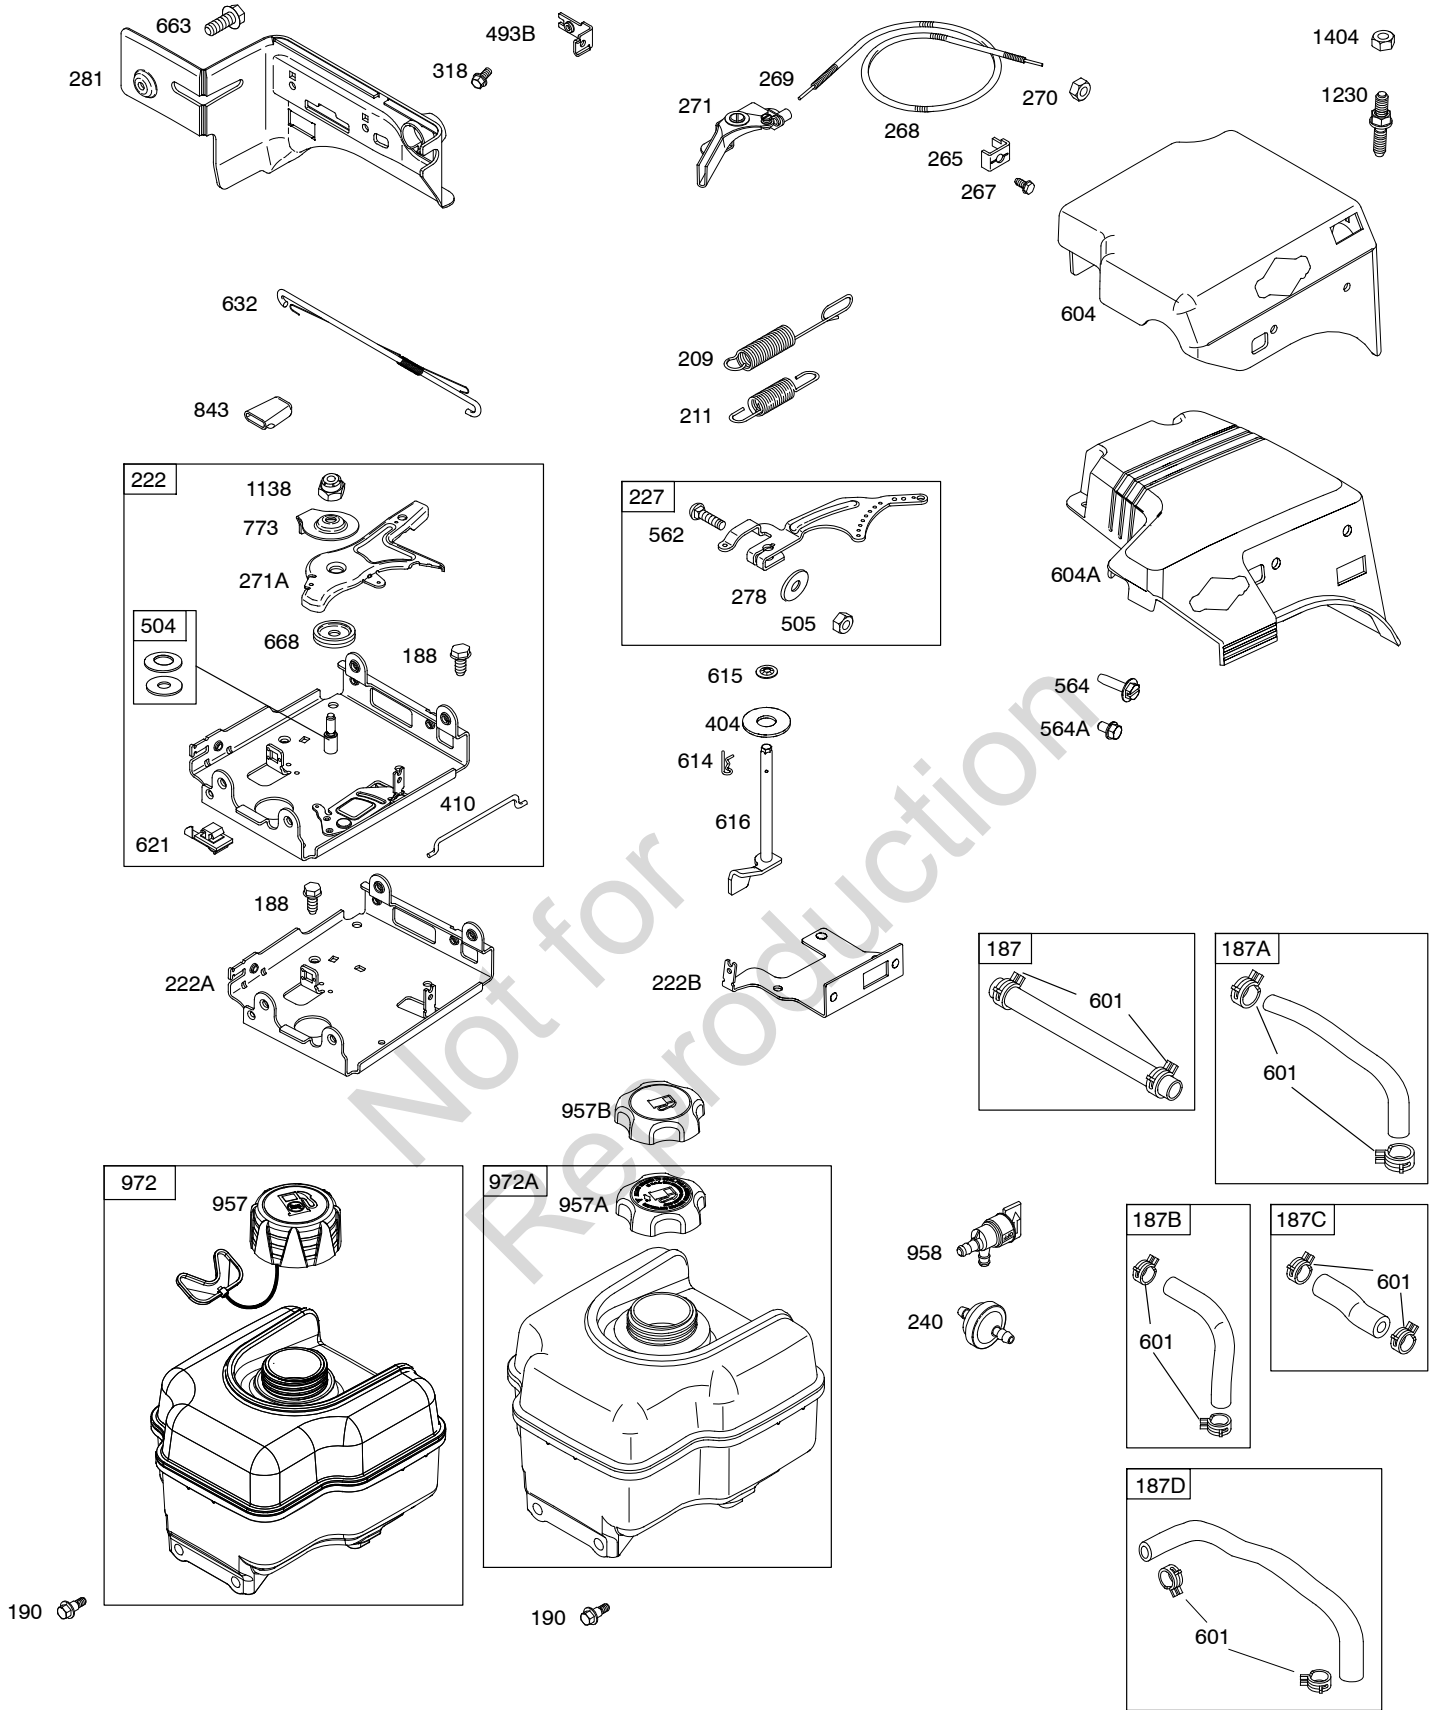

205300

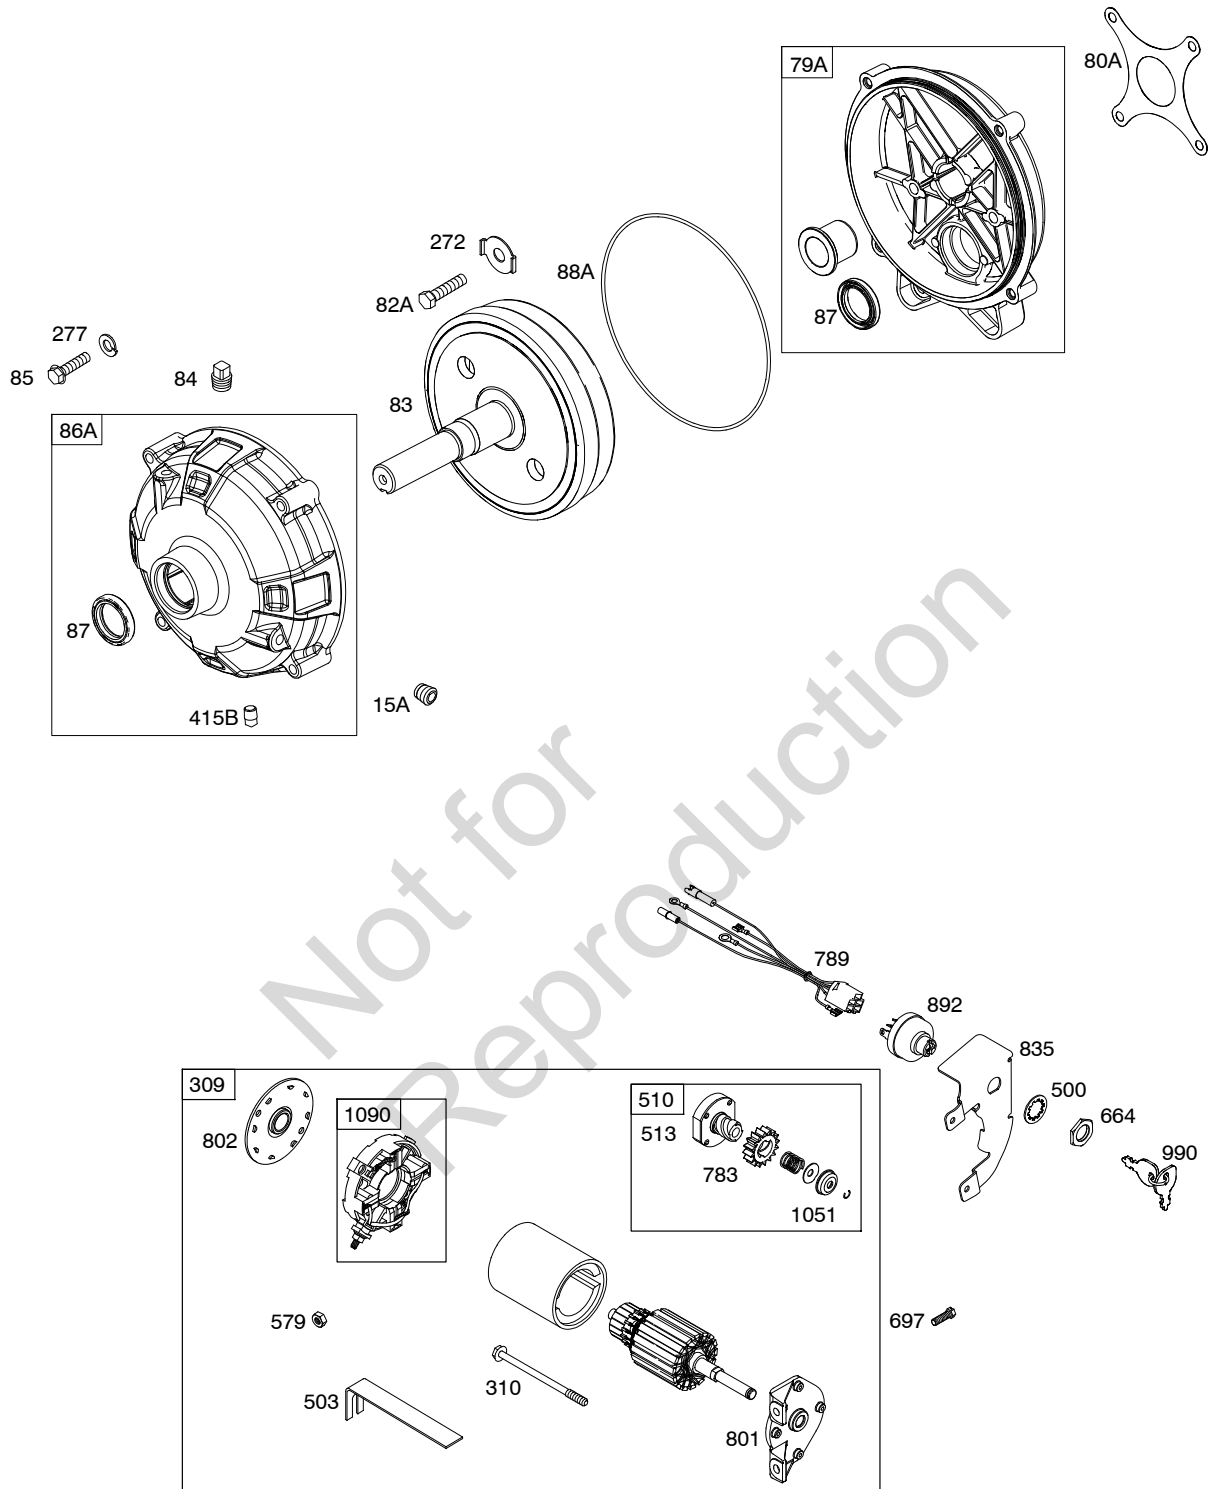


 
 
Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3986-8 Assemblies include all parts shown in frames. 10/24/2012














Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3986-9 Assemblies include all parts shown in frames. 10/24/2012

DC ONLY	10-16 AMP
474A 	474D 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

1119 	578 	526 501 
---	--	---

     493A

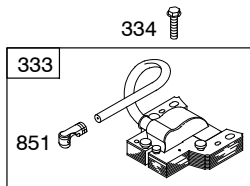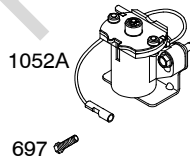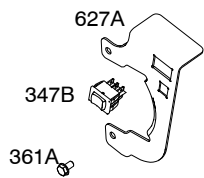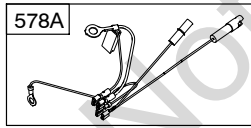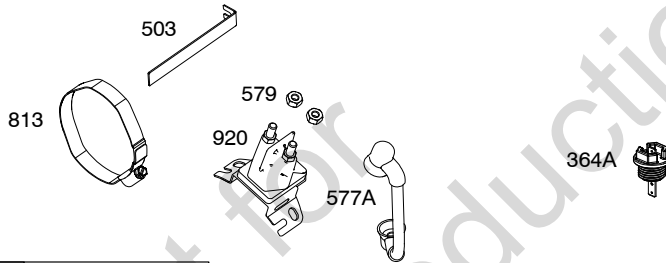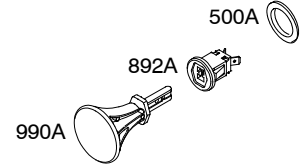REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	794849	Cylinder Assembly		794719	Crankshaft	22	794825	Screw	
1A	794851	Cylinder Assembly Used on Type No(s). 0172, 0173, 0241, 0245, 0317.			Used on Type No(s). 0128, 0134, 0165, 0166, 0196, 0229, 0307, 0535, 1035, 1165, 1166, 1196.			(Crankcase Cover/Sump)	
2	698340	Kit-Bushing/Seal (Magneto Side)		794720	Crankshaft	23	794814	Flywheel	
3	391086s	Seal-Oil (Magneto Side)			Used on Type No(s). 0124, 0305, 0533, 0563.			----- Note ----- 794812 Flywheel	
5	799859	Head-Cylinder		794721	Crankshaft			Used on Type No(s). 0041, 0116, 0120, 0134, 0150, 0169, 0172, 0197, 0204, 0210, 0216, 0218, 0242, 0302, 0303, 0311, 0312, 0317, 0319, 0322, 0533, 0541, 0542, 0550, 1041, 1050, 1172, 1174, 1185, 1198, 1313.	
7	694872	Gasket-Cylinder Head			Used on Type No(s). 0049, 0122, 0195, 0197, 0212, 0281, 0310, 0311, 0315, 0549, 0550, 1049, 1050, 1195, 1549.	24	222698s	Key-Flywheel	
11A	695305	Tube-Breather		17	695434	Bearing-Ball	25	792117	Piston Assembly (Standard)
11C	696796	Tube-Breather		17A	691069	Bearing-Ball			----- Note -----
12	694953	Gasket-Crankcase		18	791412	Cover-Crankcase			792144 Piston Assembly (.020" Oversize)
13	794829	Screw (Cylinder Head)			----- Note ----- 792139 Cover- Crankcase			Used on Type No(s). 0049, 0122, 0195, 0197, 0212, 0281, 0310, 0311, 0315, 0549, 0550, 1049, 1050, 1195, 1549.	
15	691686	Plug-Oil Drain			791965 Cover- Crankcase			Used on Type No(s). 0100, 0113, 0121, 0129, 0133, 0140, 0151, 0161, 0178, 0194, 0202, 0203, 0205, 0208, 0209, 0210, 0214, 0215, 0217, 0219, 0230, 0236, 0299, 0301, 0309, 1191.	
15A	691682	Plug-Oil Drain		19	698340	Kit-Bushing/Seal (PTO Side)			Used on Type No(s). 0115, 0116, 0119, 0120, 0141, 0168, 0173, 0203, 0213, 0218, 0280, 0299, 0303, 0304, 0306, 0314, 0317, 0322, 0537, 0542, 1171, 1172, 1183, 1197, 1198.
16	794716	Crankshaft Used on Type No(s). 0036, 0041, 0100, 0113, 0123, 0126, 0129, 0133, 0136, 0145, 0150, 0151, 0161, 0164, 0169, 0202, 0204, 0209, 0210, 0216, 0219, 0236, 0246, 0279, 0282, 0302, 0312, 0536, 0541, 1036, 1041, 1105, 1164, 1185, 1199, 1200, 1201.		20	391086s	Seal-Oil (PTO Side)			----- Note ----- 792073 Ring Set (.020" Oversize)
		----- Note ----- 794717 Crankshaft Used on Type No(s). 0115, 0116, 0119, 0120, 0141, 0168, 0173, 0203, 0213, 0218, 0280, 0299, 0303, 0304, 0306, 0314, 0317, 0322, 0537, 0542, 1171, 1172, 1183, 1197, 1198.		21	281658s	Cap-Oil Fill	26	792026	Ring Set (Standard)
		794718 Crankshaft Used on Type No(s). 0118, 0130, 0140, 0172, 0178, 0194, 0205, 0208, 0214, 0215, 0217, 0241, 0242, 0245, 0309, 0313, 0319, 0538, 1163, 1174, 1191, 1207, 1211, 1232, 1313.						----- Note ----- 792073 Ring Set (.020" Oversize)	
							27	690975	Lock-Piston Pin
							28	696581	Pin-Piston
							29	694691	Rod-Connecting
							30	694692	Dipper-Connecting Rod
							32	690976	Screw (Connecting Rod)
							33	697576	Valve-Exhaust
							34	792200	Valve-Intake
							35	694865	Spring-Valve (Intake)
							36	694865	Spring-Valve (Exhaust)
							37	795715	Guard-Flywheel
							42	499586	Keeper-Valve
							45	690977	Tappet-Valve
							46	795697	Camshaft
							51	694874	Gasket-Intake
							51A	694875	Gasket-Intake

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

205300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
53	794830	Stud (Carburetor)	83	690387	Shaft-Auxiliary Drive	117	796080	Jet-Main (Standard)
53A	794831	Stud (Carburetor) Used on Type No(s). 0113, 0116, 0118, 0119, 0120, 0122, 0123, 0128, 0130, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315.	84	691121	Plug-Breather			(Used After Code Date 08071700).
55	695288	Housing-Rewind Starter	85	794820	Screw (Gear Cover to Gear Reduction Case)			----- Note ----- 696134 Jet-Main (Standard) (Used Before Code Date 08071800).
58	693389	Rope-Starter (Cut To Required Length)	86A	793591	Cover-Gear Used on Type No(s). 0049, 0122, 0195, 0197, 0212, 0281, 0310, 0311, 0315, 0549, 0550, 1049, 1050, 1195, 1549.			796080 Jet-Main (Standard) (Used After Code Date 08081900).
59	805957	Insert-Grip	87	391086s	Seal-Gear Reduction			Used on Type No(s). 0113, 0118, 0119, 0120, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315.
60	490652	Grip-Starter Rope	88A	793589	Gasket-Gear Reduction Cover Used on Type No(s). 0049, 0122, 0195, 0197, 0212, 0281, 0310, 0311, 0315, 0549, 0550, 1049, 1050, 1195, 1549.			696134 Jet-Main (Standard) (Used Before Code Date 08082000).
65	699228	Screw (Rewind Starter)	95A	690718	Screw (Throttle Valve)			Used on Type No(s). 0113, 0118, 0119, 0120, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315.
78	795026	Screw (Flywheel Guard)	97	796334	Shaft-Throttle			696134 Jet-Main (Standard) (Used Before Code Date 08082000).
79A	794816	Case-Gear Reduction Used on Type No(s). 0049, 0122, 0195, 0197, 0212, 0281, 0310, 0311, 0315, 0549, 0550, 1049, 1050, 1195, 1549.	97A	696387	Shaft-Throttle			Used on Type No(s). 0113, 0118, 0119, 0120, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315.
80A	793588	Gasket-Gear Case Used on Type No(s). 0049, 0122, 0195, 0197, 0212, 0281, 0310, 0311, 0315, 0549, 0550, 1049, 1050, 1195, 1549.	98A	695408	Kit-Idle Speed			796080 Jet-Main (Standard) (Used After Code Date 09020800).
81	794817	Lock-Muffler Screw	104A	694918	Pin-Float Hinge			Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232.
82A	690287	Screw (Gear Reduction Case) Used on Type No(s). 0049, 0122, 0195, 0197, 0212, 0281, 0310, 0311, 0315, 0549, 0550, 1049, 1050, 1195, 1549.	105A	696136	Valve-Float Needle			696134 Jet-Main (Standard) (Used Before Code Date 09020900).
			108A	696143	Valve-Choke			Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232.
			109C	790148	Shaft-Choke Used on Type No(s). 0113, 0116, 0118, 0119, 0120, 0122, 0123, 0128, 0130, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315.			
			109D	790149	Shaft-Choke			
			109E	696735	Shaft-Choke			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3986-12 Assemblies include all parts shown in frames. 10/24/2012

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	796128	Jet-Main (High Altitude) (Used After Code Date 08071700). ----- Note ----- 696135 Jet-Main (High Altitude) (Used Before Code Date 08071800). 796128 Jet-Main (High Altitude) (Used After Code Date 08081900). Used on Type No(s). 0113, 0118, 0119, 0120, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315. 696135 Jet-Main (High Altitude) (Used Before Code Date 08082000). Used on Type No(s). 0113, 0118, 0119, 0120, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315. 796128 Jet-Main (High Altitude) (Used After Code Date 09020800). Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232. 696135 Jet-Main (High Altitude) (Used Before Code Date 09020900). Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232.	121	796137	Kit-Carburetor Overhaul	190	699220	Screw (Fuel Tank)
			121A	696146	Kit-Carburetor Overhaul	192	690083	Adjuster-Rocker Arm
			122	694876	Spacer- Carburetor	209	694867	Spring-Governor ----- Note ----- 695491 Spring-Governor Used on Type No(s). 0165, 0212, 1165. 696638 Spring-Governor Used on Type No(s). 0115, 0129, 0134, 0141, 0151, 0209, 0210, 0246, 0280, 1232.
			125	796321	Carburetor	211	695307	Spring-Governed Idle
			127A	690727	Plug-Welch	219	693578	Gear-Governor
			130A	696139	Valve-Throttle	220	691724	Washer (Governor Gear)
			133A	694914	Float-Carburetor	222	794799	Bracket-Control
			135	698780	Tube-Fuel Transfer	222A	794801	Bracket-Control Used on Type No(s). 0130, 0140, 0165, 0178, 0208, 0212, 0214, 0215, 0242, 0309, 0538, 1163, 1165, 1174, 1191, 1207, 1211, 1232, 1313.
			135A	696142	Tube-Fuel Transfer	222B	794804	Bracket-Control Used on Type No(s). 0172, 0194, 0205, 0217, 0241, 0245, 0319.
			137	698781	Gasket-Float Bowl	227	694864	Lever-Governor Control
			137A	695426	Gasket-Float Bowl	240	394358s	Filter-Fuel ----- Note ----- 298090s Filter-Fuel Used on Type No(s). 0118, 0172.
			141	696145	Kit-Choke Shaft	265	691024	Clamp-Casing
			141B	696144	Kit-Choke Shaft Used on Type No(s). 0113, 0116, 0118, 0119, 0120, 0122, 0123, 0128, 0130, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315.	267	699492	Screw (Casing Clamp)
			141C	699979	Kit-Choke Shaft	268	691025	Casing-Control Wire (Cut To Required Length)
			146	690979	Key-Timing	269	691026	Wire-Control (Cut To Required Length)
			161		Base-Air Cleaner (Metal) (No Longer Available) (For Replacement, Order Reference 536)	270	691027	Nut (Control Wire Casing)
			161A	794767	Base-Air Cleaner (Metal)			
			161B	591217	Base-Air Cleaner (Metal)			
			163	692277	Gasket-Air Cleaner			
			170	794833	Stud (Crankcase Cover/Sump)			
			176	691917	Seal-O Ring (Air Cleaner Base)			
			185	794838	Nut (Air Cleaner Base)			
			187	791766	Line-Fuel (15 Inches Long) (Cut To Required Length)			
			187A	791869	Line-Fuel			
			187B	791834	Line-Fuel			
			187C	791871	Line-Fuel			
			187D	791879	Line-Fuel			
			188	699479	Screw (Control Bracket)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

205300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
271	691028	Lever-Control	304	591545	Housing-Blower (Used After Code Date 12012300)	346	794845	Screw (Spark Arrestor)
271A	695381	Lever-Control				347	697854	Switch-Rocker
272	691168	Lock-Screw Head			----- Note -----			----- Note -----
277	794842	Washer (Gear Case To Gear Reduction)			795699 Housing-Blower (Used Before Code Date 12012400)			795333 Switch-Rocker Used on Type No(s). 0115, 0126, 0141, 0280, 0314, 0538.
278	798196	Washer (Governor Control Lever) (Used After Code Date 09101800).	305	699481	Screw (Blower Housing)	347B	790949	Switch-Rocker Used on Type No(s). 0041, 0116, 0120, 0169, 0172, 0197, 0210, 0218, 0302, 0303, 0311, 0317, 0541, 0542, 0550, 1041, 1050.
		----- Note -----	306	697240	Shield-Cylinder			
		792008 Washer (Governor Control Lever) (Used Before Code Date 09101900).	307	794822	Screw (Cylinder Shield)			
281	697268	Panel-Control	309	695479	Motor-Starter			
286	793696	Module-Oil Sensor	310	690323	Screw (Starter Motor)			
		----- Note -----	318	699234	Screw (Mounting Bracket) (Remote Choke)	355	691075	Washer (Muffler Bracket)
		699952 Module-Oil Sensor Used on Type No(s). 0168, 0306.	332	794824	Nut (Flywheel)	356	695630	Wire-Stop
287	699234	Screw (Dipstick Tube)	333	492341	Armature-Magneto	356A	692390	Wire-Stop
300		Muffler (No Longer Available) (Use Muffler Reference 300E. If equipped, use with Muffler Guard 832B, Muffler Guard Screws 836B, Muffler Deflector 676C, and Spark Arrestor 994)	334	699477	Screw (Magneto Armature)	356B	699340	Wire-Stop
			337	491055s	Plug-Spark	356C	695295	Wire-Stop
					----- Note -----	356D	694860	Wire-Stop
					691043 Plug-Spark Used on Type No(s). 0115, 0123, 0130, 0134, 0141, 0164, 0165, 0166, 0195, 0196, 0242, 0282, 0314, 0315, 0319, 0533, 0535, 0536, 0537, 0538, 0541, 0542, 0549, 0550, 0563, 1105, 1163, 1164, 1165, 1166, 1174, 1183, 1185, 1191, 1195, 1196, 1199, 1200, 1201, 1207, 1211, 1313, 1549.	356E	696328	Wire-Stop
					792015 Plug-Spark Used on Type No(s). 0219, 0280.	356H	795332	Wire-Stop
300C	793701	Muffler (This muffler is intended for replacement purposes only and is not to be used for retrofitting to engines with different exhaust systems)				356J	699994	Wire-Stop
300E	794949	Muffler				356K	697397	Wire-Stop
						356L	792609	Wire-Stop
						358	695438	Gasket Set-Engine
						361A	691693	Screw (Starting Switch)
						363	19203	Puller-Flywheel
						364A	699947	Terminal-Oil Plug

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3986-14 Assemblies include all parts shown in frames. 10/24/2012

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
369	695422	Spring-Float Bowl (Used Before Code Date 08071800). ----- Note ----- 695422 Spring-Float Bowl (Used Before Code Date 08082000). Used on Type No(s). 0113, 0118, 0119, 0120, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315. 695422 Spring-Float Bowl (Used Before Code Date 09020900). Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232.	445	491588s	Filter-Air Cleaner Cartridge	529	791822	Grommet
			445A	695302	Filter-Air Cleaner Cartridge	535	696315	Filter-Air Cleaner Foam Used on Type No(s). 0173, 0241, 0317.
			446	794941	Spring-Retainer	536	591546	Cleaner-Air
			455	794867	Cup-Flywheel	552	694674	Bushing-Governor Crank
			456	692299	Plate-Pawl Friction	562	798197	Bolt (Governor Control Lever) (Used After Code Date 09101800). ----- Note ----- 793216 Bolt (Governor Control Lever) (Used Before Code Date 09101900).
			459	281505s	Pawl-Ratchet			
			467	691668	Knob-Air Cleaner	564	699492	Screw (Control Cover) (18.67 mm Long)
			474A	695730	Alternator (3 Amps DC)	564A	699491	Screw (Control Cover) (10.75 mm Long) Used on Type No(s). 0118.
			474D	695466	Alternator (10 Amp Regulator)	577A	690795	Cable-Starter
			493A	691177	Bracket-Mounting	578	692306	Wire Assembly Used on Type No(s). 0204, 0210, 0216, 0242, 0317, 0319, 1185, 1313.
			493B	794782	Bracket-Mounting (Remote Choke)	578A	790948	Wire Assembly
			500	691086	Washer (Key Switch) Used on Type No(s). 0134.	579	691029	Nut (Starter Cable)
			500A	792613	Washer (Key Switch)	597	691696	Screw (Pawl Friction Plate)
			501	797375	Regulator	601	791850	Clamp-Hose
			503	691532	Strap-Starter	604	699066	Cover-Control Used on Type No(s). 0118.
			504	695383	Washer Set-Friction			
			505	793515	Nut (Governor Control Lever) (Used After Code Date 09101800). ----- Note ----- 691251 Nut (Governor Control Lever) (Used Before Code Date 09101900).			
383	19576s	Wrench-Spark Plug	510	693699	Drive-Starter			
404	795759	Washer (Governor Crank)	513	692024	Clutch-Drive			
410	695382	Link-Control	522	697689	Plug-Dipstick/Fill			
415	691363	Plug	523	695344	Dipstick			
415B	794903	Plug	524	691876	Seal-Dipstick Tube			
415C	693463	Plug Used on Type No(s). 0241, 0245.	525	695343	Tube-Dipstick			
425	794836	Screw (Air Cleaner Cover)	526	690297	Screw (Regulator)			
425A	794835	Screw (Air Cleaner Cover)						
436C	792374	Manifold-Exhaust						
437	794844	Screw (Exhaust Manifold)						
441	797125	Bracket-Oil Fill Used on Type No(s). 0319.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

205300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
604A	791752	Cover-Control Used on Type No(s). 0172, 0194, 0205, 0217, 0241, 0245, 0319.	632A	796324	Link-Throttle (Used After Code Date 08071700). ----- Note ----- 796324 Spring/Link- Mechanical Governor (Used After Code Date 08081900). Used on Type No(s). 0113, 0118, 0119, 0120, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315. 796324 Spring/Link- Mechanical Governor (Used After Code Date 09020800). Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232.	689	691855	Spring-Friction
608	695287	Starter-Rewind	633B	690998	Seal-Choke/Throttle Shaft	695	698807	Screw (Ring Gear)
613	794846	Screw (Muffler)	635	691909	Boot-Spark Plug	697	795026	Screw (Drive Cap)
613A	794848	Screw (Muffler)	643	696264	Retainer-Air Filter Used on Type No(s). 0173, 0241, 0317.	718	690959	Pin-Locating
613B	794844	Screw (Muffler)	663	699492	Screw (Control Panel)	718A	695178	Pin-Locating (Head)
614	691620	Pin-Cotter (Governor Crank)	664	691087	Nut (Key Switch) Used on Type No(s). 0134.	725A	795886	Shield-Heat (Used After Code Date 11020600). ----- Note ----- 792995 Shield-Heat (Used Before Code Date 11020700).
615	694676	Retainer-Governor Shaft (Governor Gear) (Used Before Code Date 08021500).	666	694257	Spacer (Control Bracket)	727A	697465	Cover-Starter Drive
616	795758	Crank-Governor	676	795036	Deflector-Muffler	728	699481	Screw (Heat Shield)
621	692310	Switch-Stop	676B	795038	Deflector-Muffler (Louvered)	732	699200	Screw (Starter Drive Cover)
622	794839	Washer (Heat Shield)	676C	697816	Deflector-Muffler	740	710090	Nut (Muffler Bracket)
627A	792608	Bracket-Stopswitch	676D	794213	Deflector-Muffler	740A	794843	Nut (Muffler Bracket)
632	695917	Spring/Link- Mechanical Governor (Used Before Code Date 08071800). ----- Note ----- 695917 Spring/Link- Mechanical Governor (Used Before Code Date 08082000). Used on Type No(s). 0113, 0118, 0119, 0120, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315. 695917 Spring/Link- Mechanical Governor (Used Before Code Date 09020900). Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232.	677	794845	Screw (Muffler Deflector)	741	691288	Gear-Timing
			677A	699776	Screw (Muffler Deflector)	742	692564	Retainer-E Ring
						746	694679	Gear-Idler
						773	694258	Retainer
						774	695447	Screw (Stop Wire)
						783	693713	Gear-Pinion
						789	797457	Harness-Wiring Used on Type No(s). 0134.
						798	697890	Screw (Rocker Arm)
						799	794937	Screw (Oil Sensor) (Shoulder Screw) ----- Note ----- 699691 Screw (Oil Sensor)
						801	694482	Cap-Drive
						802	691286	Cap-End
						813	690635	Clamp
						819	794832	Screw (Muffler Bracket)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3986-16 Assemblies include all parts shown in frames. 10/24/2012

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
832	795035	Guard-Muffler	972	799863	Tank-Fuel	990	691959	Key Set
832B	590767	Guard-Muffler	972A		Tank-Fuel	990A	794696	Key Set
832C	792380	Guard-Muffler			(Plastic)	994	790153	Arrestor-Spark
835	797458	Bracket-Wire Harness Used on Type No(s). 0134.			(No Longer Available) (For Replacement, Order Reference 972)	994A	794945	Arrestor-Spark
836	794845	Screw (Muffler Guard)	975	698783	Bowl-Float (Used After Code Date 08071700).	1005	794815	Fan-Flywheel
836B	699234	Screw (Muffler Guard)			----- Note -----	1022	690971	Gasket-Rocker Cover
836C	710023	Screw (Muffler Guard)			698783 Bowl-Float (Used After Code Date 08081900).	1023	697691	Cover-Rocker
842	691031	Seal-O Ring (Dipstick Tube)			Used on Type No(s). 0113, 0118, 0119, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315.	1026	799862	Rod-Push
843	695588	Sleeve-Lever			698783 Bowl-Float (Used After Code Date 09020800).	1029	690972	Arm-Rocker
847	695342	Dipstick/Tube Assembly			Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232.	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
851	692424	Terminal-Spark Plug				1046	691337	Plug-Blower Housing
863C	793700	Bracket-Muffler				1051	691265	Ring-Retaining
868	690968	Seal-Valve				1052A	794805	Sensor-Oil
875	797667	Base-Air Cleaner (Plastic)				1054	280275	Tie-Cable
883A	794818	Gasket-Exhaust				1058	277040	Operator's Manual
883C	710250	Gasket-Exhaust				1070	794821	Screw (Flywheel Fan)
892	692318	Switch-Key Used on Type No(s). 0134.				1090	691293	Retainer-Brush
892A	791944	Switch-Key				1095	695440	Gasket Set-Valve
914	794827	Screw (Rocker Cover)				1100	791959	Pivot-Rocker Arm
920	691656	Solenoid-Starter	975A	696138	Bowl-Float (Used Before Code Date 08071800).	1119	699772	Screw (Alternator)
951	699961	Lever-Choke			----- Note -----	1127A	695407	Screw (Float Bowl)
957	799719	Cap-Fuel Tank (Plastic)			696138 Bowl-Float (Used Before Code Date 08082000).	1138	694255	Nut (Control Bracket)
957A	792647	Cap-Fuel Tank (Plastic) (Fresh Start)			Used on Type No(s). 0113, 0118, 0119, 0122, 0123, 0197, 0213, 0218, 0229, 0281, 0303, 0304, 0305, 0307, 0310, 0311, 0313, 0314, 0315.	1171	794828	Stud (Rocker Cover)
957B	795027	Cap-Fuel Tank (Plastic)			696138 Bowl-Float (Used Before Code Date 09020900).	1177	710090	Nut (Muffler)
958	698180	Valve-Fuel Shut Off (Plastic)			Used on Type No(s). 0115, 0140, 0172, 0178, 0194, 0205, 0212, 0214, 0215, 0216, 0217, 0280, 0538, 1207, 1232.	1194	691876	Seal-O Ring (Plug)
964	799159	Cap-Connector				1210	498144	Pulley/Spring Assembly (Pulley)
967	491435s	Filter-Pre Cleaner				1211	498144	Pulley/Spring Assembly (Spring)
967A	695303	Filter-Pre Cleaner Cover-Air Cleaner (No Longer Available) (For Replacement, Order Reference 536)				1212	794841	Stud (Blower Housing)
968		Cover-Air Cleaner (No Longer Available) (For Replacement, Order Reference 536)				1230	794840	Stud (Control Bracket)
968A	794784	Cover-Air Cleaner				1298	794838	Nut (Heat Shield)
968B	695301	Cover-Air Cleaner				1319	794467	Label-Warning
968C	795337	Cover-Air Cleaner				1319A	797669	Label-Warning
971	794837	Screw (Air Cleaner Base to Carburetor)				1330	276781	Repair Manual
						1404	794838	Nut (Control Cover)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

