



Illustrated Parts List

Model Series

127300

TYPE NUMBERS
0036 through 0171.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	7
Fuel Supply	5
Gear Reduction	6
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	5
Piston Group	2
Rewind Starter	7

PRINTED IN U.S.A.















COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

127300




1019 LABEL KIT

1058 OWNER'S MANUAL




1330 REPAIR MANUAL

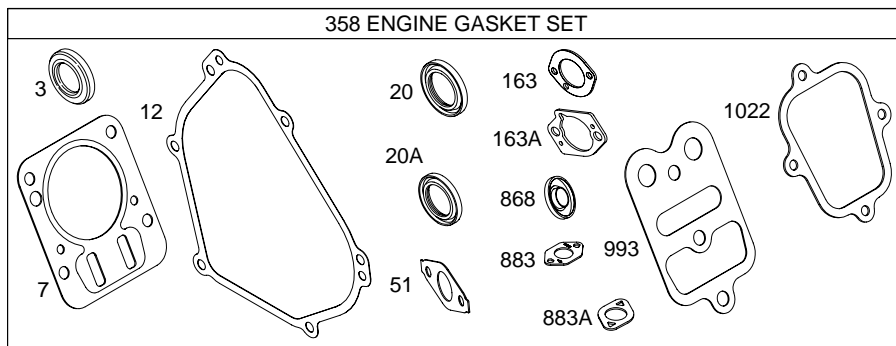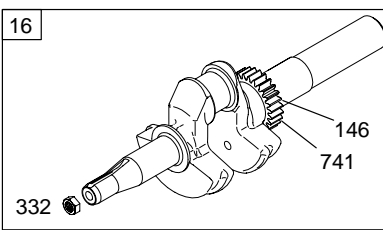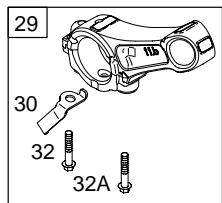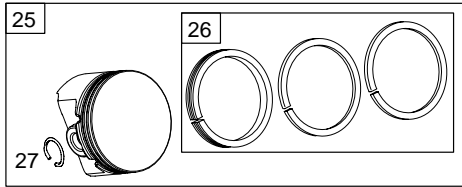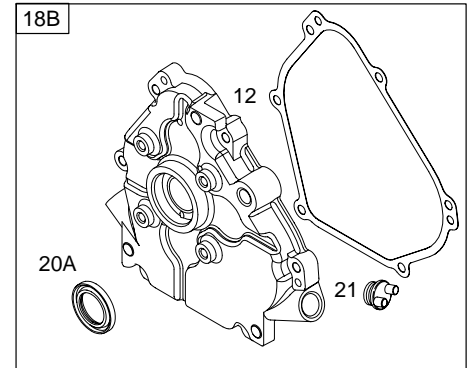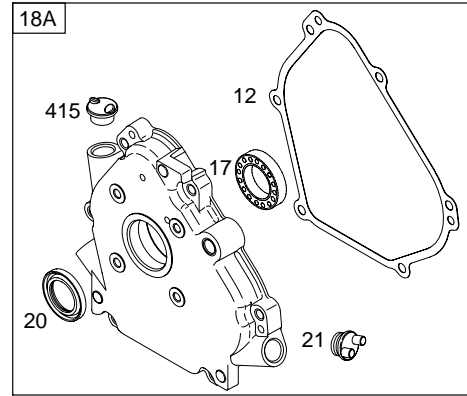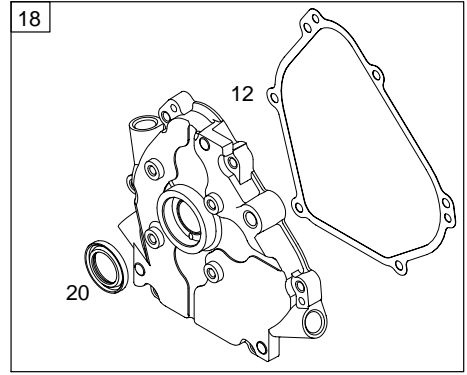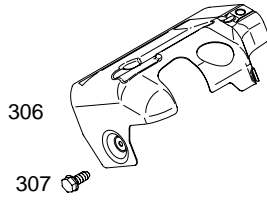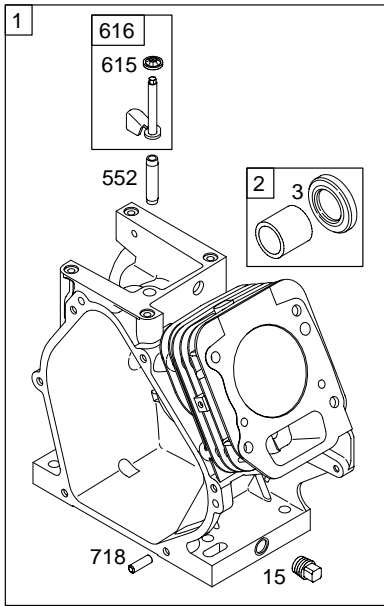


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5720-2 Assemblies include all parts shown in frames. 08/17/2005

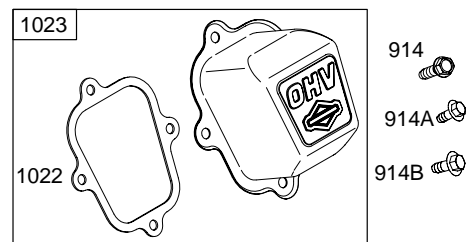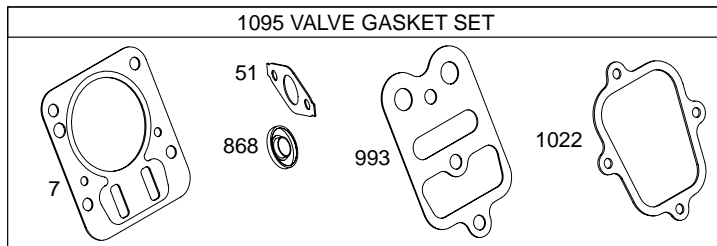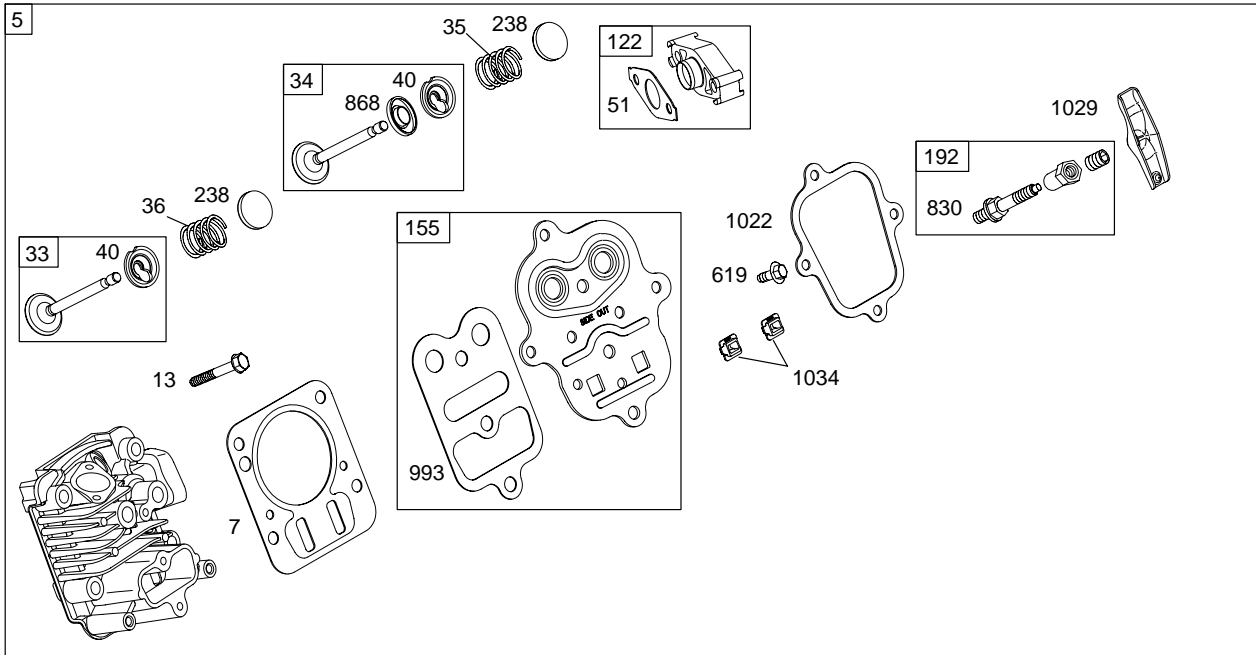

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5720-3 Assemblies include all parts shown in frames. 08/17/2005

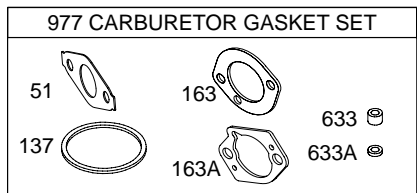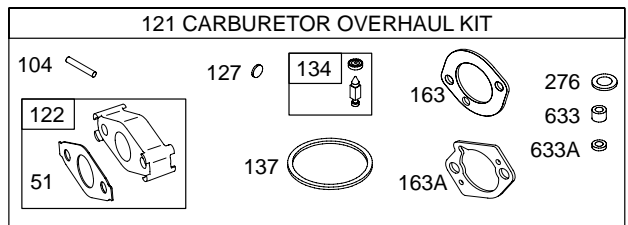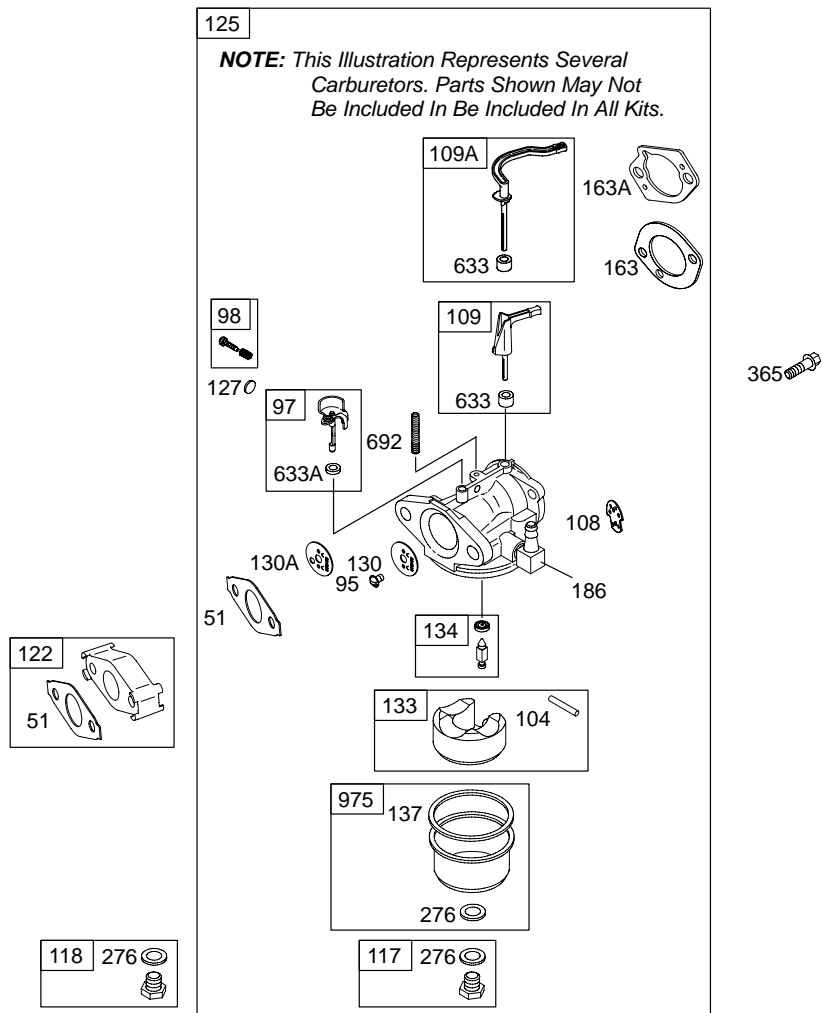


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5720-4 Assemblies include all parts shown in frames. 08/17/2005



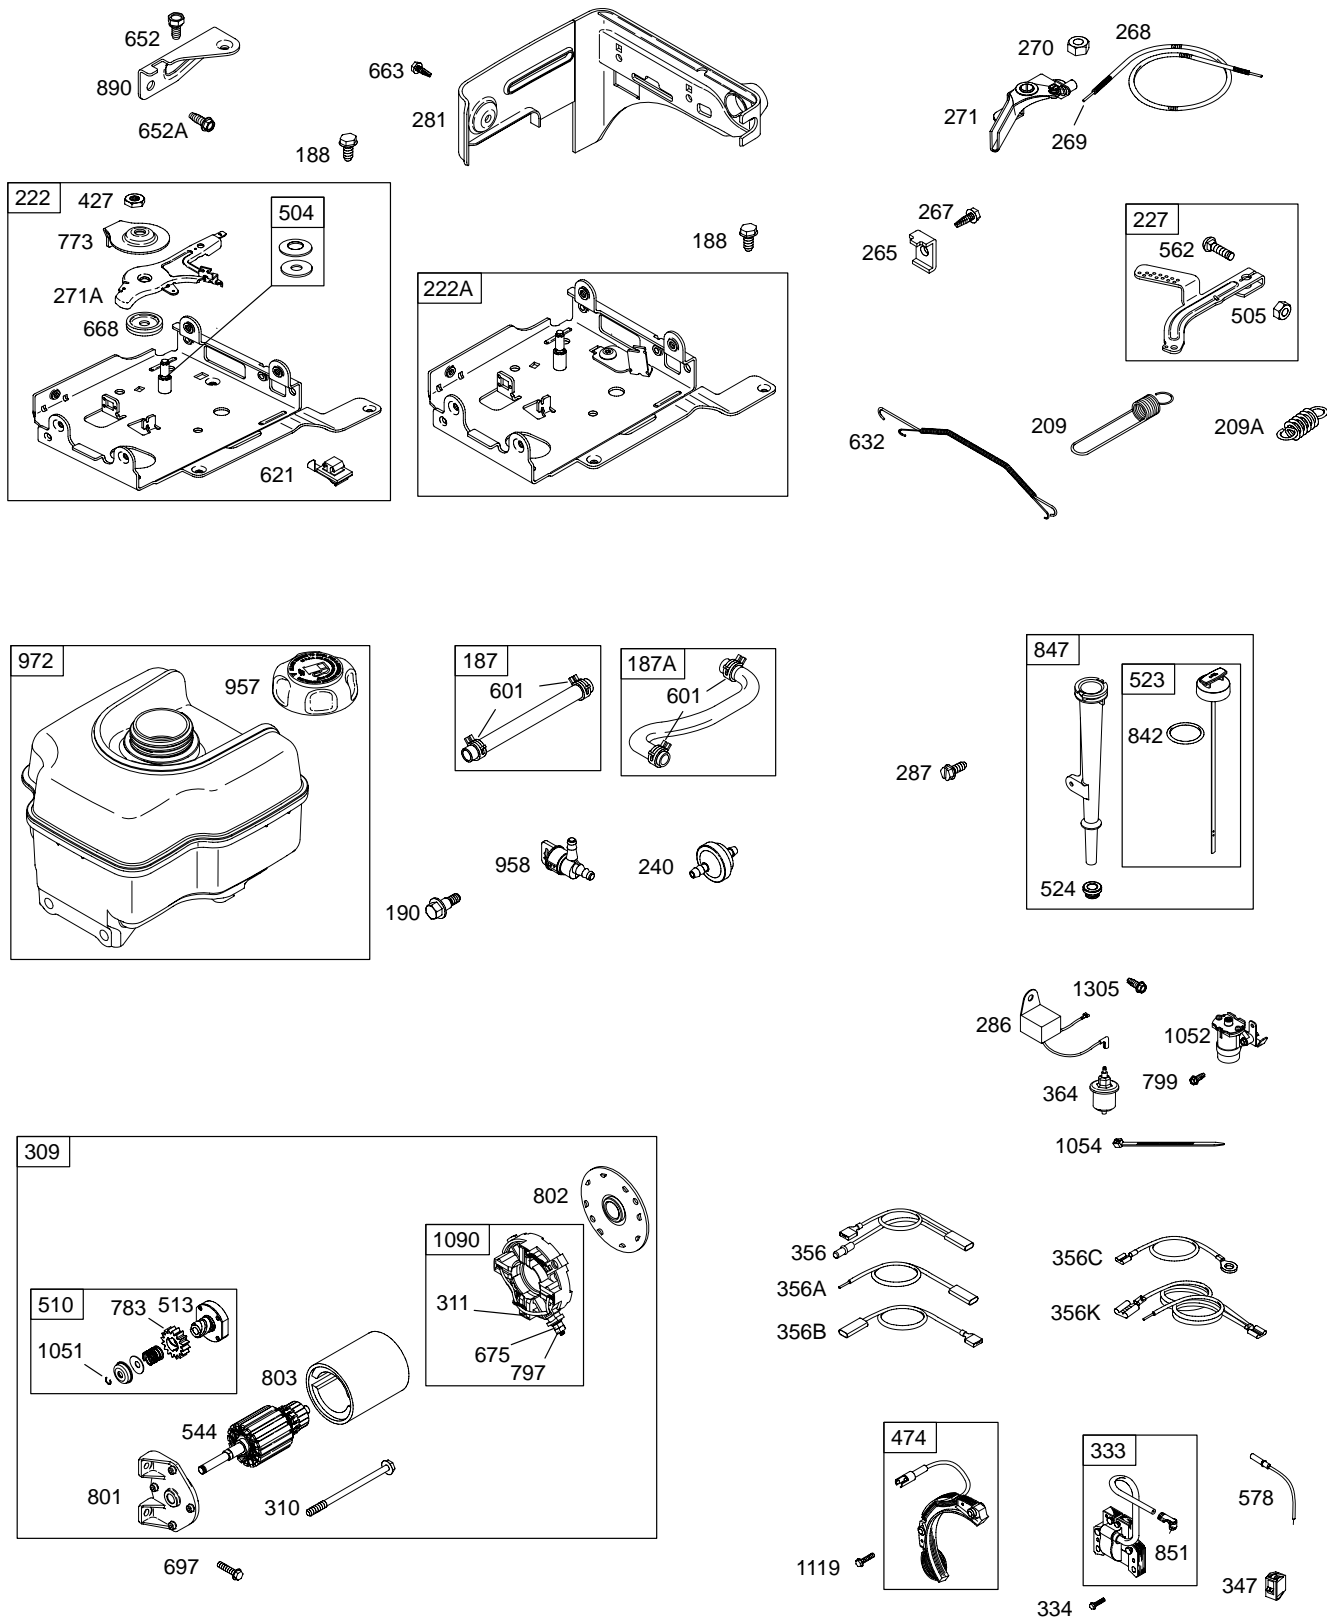


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5720-5 Assemblies include all parts shown in frames. 08/17/2005

127300

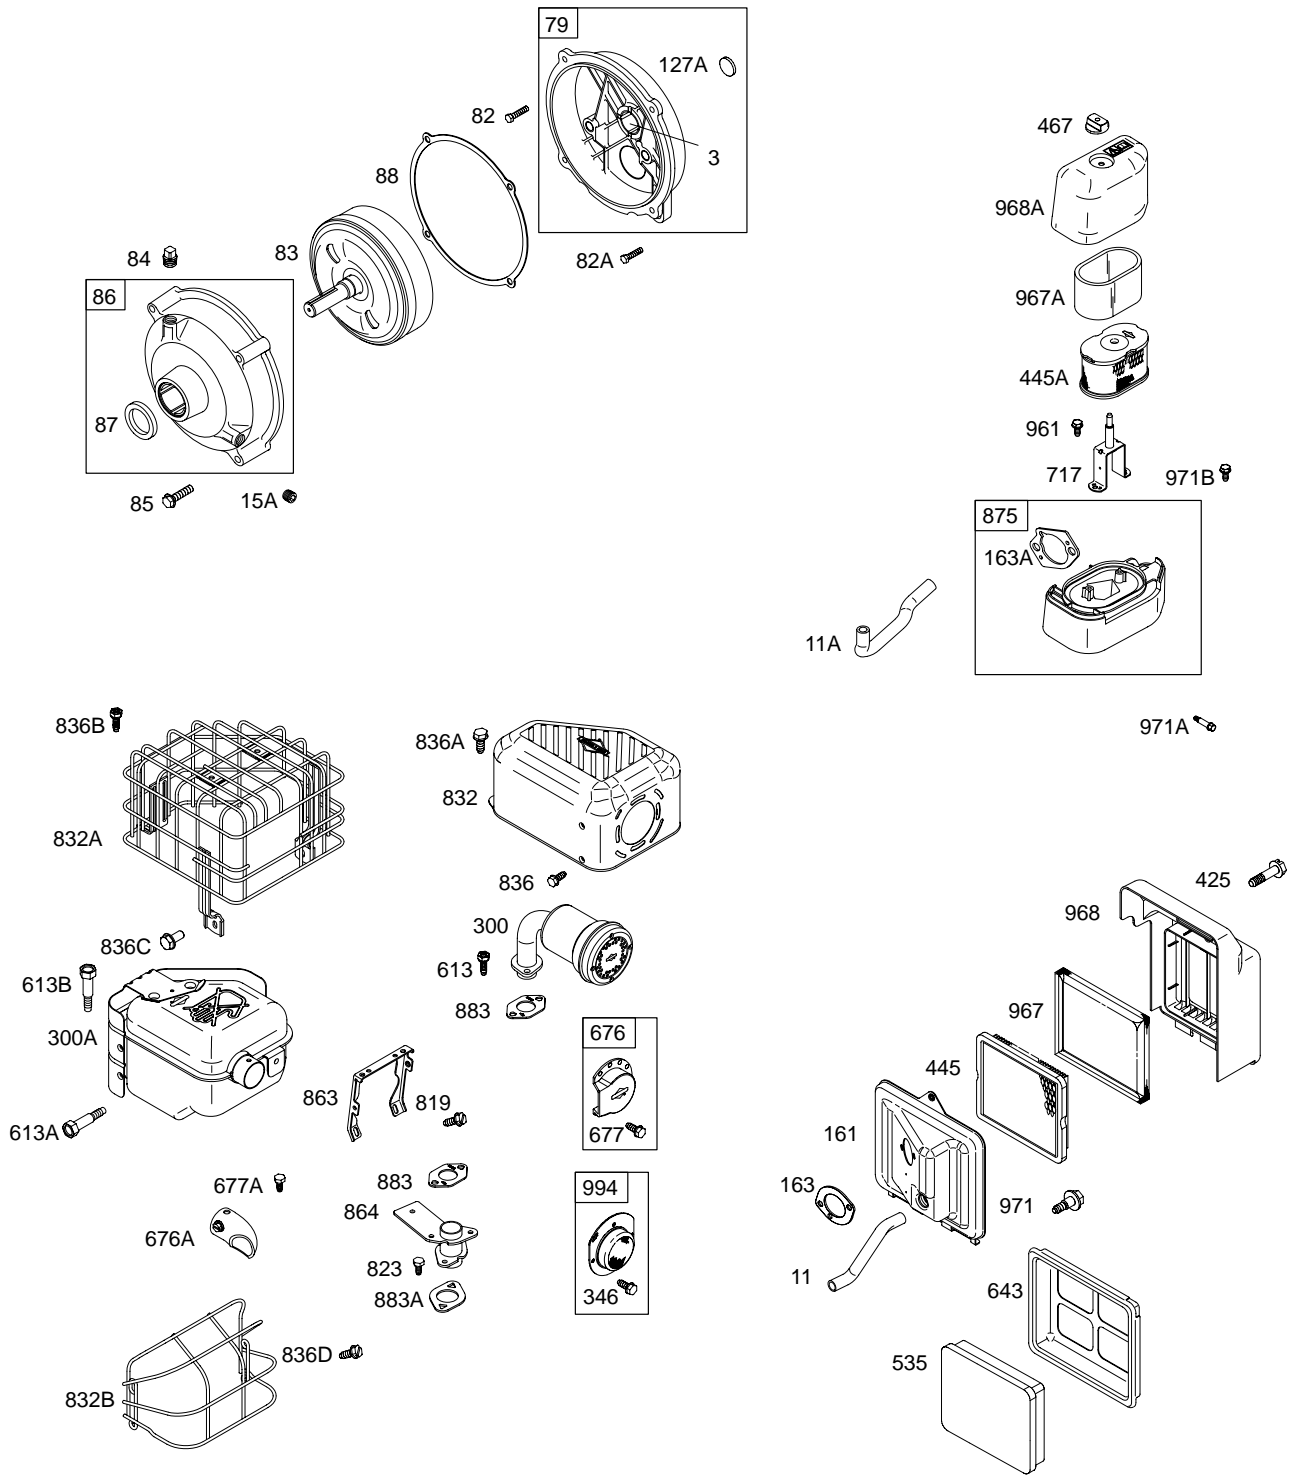

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5720-6 Assemblies include all parts shown in frames. 08/17/2005

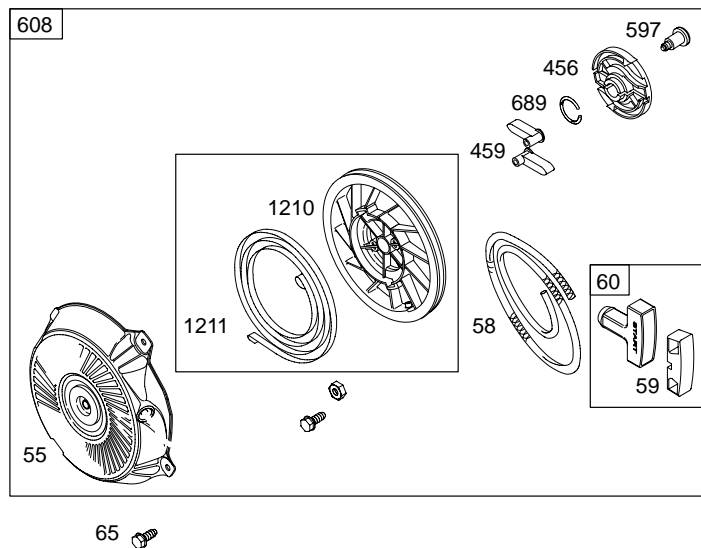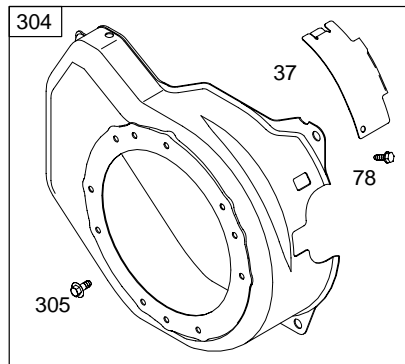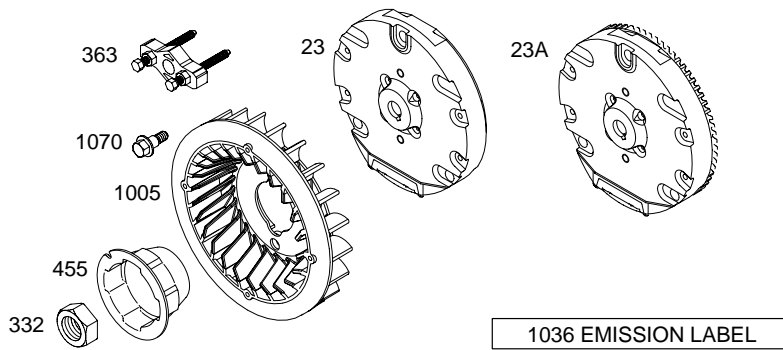

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5720-7 Assemblies include all parts shown in frames. 08/17/2005

127300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly ———— Note ———— 699490 Cylinder– Assembly Used on Type No(s). 0116.	17	692517	Bearing–Ball	26	791969	Ring Set (Standard) (Used After Code Date 05030800).
2	399269	Kit–Bushing/Seal (Magneto Side)	18	699804	Cover–Crankcase ———— Note ———— 699696 Cover– Crankcase Used on Type No(s). 0112.			———— Note ———— 499631 Ring Set (Standard) (Used Before Code Date 05030900).
3	★299819	Seal–Oil (Magneto Side)	18A	699672	Cover–Crankcase			791324 Ring Set (.020" Oversize) (Used After Code Date 05030800).
5	699486	Head–Cylinder	18B	699761	Cover–Crankcase			692786 Ring Set (.020" Oversize) (Used Before Code Date 05030900).
7	★∅698210	Gasket–Cylinder Head	20	★692550	Seal–Oil (PTO Side)	27	691866	Lock–Piston Pin
11	692600	Tube–Breather (Flat Panel Air Cleaner)	20A	★694171	Seal–Oil (PTO Side)	28	499423	Pin–Piston
11A	693647	Tube–Breather (High Mount Air Cleaner)	21	281658	Cap–Oil Fill	29	690124	Rod–Connecting
12	★699485	Gasket–Crankcase	22	699478	Screw (Crankcase Cover/ Sump)	30	692562	Dipper–Connecting Rod
13	699482	Screw (Cylinder Head)	23	699488	Flywheel	32	691664	Screw (Connecting Rod)
15	691686	Plug–Oil Drain (Square Head)	23A	699514	Flywheel Used on Type No(s). 0126, 0169.	32A	695759	Screw (Connecting Rod)
15A	691682	Plug–Oil Drain (Flush)	24	222698	Key–Flywheel	33	499642	Valve–Exhaust
16	699443	Crankshaft ———— Note ———— 699451 Crankshaft Used on Type No(s). 0111, 0126, 0131, 0154, 0171, 0173. 699442 Crankshaft Used on Type No(s). 0138, 0169, 0170. 699441 Crankshaft Used on Type No(s). 0116, 0141, 0161. 699444 Crankshaft Used on Type No(s). 0049, 0134, 0139, 0152, 0153, 0163. 699445 Crankshaft Used on Type No(s). 0112, 0145. 699452 Crankshaft Used on Type No(s). 0113.	25	792004	Piston Assembly (Standard) (Used After Code Date 05030800).	34	499641	Valve–Intake
					———— Note ———— 499627 Piston Assembly (Standard) (Used Before Code Date 05030900). 791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030800). 692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030900).	35	691304	Spring–Valve (Intake)
						36	691304	Spring–Valve (Exhaust)
						37	699661	Guard–Flywheel
						40	692194	Retainer–Valve
						45	690977	Tappet–Valve
						46	693404	Camshaft
						51★◆∅	692555	Gasket–Intake
						55	691422	Housing–Rewind Starter
						58	693389	Rope–Starter (Cut to Required Length)
						59	490653	Grip–Insert
						60	490652	Grip–Starter Rope (2 Piece)
						65	699228	Screw (Rewind Starter)

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720–8

Assemblies include all parts shown in frames.

08/17/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
78	699205	Screw (Flywheel Guard)	121	696998	Kit—Carburetor Overhaul	187	791766	Line—Fuel (Cut to Required Length)
79	694511	Case—Gear Reduction	122	★693749	Spacer—Carburetor			(Used After Code Date 05063000).
82	690369	Screw (Gear Reduction Case)	125	697354	Carburetor			Note _____
82A	790197	Screw (Gear Reduction Case)			698860 Carburetor Used on Type No(s). 0169, 0170.			Note _____
83	690374	Shaft—Auxiliary Drive			698859 Carburetor Used on Type No(s). 0138.			691050 Line—Fuel (Cut to Required Length)
84	691121	Plug—Breather			697028 Carburetor Used on Type No(s). 0112, 0113, 0123, 0134, 0157.			(Used Before Code Date 05070100).
85	692551	Screw (Gear Cover to Gear Reduction)			127 ●691739 Plug—Welch	187A	791867	Line—Fuel (Molded) (Used After Code Date 05063000).
86	690608	Cover—Gear			Note _____			Note _____
87	691582	Seal—Gear Reduction			694468 Plug—Welch Used on Type No(s). 0169, 0170.			692601 Line—Fuel (Molded) (Used Before Code Date 05070100).
88	691600	Gasket—Gear Reduction Cover			127A 691585 Plug—Welch			188 699479 Screw (Control Bracket)
95	691636	Screw (Throttle Valve)			130 691181 Valve—Throttle			190 699220 Screw (Fuel Tank)
97	690024	Shaft—Throttle			130A 691203 Valve—Throttle Used on Type No(s). 0138, 0169, 0170.			192 694543 Adjustor—Rocker Arm
98	398185	Kit—Idle Speed (Carburetor)			133 398187 Float—Carburetor			209 692571 Spring—Governor
104	●691242	Pin—Float Hinge			134 ●398188 Kit—Needle/Seat			Note _____
108	692567	Valve—Choke			137 ●693981 Gasket—Float Bowl			693206 Spring— Governor Used on Type No(s). 0111, 0116, 0125, 0141.
		Note _____			146 690979 Key—Timing			209A 691278 Spring—Governor
		699111 Valve—Choke Used on Type No(s). 0138.			155 ★698214 Plate—Cylinder Head			219 693578 Gear—Governor
109	690023	Shaft—Choke			161 699207 Base—Air Cleaner (Flat Panel Air Cleaner)			220 691724 Washer (Governor Gear)
109A	693628	Shaft—Choke			Note _____			222 699589 Bracket—Control
117	697355	Jet—Main (Standard)			699504 Base—Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 0169, 0170.			222A 699493 Bracket—Control
		Note _____			163★●696024 Gasket—Air Cleaner (Flat Panel Air Cleaner)			Note _____
		498976 Jet—Main (Standard) Used on Type No(s). 0169, 0170.			163A★●696979 Gasket—Air Cleaner (High Mount Air Cleaner)			699590 Bracket— Control Used on Type No(s). 0138.
		498975 Jet—Main (Standard) Used on Type No(s). 0138.			170 699818 Stud (Crankcase Cover)			227 692573 Lever—Governor Control
118	494870	Jet—Main (High Altitude)			186 692317 Connector—Hose			238 691300 Valve—Cap
		Note _____						240 298090 Filter—Fuel
		694975 Jet—Main (High Altitude) Used on Type No(s). 0169, 0170.						265 691024 Clamp—Casing
		Note _____						
		497466 Jet—Main (High Altitude) Used on Type No(s). 0138.						

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

∅ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

127300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
267	699492	Screw (Casing Clamp)	356	693651	Wire-Stop	562	691119	Bolt (Governor Control Lever)
268	691025	Casing-Control Wire (72" Long) (Cut to Required Length)	356A	692390	Wire-Stop	578	692306	Wire Assembly
269	691026	Wire-Control (78" Long) (Cut to Required Length)	356B	692602	Wire-Stop	597	691696	Screw (Pawl Friction Plate)
270	691027	Nut (Control Wire Casing)	356C	695630	Wire-Stop	601	95162	Clamp-Hose
271	691028	Lever-Control	356K	791765	Wire-Stop	608	693394	Starter-Rewind
271A	694256	Lever-Control	358	699638	Gasket Set-Engine	613	699209	Screw (Muffler)
276	●271716	Washer-Sealing	363	19069	Puller-Flywheel	613A	699230	Screw (Muffler)
281	699639	Panel-Control	364	695693	Terminal-Oil Plug	613B	697812	Screw (Muffler)
286	698611	Module-Oil Sensor	365	699484	Screw (Carburetor)	615	692576	Retainer-Governor Shaft
287	699629	Screw (Dipstick Tube)	383	19374	Wrench-Spark Plug	616	692547	Crank-Governor
300	693593	Muffler	415	693463	Plug	619	699230	Screw (Cylinder Head Plate)
300A	699231	Muffler	425	699208	Screw (Air Cleaner Cover)	621	692310	Switch-Stop
304	699598	Housing-Blower	427	694255	Nut (Control Bracket)	632	693408	Spring/Link- Mechanical Governor
305	699480	Screw (Blower Housing)	445	491588	Filter-Air Cleaner Cartridge (Flat Panel)	633	●●693867	Seal-Choke/Throttle Shaft
306	693610	Shield-Cylinder	445A	697029	Filter-Air Cleaner Cartridge (High Mount)	633A	●●691321	Seal-Choke/Throttle Shaft
307	699483	Screw (Cylinder Shield)	455	692591	Cup-Flywheel	635	692076	Boot-Spark Plug
309	694504	Motor-Starter	456	692299	Plate-Pawl Friction	635A	692927	Boot-Spark Plug
310	690323	Screw (Starter Motor)	459	281505	Pawl-Ratchet	643	696264	Retainer-Air Filter
311	497608	Brush Set	467	691668	Knob-Air Cleaner	652	699755	Screw (Support Bracket)
332	699359	Nut (Flywheel)	474	694457	Alternator Used on Type No(s). 0169.	652A	699230	Screw (Support Bracket)
333	695711	Armature-Magneto	Note			663	699206	Screw (Control Panel)
334	699477	Screw (Magneto Armature)	695730 Alternator Used on Type No(s). 0126.			668	694257	Spacer
337	491055	Plug-Spark (Resistor)	504	694254	Washer Set-Friction	675	691261	Washer (Brush Retainer)
		Note	505	691251	Nut (Governor Control Lever)	676	393757	Deflector-Muffler
		691043 Plug-Spark (EMS)	510	499308	Drive-Starter	676A	697816	Deflector-Muffler
346	690661	Screw (Spark Arrester)	513	692024	Drive-Clutch	677	690661	Screw (Muffler Deflector)
347	697854	Switch-Rocker	523	693618	Dipstick	677A	699776	Screw (Muffler Deflector)
		Note	524	281370	Seal-Dipstick Tube	689	691855	Spring-Friction
		698338 Switch-Rocker Used on Type No(s). 0122, 0139, 0154, 0156, 0171.	524	281370	Seal-Dipstick Tube	692	690572	Spring-Detent
			544	692966	Armature-Start			
			535	696263	Filter-Air Cleaner Foam			
			552	692346	Bushing-Governor Crank			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
697	790537	Screw (Starter Motor) (Used After Code Date 04110800).	842	691031	Seal-O Ring (Dipstick Tube)	977	697001	Gasket Set-Carburetor
		Note	847	693617	Dipstick/Tube Assembly	993	Ø694088	Gasket-Cylinder Head Plate
		699773 Screw (Starter Motor) (Used Before Code Date 04110900).	851	493880	Terminal-Spark Plug	994	399541	Arrester-Spark
717	693462	Bracket-Air Cleaner	863	699229	Bracket-Muffler	1005	692592	Fan-Flywheel
718	690959	Pin-Locating	864	699232	Adapter-Muffler	1019	694852	Kit-Label
727	698039	Cover-Starter Drive	868	★Ø692044	Seal-Valve	1022	★Ø691890	Gasket-Rocker Cover
732	699200	Screw (Starter Drive Cover)	875	697030	Base-Air Cleaner (High Mount)	1023	499924	Cover-Rocker Arm
741	695087	Gear-Timing	883	★691893	Gasket-Exhaust	1026	790287	Rod-Push
742	692564	Retainer-E Ring	883A	★692237	Gasket-Exhaust	1029	691230	Arm-Rocker
746	692566	Gear-Idler	890	790203	Bracket-Support	1034	691343	Guide-Push Rod
773	694258	Retainer	914	699481	Screw (Rocker Cover) (Bottom)	1036	790634	Label-Emission (Used After Code Date 04063000).
783	692353	Gear-Pinion	914A	692557	Screw (Rocker Cover) (Top)			Note
797	691029	Nut (Brush Retainer)	914B	697551	Screw (Rocker Cover) (Center)			699946 Label- Emission (Used Before Code Date 04070100 and After Code Date 03093000).
799	699202	Screw (Oil Sensor)	957	694261	Cap-Fuel Tank			697004 Label- Emission (Used Before Code Date 03100100).
801	694482	Cap-Drive	958	698180	Valve-Fuel Shut Off	1051	691265	Ring-Retaining
802	691286	Cap-End	961	698304	Screw (Air Cleaner Bracket)	1052	790141	Sensor-Oil
803	693757	Housing-Starter	967	493537	Filter-Pre Cleaner (Flat Panel)	1054	280275	Cable-Tie
819	699233	Screw (Muffler Bracket)	967A	273356	Filter-Pre Cleaner (High Mount)	1058	276355	Owner's Manual
823	699209	Screw (Muffler Adapter)	968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)	1070	699201	Screw (Flywheel Fan)
830	694544	Stud-Rocker Arm	968A	693460	Cover-Air Cleaner (High Mount)	1090	691293	Retainer-Brush
832	693583	Guard-Muffler	971	690370	Screw (Air Cleaner Base)	1095	698215	Gasket Set-Valve
832A	697818	Guard-Muffler	971A	690349	Screw (Air Cleaner Base)	1119	699772	Screw (Alternator)
832B	696516	Guard-Muffler	971B	699629	Screw (Air Cleaner Base)	1210	498144	Pulley/Spring Assembly (Pulley)
836	699203	Screw (Muffler Guard)	972	694260	Tank-Fuel	1211	498144	Pulley/Spring Assembly (Spring)
836A	699632	Screw (Muffler Guard)	975	493640	Bowl-Float	1305	699691	Screw (Oil Sensor Module)
836B	699209	Screw (Muffler Guard)				1330	272147	Repair Manual
836C	699234	Screw (Muffler Guard)						
836D	699204	Screw (Muffler Guard)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.