



Illustrated Parts List

Model Series

124300

TYPE NUMBERS
0033 through 0178.

TABLE OF CONTENTS

- Air Cleaner** 5
- Blower Housing** 6
- Camshaft** 2
- Carburetor** 4
- Controls** 5
- Crankcase Cover** 2
- Crankshaft** 2
- Cylinder** 2
- Cylinder Head** 3
- Exhaust System** 5
- Flywheel** 6
- Fuel Supply** 4
- Governor Spring** 5
- Gear Reduction** 6
- Ignition** 5
- Kits/Gaskets – Carburetor** 4
- Kits/Gaskets – Engine** 2
- Kits/Gaskets – Valve** 3
- Lubrication** 2
- Piston Group** 2
- Rewind Starter** 6

PRINTED IN U.S.A.














COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

124300





1019 LABEL KIT










1058 OWNER'S MANUAL

1330 REPAIR MANUAL

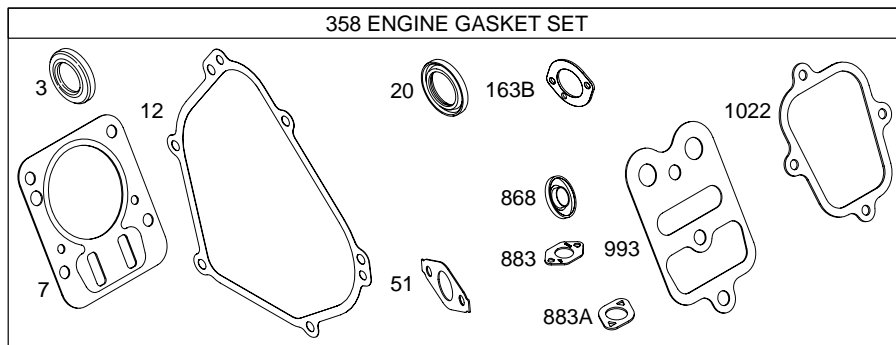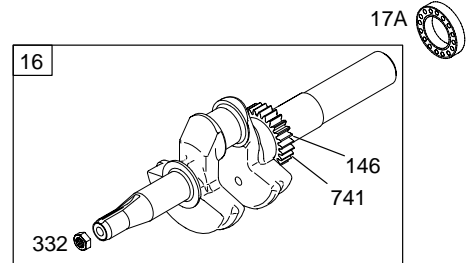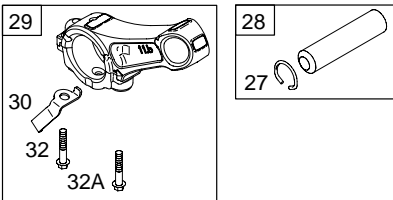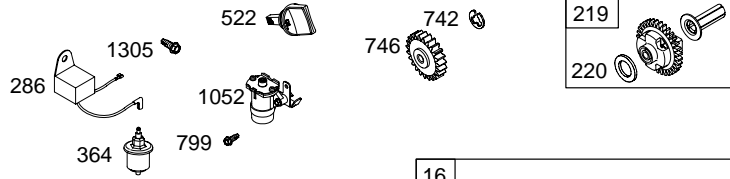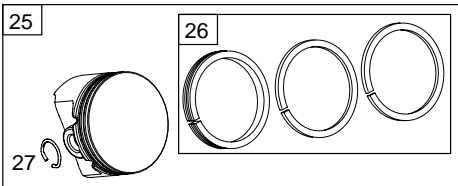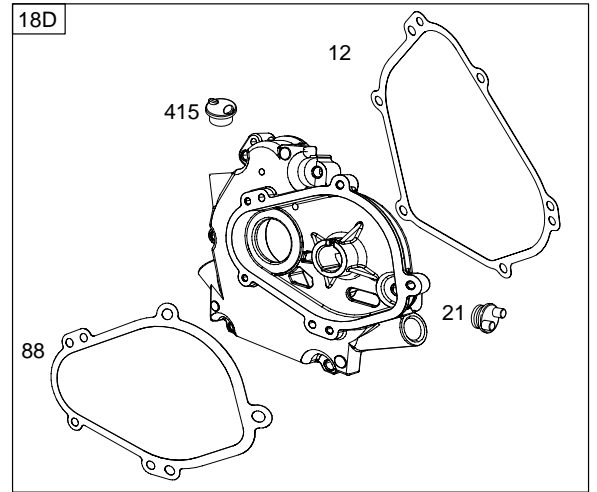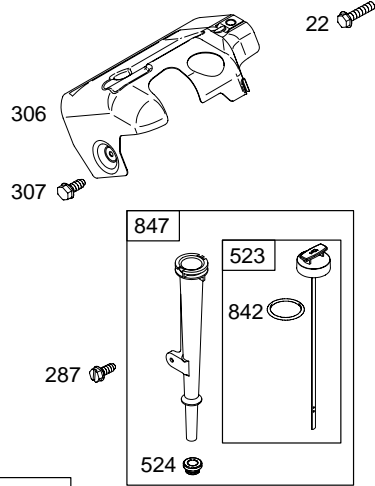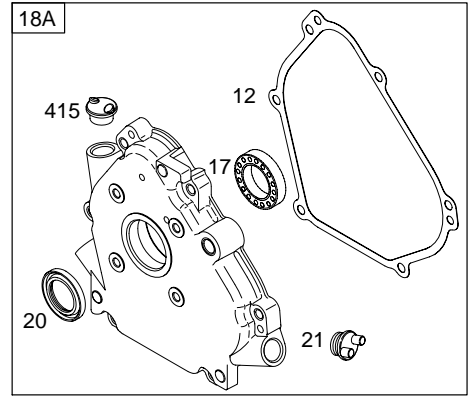
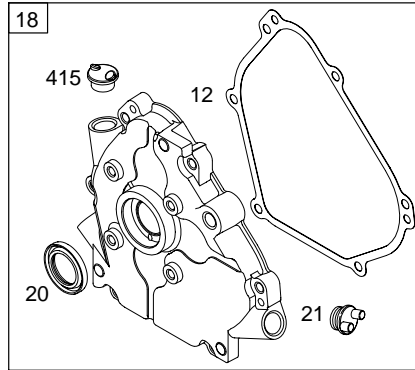
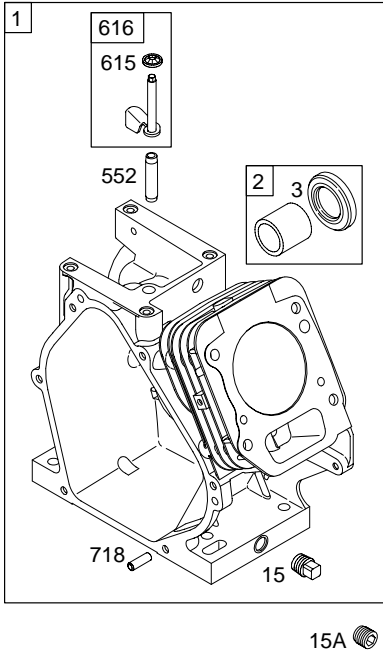


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5732-2 Assemblies include all parts shown in frames. 08/17/2005

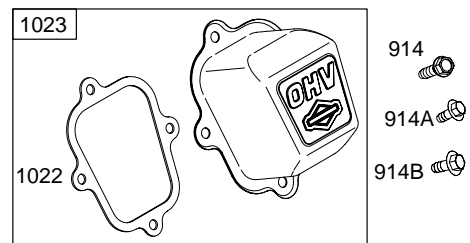
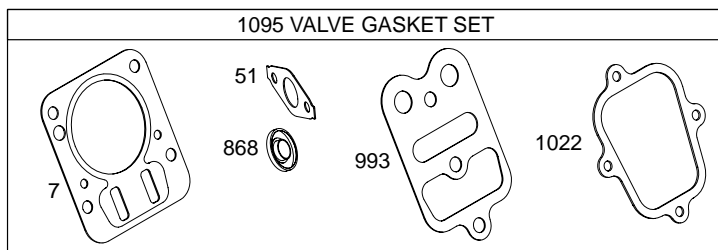
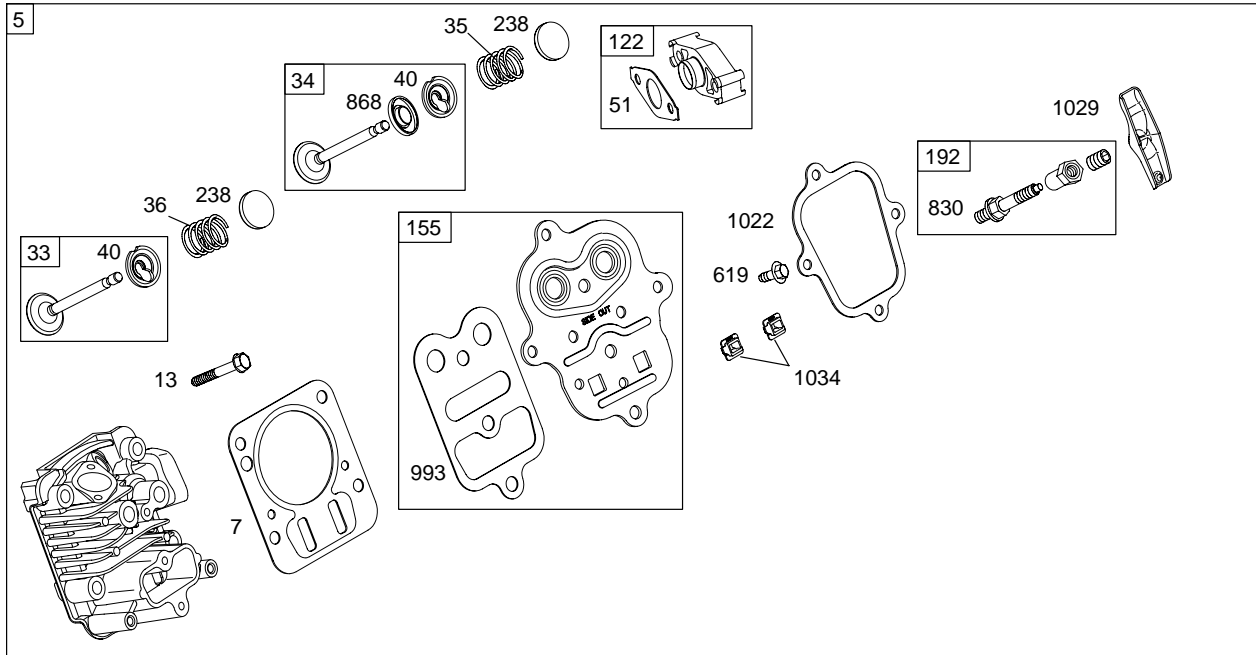
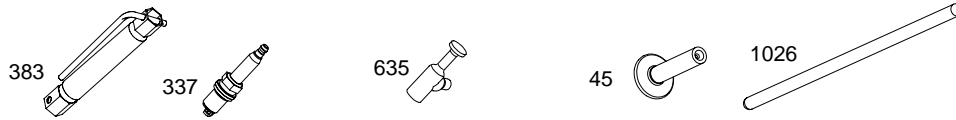


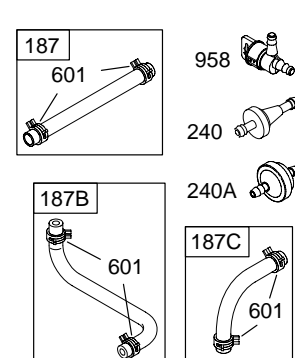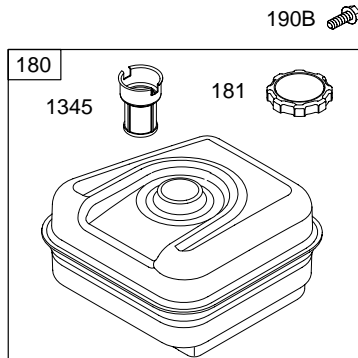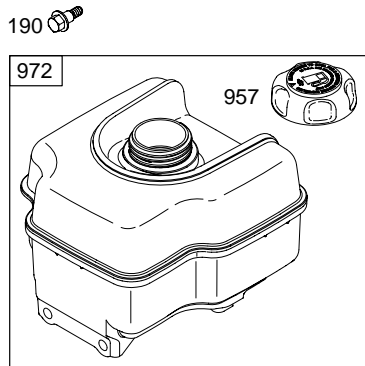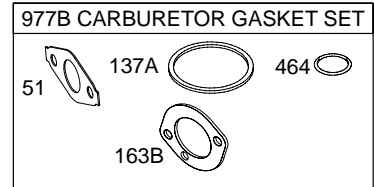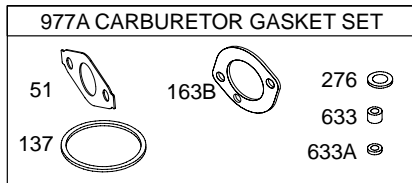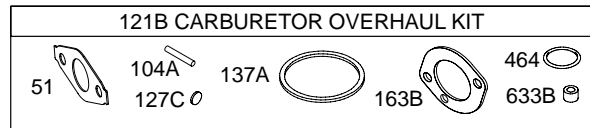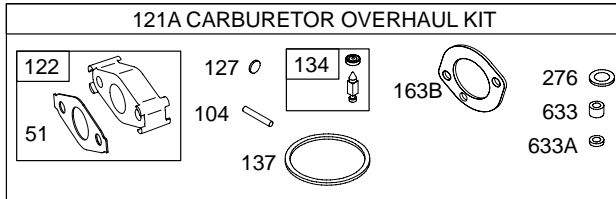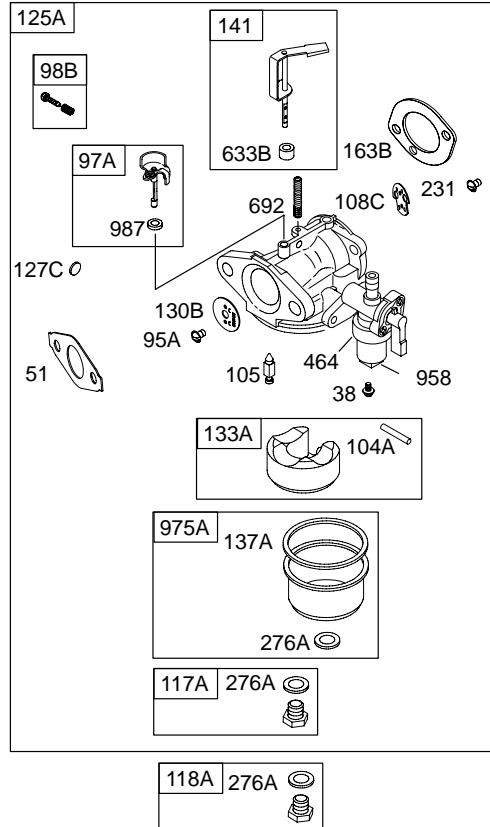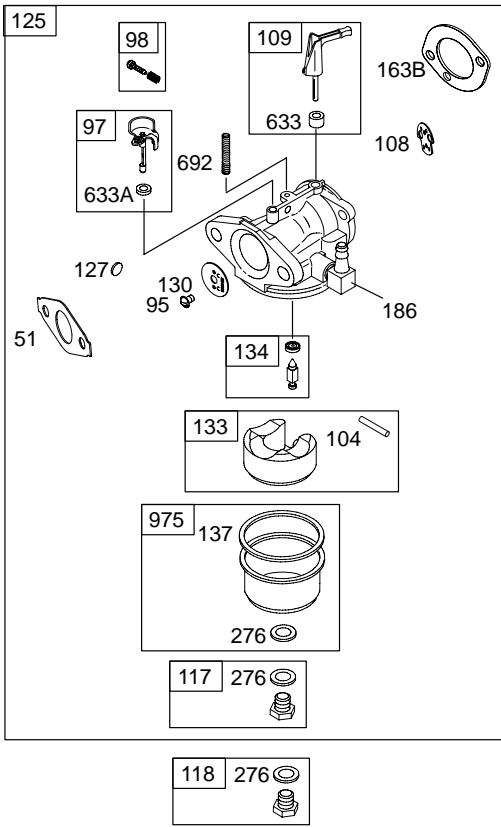


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5732-4 Assemblies include all parts shown in frames. 08/17/2005

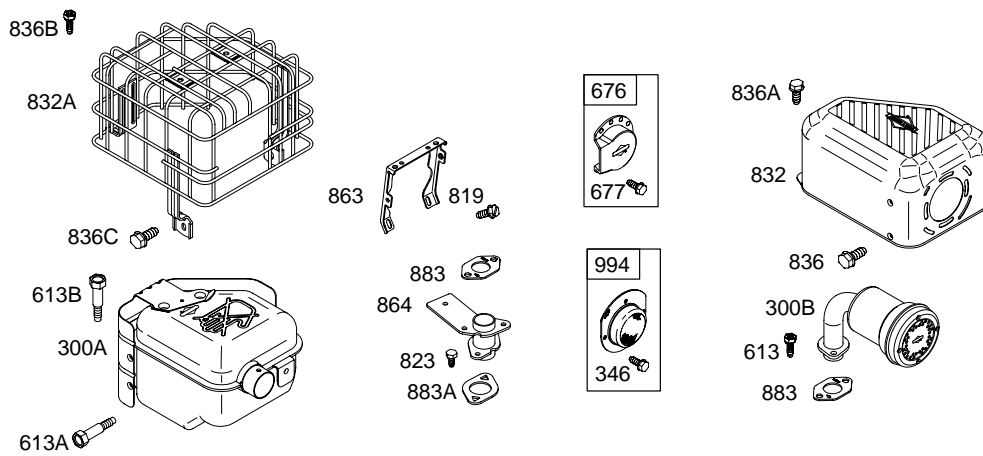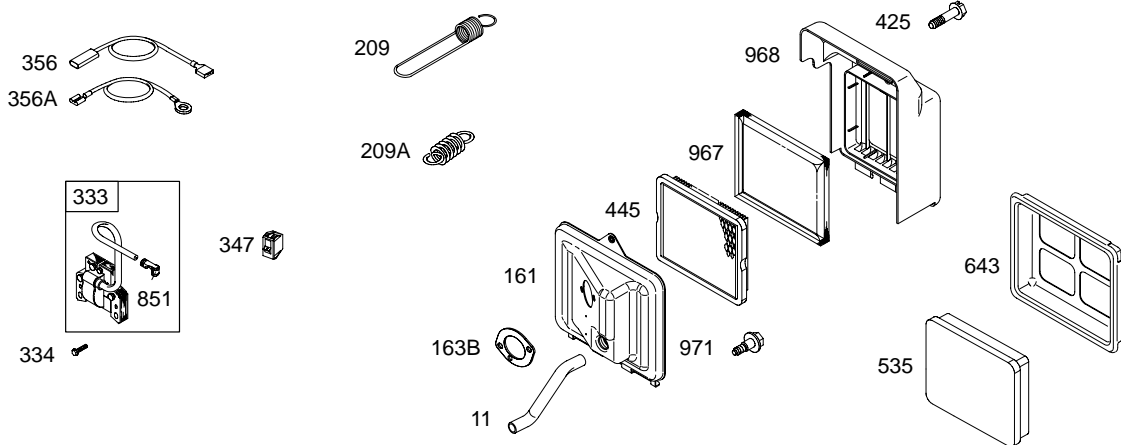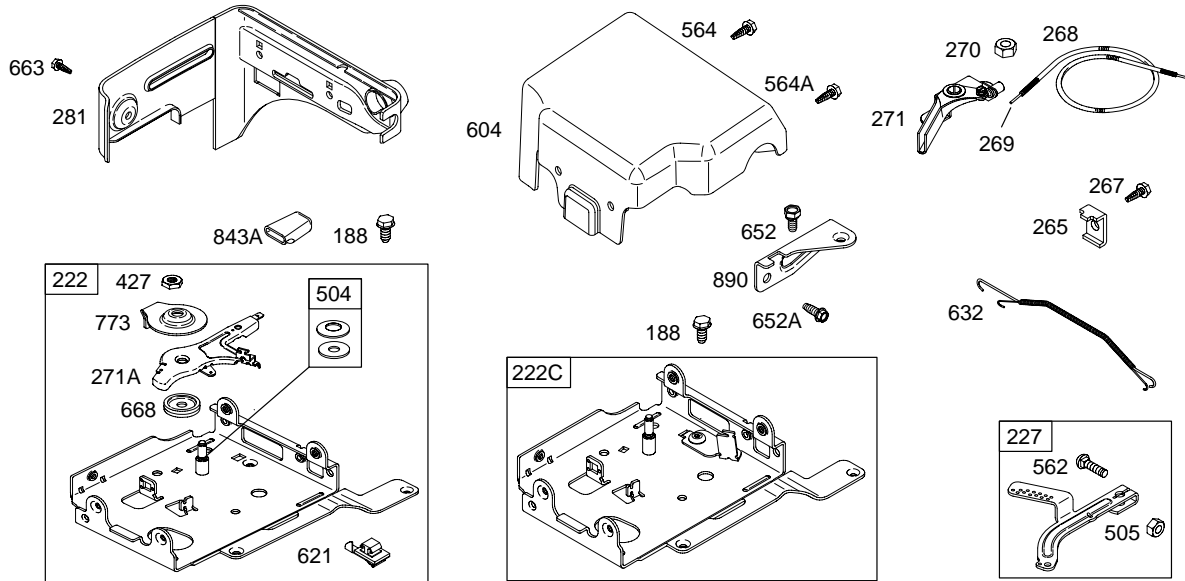

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5732-5 Assemblies include all parts shown in frames. 08/17/2005

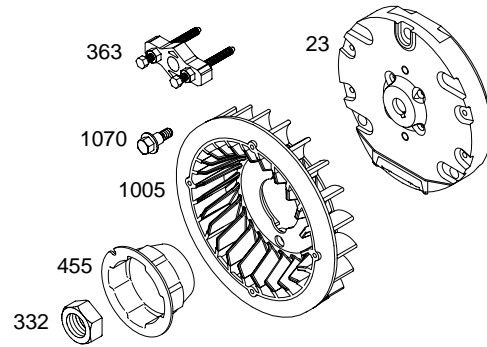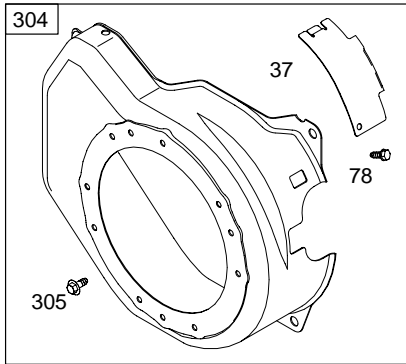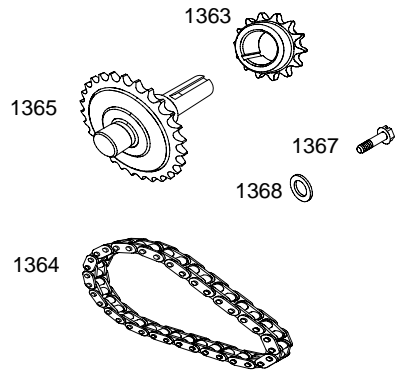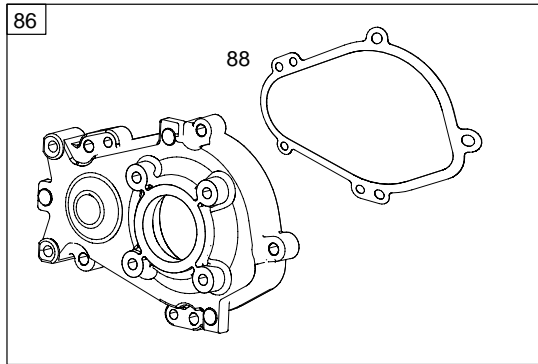

1036 EMISSION LABEL

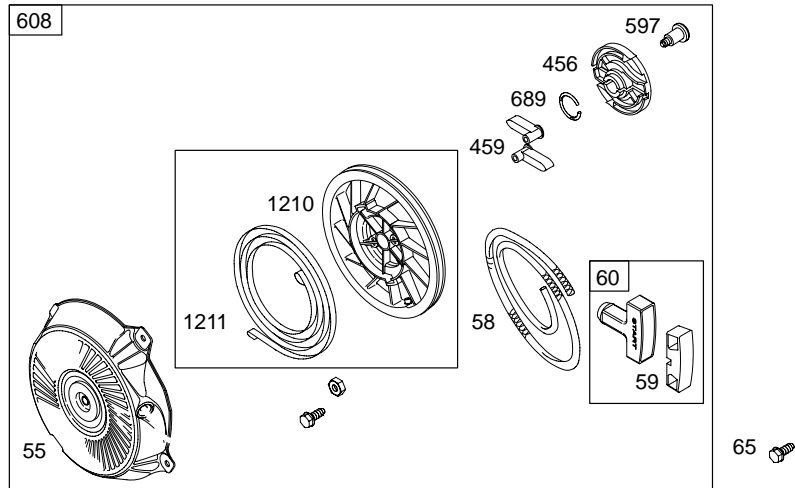

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699490	Cylinder Assembly	17	692517	Bearing-Ball	26	791969	Ring Set
2	399269	Kit-Bushing/Seal (Magneto Side)	17A	690824	Bearing-Ball			(Standard)
3	★299819	Seal-Oil (Magneto Side)	18	790337	Cover-Crankcase Used on Type No(s). 0152, 0153, 0161, 0170, 0172, 0173, 0174, 0175, 0176.			(Used After Code Date 05030800).
5	699486	Head-Cylinder	18A	699672	Cover-Crankcase Used on Type No(s). 0033, 0125, 0126, 0150, 0158, 0163, 0164, 0171, 0178.			———— Note ——— 499631 Ring Set (Standard) (Used Before Code Date 05030900).
7	★∅698210	Gasket-Cylinder Head	18D	790330	Cover-Crankcase Used on Type No(s). 0156, 0157, 0165.			791324 Ring Set (.020" Oversize) (Used After Code Date 05030800).
11	812208	Tube-Breather (Flat Panel Air Cleaner)	20	★692550	Seal-Oil (PTO Side)			692786 Ring Set (.020" Oversize) (Used Before Code Date 05030900).
		———— Note ——— 692600 Tube-Breather Used on Type No(s). 0125, 0126, 0158, 0171.	21	281658	Cap-Oil Fill	27	691866	Lock-Piston Pin
12	★699485	Gasket-Crankcase	22	699478	Screw (Crankcase Cover/ Sump)	28	499423	Pin-Piston
13	699482	Screw (Cylinder Head)	23	699488	Flywheel	29	690124	Rod-Connecting
15	691686	Plug-Oil Drain (Square Head)	24	222698	Key-Flywheel	30	692562	Dipper-Connecting Rod
15A	691682	Plug-Oil Drain (Flush)	25	792004	Piston Assembly (Standard) (Used After Code Date 05030800).	32	691664	Screw (Connecting Rod)
16	699835	Crankshaft			———— Note ——— 499627 Piston Assembly (Standard) (Used Before Code Date 05030900).	32A	695759	Screw (Connecting Rod)
		———— Note ——— 699443 Crankshaft Used on Type No(s). 0150, 0158, 0161, 0163, 0164, 0171, 0174. 790329 Crankshaft Used on Type No(s). 0156, 0157, 0165. 698879 Crankshaft Used on Type No(s). 0172, 0173, 0176. 696259 Crankshaft Used on Type No(s). 0175. 699441 Crankshaft Used on Type No(s). 0125, 0126. 699442 Crankshaft Used on Type No(s). 0033, 0178.			791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030800). 692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030900).	33	499642	Valve-Exhaust
						34	499641	Valve-Intake
						35	691304	Spring-Valve (Intake)
						36	691304	Spring-Valve (Exhaust)
						37	699661	Guard-Flywheel
						38	698557	Screw (Shut Off Valve)
						40	692194	Retainer-Valve
						45	690977	Tappet-Valve
						46	693404	Camshaft
						46A	696813	Camshaft
						51★◆∅692555	Gasket-Intake (2 Required)	

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

124300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691422	Housing–Rewind Starter	121A	696998	Kit–Carburetor Overhaul	187	791766	Line–Fuel (Cut to Required Length)
58	693389	Rope–Starter (Cut to Required Length)	121B	698567	Kit–Carburetor Overhaul			(Used After Code Date 05063000).
59	490653	Grip–Insert	122	★693749	Spacer–Carburetor			Note
60	490652	Grip–Starter Rope (2 Piece)	125	698474	Carburetor Used on Type No(s). 0125, 0126, 0171.			691050 Line–Fuel (Cut to Required Length)
65	699228	Screw (Rewind Starter)	125A	698558	Carburetor			(Used Before Code Date 05070100).
78	699205	Screw (Flywheel Guard)			Note	187B	791874	Line–Fuel (Molded)
86	790332	Cover–Gear			698535 Carburetor Used on Type No(s). 0152, 0156, 0175, 0176.			(Used After Code Date 05063000).
88	790333	Gasket–Gear Reduction Cover	127	●691739	Plug–Welch			Note
95	691636	Screw (Throttle Valve)	127C	●690727	Plug–Welch			693401 Line–Fuel (Molded)
95A	698544	Screw (Throttle Valve)	130	691181	Valve–Throttle			(Used Before Code Date 05070100).
97	690024	Shaft–Throttle	130B	698543	Valve–Throttle			
97A	698542	Shaft–Throttle	133	398187	Float–Carburetor			
98	398185	Kit–Idle Speed (Carburetor)	133A	698539	Float–Carburetor	187C	791866	Line–Fuel (Molded)
98B	698551	Kit–Idle Speed (Carburetor)	134	●398188	Kit–Needle/Seat			(Used After Code Date 05063000).
104	●691242	Pin–Float Hinge	137	●●693981	Gasket–Float Bowl			Note
104A	●698536	Pin–Float Hinge	137A	●●698538	Gasket–Float Bowl			694486 Line–Fuel (Molded)
105	698537	Valve–Float Needle	141	698545	Kit–Choke Shaft			(Used Before Code Date 05070100).
108	692567	Valve–Choke	146	690979	Key–Timing			
108C	698546	Valve–Choke			Note			188 699479 Screw (Control Bracket)
109	690023	Shaft–Choke			790943 Key–Timing Used on Type No(s). 0156, 0157, 0165.			190 699220 Screw (Fuel Tank)
117	690048	Jet–Main (Standard)	155	★698214	Plate–Cylinder Head			190B 699839 Screw (Fuel Tank)
117A	698666	Jet–Main (Standard)	161	699207	Base–Air Cleaner (Metal) (Flat Panel Air Cleaner)			192 694543 Adjuster–Rocker Arm
		Note			163B★●●696024 Gasket–Air Cleaner (Flat Panel Air Cleaner)			209 692571 Spring–Governor
		698670 Jet–Main (Standard)						Note
		Used on Type No(s). 0152, 0156, 0175, 0176.	180	699838	Tank–Fuel (Metal)			693206 Spring–Governor
118	498976	Jet–Main (High Altitude)	181	699840	Cap–Fuel Tank (Metal)			Used on Type No(s). 0033, 0125, 0126, 0178.
118A	698552	Jet–Main (High Altitude)	186	692317	Connector–Hose	209A	691278	Spring–Governor

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5732–8

Assemblies include all parts shown in frames.

08/17/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
219	693578	Gear—Governor	286	698611	Module—Oil Sensor	445	491588	Filter—Air Cleaner Cartridge (Flat Panel)
220	691724	Washer (Governor Gear)	287	699629	Screw (Dipstick Tube)	455	692591	Cup—Flywheel
222	699589	Bracket—Control	300A	699231	Muffler	456	692299	Plate—Pawl Friction
222C	699493	Bracket—Control	300B	693593	Muffler	459	281505	Pawl—Ratchet
		Note	304	699598	Housing—Blower	464	◆698550	Seal—O Ring (Fuel Shut Off Valve)
		699590 Bracket—Control	305	699480	Screw (Blower Housing)	504	694254	Washer Set—Friction
		Used on Type No(s). 0033, 0172.	306	693610	Shield—Cylinder	505	691251	Nut (Governor Control Lever)
227	692573	Lever—Governor Control	307	699483	Screw (Cylinder Shield)	522	697689	Plug—Dipstick/Fill
231	690718	Screw (Choke Valve)	332	699359	Nut (Flywheel)	523	693618	Dipstick
238	691300	Valve—Cap	333	695711	Armature—Magneto	524	281370	Seal—Dipstick Tube
240	694485	Filter—Fuel	334	699477	Screw (Magneto Armature)	535	696263	Filter—Air Cleaner Foam
240A	298090	Filter—Fuel	337	491055	Plug—Spark	552	692346	Bushing—Governor Crank
		Note			Note	562	691119	Bolt (Governor Control Lever)
		394358 Filter—Fuel			691043 Plug—Spark	564	699492	Screw (Control Cover)
		Used on Type No(s). 0125, 0126, 0171.			Used on Type No(s). 0125, 0126, 0171, 0172, 0173, 0175, 0176.	564A	699206	Screw (Control Cover)
265	691024	Clamp—Casing	346	690661	Screw (Spark Arrester)	597	691696	Screw (Pawl Friction Plate)
267	699492	Screw (Casing Clamp)	347	698338	Switch—Rocker	601	95162	Clamp—Hose
268	691025	Casing—Control Wire (72" Long) (Cut to Required Length)			Note	604	697326	Cover—Control
269	691026	Wire—Control (78" Long) (Cut to Required Length)			697854 Switch—Rocker	608	693394	Starter—Rewind
270	691027	Nut (Control Wire Casing)			Used on Type No(s). 0125, 0126, 0158, 0170, 0172, 0173, 0174, 0175.	613	699209	Screw (Muffler)
271	691028	Lever—Control	356	692602	Wire—Stop	613A	699230	Screw (Muffler)
271A	694256	Lever—Control	356A	695630	Wire—Stop	613B	697812	Screw (Muffler)
276	◆271716	Washer—Sealing	358	699638	Gasket Set—Engine	615	692576	Retainer—Governor Shaft
276A	◆698540	Washer—Sealing	363	19069	Puller—Flywheel	616	692547	Crank—Governor
281	790261	Panel—Control	364	695693	Terminal—Oil Plug	619	699230	Screw (Cylinder Head Plate)
		Note	365	699484	Screw (Carburetor)	621	692310	Switch—Stop
		699639 Panel—Control	383	19374	Wrench—Spark Plug	632	693408	Spring/Link—Mechanical Governor
		Used on Type No(s). 0033, 0125, 0126, 0150, 0158, 0163, 0164, 0171.	415	693463	Plug			
			425	699208	Screw (Air Cleaner Cover)			
			427	694255	Nut (Control Bracket)			

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

⊘ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

124300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
633	●693867	Seal-Choke/Throttle Shaft	842	691031	Seal-O Ring (Dipstick Tube)	994	399541	Arrester-Spark
633A	●691321	Seal-Choke/Throttle Shaft	843A	695588	Sleeve-Lever	1005	692592	Fan-Flywheel
633B	●690998	Seal-Choke/Throttle Shaft	847	693617	Dipstick/Tube Assembly	1019	694852	Kit-Label
635	692927	Boot-Spark Plug	851	493880	Terminal-Spark Plug	1022	★∅691890	Gasket-Rocker Cover
643	696264	Retainer-Air Filter	863	699229	Bracket-Muffler	1023	499924	Cover-Rocker Arm
652	699755	Screw (Support Bracket)	864	699232	Adapter-Muffler	1026	693517	Rod-Push
652A	699230	Screw (Support Bracket)	868	★∅692044	Seal-Valve	1029	691230	Arm-Rocker
663	699206	Screw (Control Panel)	883	★691893	Gasket-Exhaust	1034	691343	Guide-Push Rod
668	694257	Spacer	883A	★692237	Gasket-Exhaust	1036	790634	Label-Emission (Used After Code Date 04063000).
676	393757	Deflector-Muffler	890	790203	Bracket-Control			Note
677	690661	Screw (Muffler Deflector)	914	699481	Screw (Rocker Cover) (Bottom)			699946 Label-Emission (Used Before Code Date 04070100 and After Code Date 03093000).
689	691855	Spring-Friction	914A	692557	Screw (Rocker Cover) (Top)			699946 Label-Emissions (Used Before Code Date 03102900).
692	690572	Spring-Detent	914B	697551	Screw (Rocker Cover) (Center)			
718	690959	Pin-Locating	957	694261	Cap-Fuel Tank (Plastic)	1052	790141	Sensor-Oil
741	695087	Gear-Timing	958	698549	Valve-Fuel Shut Off (Plastic)	1058	276355	Owner's Manual
742	692564	Retainer-E Ring	967	493537	Filter-Pre Cleaner (Flat Panel)	1070	699201	Screw (Flywheel Fan)
746	692566	Gear-Idler	968	692584	Cover-Air Cleaner (Flat Panel)	1095	698215	Gasket Set-Valve
773	694258	Retainer			Note	1210	498144	Pulley/Spring Assembly (Pulley)
799	699202	Screw (Oil Sensor)			698811 Cover-Air Cleaner (Flat Panel) Used on Type No(s). 0033, 0178.	1211	498144	Pulley/Spring Assembly (Spring)
819	699233	Screw (Muffler Bracket)	971	690370	Screw (Air Cleaner Base To Carburetor)	1305	699691	Screw (Oil Sensor Module)
823	699209	Screw (Muffler Adapter)	972	694260	Tank-Fuel (Plastic)	1330	272147	Repair Manual
830	694544	Stud-Rocker Arm	975	493640	Bowl-Float	1345	699887	Filter-Filler Neck
832	693583	Guard-Muffler	975A	698541	Bowl-Float	1363	790334	Sprocket-Gear Reduction
		Note	977A	697001	Gasket Set-Carburetor	1364	790335	Chain-Gear Reduction
		699841 Guard-Muffler Used on Type No(s). 0152, 0153, 0156, 0157, 0161, 0164, 0165, 0170, 0172, 0174, 0175, 0176.	977B	698568	Gasket Set-Carburetor	1365	790336	Shaft-Output Gear Reduction
832A	697818	Guard-Muffler	987	698556	Seal-Throttle Shaft	1367	690936	Screw (Gear Reduction Sprocket)
836	699203	Screw (Muffler Guard)	993	∅694088	Gasket-Cylinder Head Plate	1368	790338	Washer (Gear Reduction Sprocket)
836A	699632	Screw (Muffler Guard)						
836B	699209	Screw (Muffler Guard)						
836C	699234	Screw (Muffler Guard)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No.1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5732-10

Assemblies include all parts shown in frames.

08/17/2005